

DFDS SAFETY BOOKLET

OPERATIONS FOR STEEL AND PAPER WAREHOUSES.





When arriving at the warehouse, please pay close attention to the local safety rules and safety signs.



Minimum PPE for the warehouse: High visibility clothing and safety footwear.



When working at height or under a crane, a hard hat and work gloves must be worn.



Ear defenders and eye protection for specific tasks.



High visibility clothing should normally comply with EN standard 471 or 20471. This standard has 3 different classes: 1, 2 and 3.

Class 3 is the best. As a minimum, Class 2 high visibility clothing should normally be used.



Always use the walkways when applicable.



Be aware of forklift truck movements.



Always maintain a 2m distance from a forklift truck. Stop operations if this is not the case.




Never stand behind a forklift truck, always stay in clear sight of the driver.



When tallying cargo stand in a safe area where the driver can see you. Before operations start, ensure that the forklift truck driver and tally man have clear instructions as to where the safe area is.



Sound your horn at crossroads in the warehouse to warn other personnel.

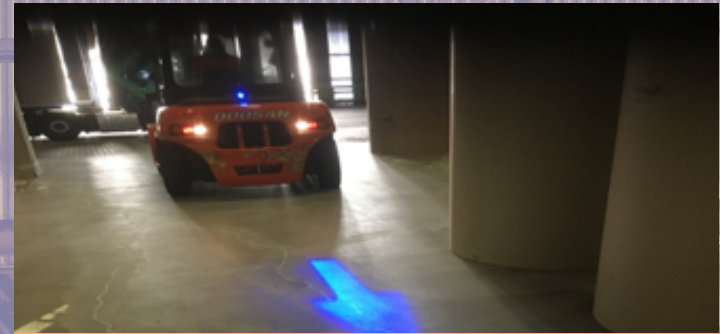

Always travel in reverse when carrying a load.



Make sure the area around you is clear of people and objects. The drivers are looking at the clamp operation.




Vision is restricted, the driver cannot see around corners.



The driver is looking forwards.



The driver is facing the direction of travel.

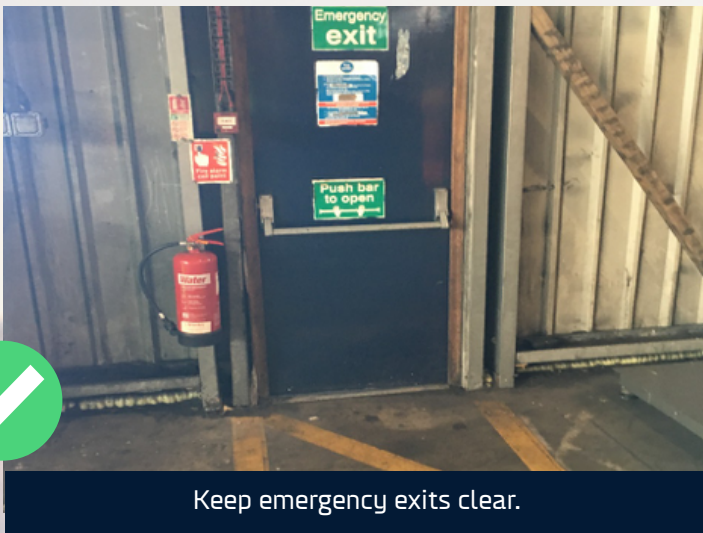

Keep emergency exits clear.



Never place cargo in front of emergency exits.



Be aware of cranes being operated.



Lorry drivers and operatives should always use the safe haven.



The lorry driver must not stay in the cab during loading by crane.



Never stand under a suspended load.
Always stay in clear sight of the crane driver.



Never assume that the crane driver has seen you, **stay clear.**



The crane driver has limited view, please take care.



Loads must be secured before travel, these reels are not strapped down.



Examples of good loads.



Driver to stay in the cab with engine off and handbrake on.



Ensure that the work area is clear, large machines have limited vision and can carry very long loads.



Clean up all spills, do not leave the working area untidy.



Never use your phone, earphones or listen to music while you are working. It distracts and removes your focus.



A full-page background image of an industrial setting. A worker wearing a blue hard hat, a high-visibility yellow and black jacket, and black safety pants with reflective stripes stands on the right side, looking up at a large, rusted metal structure. To the left are large industrial coils wrapped in orange plastic, with the 'ArcelorMittal' logo visible on the wrapping. The scene is lit with warm, industrial lights.

TOGETHER FOR A SAFER WORK ENVIRONMENT

