



SE 2223/3223 Scan Engine



Integration Guide

SE 2223/3223 Scan Engine Integration Guide

70-36636-02

Revision A

January 2002



© 2000-2001 by Symbol Technologies, Inc. All rights reserved.

No part of this publication may be reproduced or used in any form, or by any electrical or mechanical means, without permission in writing from Symbol. This includes electronic or mechanical means, such as photocopying, recording, or information storage and retrieval systems. The material in this manual is subject to change without notice.

The software is provided strictly on an "as is" basis. All software, including firmware, furnished to the user is on a licensed basis. Symbol grants to the user a non-transferable and non-exclusive license to use each software or firmware program delivered hereunder (licensed program). Except as noted below, such license may not be assigned, sublicensed, or otherwise transferred by the user without prior written consent of Symbol. No right to copy a licensed program in whole or in part is granted, except as permitted under copyright law. The user shall not modify, merge, or incorporate any form or portion of a licensed program with other program material, create a derivative work from a licensed program, or use a licensed program in a network without written permission from Symbol. The user agrees to maintain Symbol's copyright notice on the licensed programs delivered hereunder, and to include the same on any authorized copies it makes, in whole or in part. The user agrees not to decompile, disassemble, decode, or reverse engineer any licensed program delivered to the user or any portion thereof.

Symbol reserves the right to make changes to any software or product to improve reliability, function, or design.

Symbol does not assume any product liability arising out of, or in connection with, the application or use of any product, circuit, or application described herein.

No license is granted, either expressly or by implication, estoppel, or otherwise under any Symbol Technologies, Inc., intellectual property rights. An implied license only exists for equipment, circuits, and subsystems contained in Symbol products.

Symbol, is a registered trademark of Symbol Technologies, Inc. Other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are hereby acknowledged.

Symbol Technologies, Inc.

One Symbol Plaza

Holtsville, New York 11742-1300

<http://www.symbol.com>

Patents

This product is covered by one or more of the following U.S. and foreign Patents:

U.S. Patent No. 4,496,831; 4,593,186; 4,603,262; 4,607,156; 4,652,750; 4,673,805; 4,736,095; 4,758,717; 4,760,248; 4,806,742; 4,816,660; 4,845,350; 4,896,026; 4,897,532; 4,923,281; 4,933,538; 4,992,717; 5,015,833; 5,017,765; 5,021,641; 5,029,183; 5,047,617; 5,103,461; 5,113,445; 5,130,520; 5,140,144; 5,142,550; 5,149,950; 5,157,687; 5,168,148; 5,168,149; 5,180,904; 5,216,232; 5,229,591; 5,230,088; 5,235,167; 5,243,655; 5,247,162; 5,250,791; 5,250,792; 5,260,553; 5,262,627; 5,262,628; 5,266,787; 5,278,398; 5,280,162; 5,280,163; 5,280,164; 5,280,498; 5,304,786; 5,304,788; 5,306,900; 5,321,246; 5,324,924; 5,337,361; 5,367,151; 5,373,148; 5,378,882; 5,396,053; 5,396,055; 5,399,846; 5,408,081; 5,410,139; 5,410,140; 5,412,198; 5,418,812; 5,420,411; 5,436,440; 5,444,231; 5,449,891; 5,449,893; 5,468,949; 5,471,042; 5,478,998; 5,479,000; 5,479,002; 5,479,441; 5,504,322; 5,519,577; 5,528,621; 5,532,469; 5,543,610; 5,545,889; 5,552,592; 5,557,093; 5,578,810; 5,581,070; 5,589,679; 5,589,680; 5,608,202; 5,612,531; 5,619,028; 5,627,359; 5,637,852; 5,664,229; 5,668,803; 5,675,139; 5,693,929; 5,698,835; 5,705,800; 5,714,746; 5,723,851; 5,734,152; 5,734,153; 5,742,043; 5,745,794; 5,754,587; 5,762,516; 5,763,863; 5,767,500; 5,789,728; 5,789,731; 5,808,287; 5,811,785; 5,811,787; 5,815,811; 5,821,519; 5,821,520; 5,823,812; 5,828,050; 5,848,064; 5,850,078; 5,861,615; 5,874,720; 5,875,415; 5,900,617; 5,902,989; 5,907,146; 5,912,450; 5,914,478; 5,917,173; 5,920,059; 5,923,025; 5,929,420; 5,945,658; 5,945,659; 5,946,194; 5,959,285; 6,002,918; 6,021,947; 6,031,830; 6,036,098; 6,047,892; 6,050,491; 6,053,413; 6,056,200; 6,065,678; 6,067,297; 6,068,190; 6,082,621; 6,084,528; 6,088,482; 6,092,725; 6,101,483; 6,102,293; 6,104,620; 6,114,712; 6,115,678; 6,119,944; 6,123,265; 6,131,814; 6,138,180; 6,142,379; 6,172,478; 6,176,428; 6,178,426; 6,186,400; 6,188,681; 6,209,788; 6,216,951; 6,220,514; 6,243,447; 6,244,513; 6,247,647; 6,308,061; 6,250,551; 6,295,031; D305,885; D341,584; D344,501; D359,483; D362,453; D363,700; D363,918; D370,478; D383,124; D391,250; D405,077; D406,581; D414,171; D414,172; D418,500; D419,548; D423,468; D424,035; D430,158; D430,159; D431,562; D436,104.

Invention No. 55,358; 62,539; 69,060; 69,187 (Taiwan); No. 1,601,796; 1,907,875; 1,955,269 (Japan); European Patent 367,299; 414,281; 367,300; 367,298; UK 2,072,832; France 81/03938; Italy 1,138,713.

rev. 11/01




Contents

About This Manual

Chapter Descriptionsxi
Notational Conventions	xii
Related Documents	xii
Service Information	xii
Symbol Support Centers	xiii
Warranty	xv
Warranty Coverage and Procedure	xvi
General	xvi

Chapter 1. Getting Started

Overview	1-1
Theory of Operation	1-2
Analog Front End	1-3
Digitizer	1-3
Visible Laser Diode (VLD) Driver	1-3
Single Chip Decoding System (SCDS)	1-3
Decoder	1-5
Power Management	1-5
Serial I/O	1-6
Beeper and Decode LED	1-6
Electrical Interface	1-7
Scanning Patterns	1-7
Raster Scan Pattern	1-7
Semi-omnidirectional Scan Pattern	1-9
Cyclone Omnidirectional Scan Pattern	1-9
Beeper Definitions	1-10
Macro PDF	1-10



Chapter 2. Installation

Mechanical Interface	2-1
Electrical Interface.	2-3
1-D and PDF Decoding.	2-6
Scan Pattern Control: Scan Engine and Decoder Interface.	2-6
Grounding	2-6
Power	2-6
ESD.	2-6
Environment	2-6
Optical	2-7
Positioning the Window	2-7
Avoiding Scratched Windows	2-7
Window Material	2-7
Commercially Available Coatings	2-8
A Word About Coatings	2-9
Mounting	2-10
Location and Positioning	2-10
Installing the SE 2223/3223.	2-12
Accessories	2-13
Software Developer's Kit (SDK).	2-13
SE 2223 Optical Path and Exit Window	2-16
SE 3223 Optical Path and Exit Window	2-17
Interface Specifications.	2-18
Flex Cable	2-20
Incoming Test Procedure (Vcc = 5V).	2-20

Chapter 3. SE 2223 Specifications

Technical Specifications	3-1
SE 2223 Scanning Specifications	3-4
SE 2223 1-D Decode Zone	3-4
SE 2223 PDF Decode Zone	3-5
Pitch, Skew, and Specular Dead Zone (Horizontal Spread of Pattern)	3-8
Decode Zone	3-9

Chapter 4. SE 2223VHD Specifications

Technical Specifications	4-1
SE 2223VHD Scanning Specifications	4-4
SE 2223VHD 1-D Decode Zone	4-4
SE 2223VHD PDF Decode Zone.	4-5
Pitch, Skew, and Specular Dead Zone	

(Horizontal Spread of Pattern)	4-8
Decode Zone	4-9

Chapter 5. SE 3223 Specifications

Technical Specifications	5-1
SE 3223 Scanning Specifications	5-4
SE 3223 Slab/Raster Decode Zone	5-4
SE 3223 Omnidirectional Decode Zone	5-5
Pitch, Skew, and Specular Dead Zone	
(Horizontal Spread of Pattern)	5-7
Decode Zone	5-8

Chapter 6. End-User Documentation

Scanning Hints	6-1
Position at an Angle	6-1
Scan the Entire Symbol	6-1
Troubleshooting	6-1
Servicing	6-2

Chapter 7. Regulatory Requirements


United States	7-2
Food and Drug Administration, Center For Devices and Radiological Health (CDRH)	7-2
Federal Communications Commission (EMI/RFI)	7-3
Canada	7-3
Health And Welfare Canada (Laser Safety)	7-3
Department Of Communications (EMI/RFI)	7-4
Europe	7-5
Laser Safety	7-5
EMI/RFI	7-5
Electrical Safety	7-5
Patents and Licenses	7-6

Chapter 8. Application Notes

AC Electrical Characteristics	8-2
Timing Waveforms	8-4
Explanation Of The AC Symbols	8-4


Chapter 9. Parameter Menus

Operational Parameters	9-1
----------------------------------	-----



Simple Serial Interface (SSI)	9-2
SE 2223/3223 Revision String	9-2
SSI Commands Not Supported	9-2
Multipacketing	9-3
Default Table	9-3
Set Default Parameter	9-10
Scanning Options	9-11
Beeper Tone	9-11
LED Mode	9-12
Laser On Time	9-13
Power Mode	9-14
Triggering Modes	9-15
Scanning Mode	9-16
Aiming Mode	9-17
Programmable Raster Height And Raster Expansion Speed	9-18
Time Delay to Low Power Mode	9-19
Timeout Between Decodes	9-20
Beep After Good Decode	9-21
Transmit "No Read" Message	9-22
Parameter Scanning	9-23
Linear Code Type Security Level	9-24
Bi-directional Redundancy	9-26
UPC/EAN	9-27
Enable/Disable UPC-A	9-27
Enable/Disable UPC-E	9-28
Enable/Disable UPC-E1	9-29
Enable/Disable EAN-8	9-30
Enable/Disable EAN-13	9-31
Enable/Disable Bookland EAN	9-32
Decode UPC/EAN Supplementals	9-33
Decode UPC/EAN Supplemental Redundancy	9-35
Transmit UPC-A Check Digit	9-36
Transmit UPC-E Check Digit	9-37
Transmit UPC-E1 Check Digit	9-38
UPC-A Preamble	9-39
UPC-E Preamble	9-40
UPC-E1 Preamble	9-41
Convert UPC-E to UPC-A	9-42
Convert UPC-E1 to UPC-A	9-43
EAN Zero Extend	9-44
UPC/EAN Security Level	9-45
Linear UPC/EAN Decode	9-47
UPC Half Block Stitching	9-48
UPC Composite Mode	9-49

Code 128	9-50
Enable/Disable Code 128	9-50
Enable/Disable UCC/EAN-128	9-51
Enable/Disable ISBT 128	9-52
Lengths for Code 128	9-52
Code 128 Decode Performance	9-53
Code 128 Decode Performance Level	9-54
Code 39	9-55
Enable/Disable Code 39	9-55
Enable/Disable Trioptic Code 39	9-56
Convert Code 39 to Code 32	9-57
Code 32 Prefix	9-58
Set Lengths for Code 39	9-59
Code 39 Check Digit Verification	9-61
Transmit Code 39 Check Digit	9-62
Enable/Disable Code 39 Full ASCII	9-63
Code 39 Decode Performance	9-64
Code 39 Decode Performance Level	9-65
Code 93	9-66
Enable/Disable Code 93	9-66
Set Lengths for Code 93	9-67
Interleaved 2 of 5	9-69
Enable/Disable Interleaved 2 of 5	9-69
Set Lengths for Interleaved 2 of 5	9-70
I 2 of 5 Check Digit Verification	9-72
Transmit I 2 of 5 Check Digit	9-73
Convert I 2 of 5 to EAN-13	9-74
Discrete 2 of 5	9-75
Enable/Disable Discrete 2 of 5	9-75
Set Lengths for Discrete 2 of 5	9-76
Codabar	9-78
Enable/Disable Codabar	9-78
Set Lengths for Codabar	9-79
CLSI Editing	9-81
NOTIS Editing	9-82
MSI Plessey	9-83
Enable/Disable MSI Plessey	9-83
Set Lengths for MSI Plessey	9-84
MSI Plessey Check Digits	9-86
Transmit MSI Plessey Check Digit	9-87
MSI Plessey Check Digit Algorithm	9-88
PDF417/MicroPDF417	9-89
Enable/Disable PDF417	9-89
Enable/Disable MicroPDF417	9-90



Code 128 Emulation	9-91
RSS Codes	9-92
RSS-14	9-92
RSS-Limited	9-93
RSS-Expanded	9-94
Composite	9-95
Composite CC-C	9-95
Composite CC-A/B	9-96
Composite TLC-39	9-97
Data Options	9-98
Transmit Code ID Character	9-98
Prefix/Suffix Values	9-101
Scan Data Transmission Format	9-103
Simple Serial Interface (SSI) Options	9-105
Baud Rate	9-105
Parity	9-107
Check Parity	9-110
Software Handshaking	9-111
Decode Data Packet Format	9-112
Stop Bit Select	9-113
Intercharacter Delay	9-114
Host Serial Response Time-out	9-114
Host Character Time-out	9-115
Event Reporting	9-115
Decode Event	9-116
Boot Up Event	9-117
Parameter Event	9-118
Macro PDF Features	9-119
Transmit Symbols in Codeword Format	9-119
Transmit Unknown Codewords	9-121
Escape Characters	9-122
Delete Character Set ECIs	9-123
ECI Decoder	9-124
Transmit Macro PDF User-Selected Fields	9-125
Transmit File Name	9-125
Transmit Block Count	9-126
Transmit Time Stamp	9-127
Transmit Sender	9-128
Transmit Addressee	9-129
Transmit Checksum	9-130
Transmit File Size	9-131
Transmit Macro PDF Control Header	9-132
Last Blocker Marker	9-133

Numeric Bar Codes 9-134

 Cancel 9-136

Appendix A. Miscellaneous Code Information

UCC/EAN-128 A-1

AIM Code Identifiers A-3


Setting Code Lengths Via Serial Commands A-8

Setting Prefixes and Suffixes Via Serial Commands A-9

Glossary

Index

Feedback



SE 2223/3223 Scan Engine Integration Guide



About This Manual


The *SE 2223/3223 Scan Engine Integration Guide* provides general instructions for mounting, setting up, and programming the SE 2223 and SE 3223 scan engines.

Note: *This guide provides general instructions for the installation of the scan engine into a customer's device. It is recommended that an opto-mechanical engineer perform an opto-mechanical analysis prior to integration.*

Chapter Descriptions

Topics covered in this guide are as follows:

- **Chapter 1, Getting Started** provides an overview of the SE 2223/3223 scan engine, and explains the theory of operation.
- **Chapter 2, Installation** describes the mechanical, electrical, optical and other environments related to installing the scan engine.
- **Chapter 3, SE 2223 Specifications** provides the technical and scanning specifications for the SE 2223 scan engine.
- **Chapter 4, SE 2223VHD Specifications** provides the technical and scanning specifications for the SE 2223VHD scan engine.
- **Chapter 5, SE 3223 Specifications** provides the technical and scanning specifications for the SE 3223 scan engine.
- **Chapter 6, End-User Documentation** includes tips for developing user documentation for your scan engine product.
- **Chapter 7, Regulatory Requirements** explains regulatory issues that must be considered when integrating the scan engine.



- **Chapter 8, Application Notes** explains electrical characteristics and timing waveforms.
- **Chapter 9, Parameter Menus** provides the bar codes necessary to program your scan engine.
- **Appendix A, Miscellaneous Programming Information** provides general programming information, such as the UCC/EAN-128 convention, AIM Code identifiers, and prefix and suffix values.

Notational Conventions

The following conventions are used in this document:

- Bullets indicate:
 - action items
 - lists of alternatives
 - lists of required steps that are not necessarily sequential
- Sequential lists (e.g., those that describe step-by-step procedures) appear as numbered lists.

Related Documents

The following documents provide more information for the SE 2223/3223 Scan Engine.

- **Simple Serial Interface (SSI) Programmer's Guide**, p/n 72-40451-XX.
- **Simple Serial Interface (SSI) Developer's Guide**, p/n 72E-50705-XX.

Service Information

If you have a problem with your equipment, contact the [Symbol Support Centers](#). Before calling, have the model number, serial number, and several of your bar code symbols at hand.

Call the Support Center from a phone near the scanning equipment so that the service person can try to talk you through your problem. If the equipment is found to be working properly and the problem is symbol readability, the Support Center will request samples of your bar codes for analysis at our plant.

If your problem cannot be solved over the phone, you may need to return your equipment for servicing. If that is necessary, you will be given specific directions.

Note: *Symbol Technologies is not responsible for any damages incurred during shipment if the approved shipping container is not used. Shipping the units improperly can possibly void the warranty. If the original shipping container was not kept, contact Symbol to have another sent to you.*

Symbol Support Centers

For service information, warranty information or technical assistance contact or call the Symbol Support Center in:

United States

Symbol Technologies, Inc.
One Symbol Plaza
Holtsville, New York 11742-1300
1-800-653-5350

United Kingdom

Symbol Technologies
Symbol Place
Winnersh Triangle, Berkshire RG41 5TP
United Kingdom
0800 328 2424 (Inside UK)
+44 118 945 7529 (Outside UK)

Australia

Symbol Technologies Pty. Ltd.
432 St. Kilda Road
Melbourne, Victoria 3004
1-800-672-906 (Inside Australia)
+61-3-9866-6044 (Outside Australia)

Canada


Symbol Technologies Canada, Inc.
2540 Matheson Boulevard East
Mississauga, Ontario, Canada L4W 4Z2
905-629-7226

Asia/Pacific

Symbol Technologies Asia, Inc.
230 Victoria Street #04-05
Bugis Junction Office Tower
Singapore 188024
337-6588 (Inside Singapore)
+65-337-6588 (Outside Singapore)

Austria

Symbol Technologies Austria GmbH
Prinz-Eugen Strasse 70
Suite 3
2.Haus, 5.Stock
1040 Vienna, Austria
1-505-5794 (Inside Austria)
+43-1-505-5794 (Outside Austria)



Denmark

Symbol Technologies AS
Gydevang 2,
DK-3450 Allerød, Denmark
7020-1718 (Inside Denmark)
+45-7020-1718 (Outside Denmark)

Finland

Oy Symbol Technologies
Kaupintie 8 A 6
FIN-00440 Helsinki, Finland
9 5407 580 (Inside Finland)
+358 9 5407 580 (Outside Finland)

Germany

Symbol Technologies GmbH
Waldstrasse 68
D-63128 Dietzenbach, Germany
6074-49020 (Inside Germany)
+49-6074-49020 (Outside Germany)

Latin America Sales Support

7900 Glades Road
Suite 340
Boca Raton, Florida 33434 USA
1-800-347-0178 (Inside United States)
+1-561-483-1275 (Outside United States)

Netherlands

Symbol Technologies
Kerkplein 2, 7051 CX
Postbus 24 7050 AA
Varsseveld, Netherlands
315-271700 (Inside Netherlands)
+31-315-271700 (Outside Netherlands)

Europe/Mid-East Distributor Operations

Contact your local distributor or call
+44 118 945 7360

France

Symbol Technologies France
Centre d'Affaire d'Antony
3 Rue de la Renaissance
92184 Antony Cedex, France
01-40-96-52-21 (Inside France)
+33-1-40-96-52-50 (Outside France)

Italy

Symbol Technologies Italia S.R.L.
Via Cristoforo Columbo, 49
20090 Trezzano S/N Naviglio
Milano, Italy
2-484441 (Inside Italy)
+39-02-484441 (Outside Italy)

Mexico

Symbol Technologies Mexico Ltd.
Torre Picasso
Boulevard Manuel Avila Camacho No 88
Lomas de Chapultepec CP 11000
Mexico City, DF, Mexico
5-520-1835 (Inside Mexico)
+52-5-520-1835 (Outside Mexico)

Norway

Symbol Technologies
Trollasveien 36
Postboks 72
1414 Trollasen, Norway
66810600 (Inside Norway)
+47-66810600 (Outside Norway)

South Africa

Symbol Technologies Africa Inc.
Block B2
Rutherford Estate
1 Scott Street
Waverly 2090 Johannesburg
Republic of South Africa
11-4405668 (Inside South Africa)
+27-11-4405668 (Outside South Africa)

Spain

Symbol Technologies S.A.
Edificio la Plovera Azul
C. Peonias, No. 2 - Sexta Planta
28042 Madrid, Spain
9-1-320-39-09 (Inside Spain)
+34-9-1-320-39-09 (Outside Spain)

Sweden

Symbol Technologies AB
Albygatan 109D
Solna
Sweden
84452900 (Inside Sweden)
+46 84452900 (Outside Sweden)


If you purchased your Symbol product from a Symbol Business Partner, contact that Business Partner for service.

Warranty

Symbol Technologies, Inc ("Symbol") manufactures its hardware products in accordance with industry-standard practices. Symbol warrants that for a period of twelve (12) months from date of shipment, products will be free from defects in materials and workmanship.

This warranty is provided to the original owner only and is not transferable to any third party. It shall not apply to any product (i) which has been repaired or altered unless done or approved by Symbol, (ii) which has not been maintained in accordance with any operating or handling instructions supplied by Symbol, (iii) which has been subjected to unusual physical or electrical stress, misuse, abuse, power shortage, negligence or accident or (iv) which has been used other than in accordance with the product operating and handling instructions. Preventive maintenance is the responsibility of customer and is not covered under this warranty.

Wear items and accessories having a Symbol serial number, will carry a 90-day limited warranty. Non-serialized items will carry a 30-day limited warranty.



Warranty Coverage and Procedure

During the warranty period, Symbol will repair or replace defective products returned to Symbol's manufacturing plant in the US. For warranty service in North America, call the Symbol Support Center at 1-800-653-5350. International customers should contact the local Symbol office or support center. If warranty service is required, Symbol will issue a Return Material Authorization Number. Products must be shipped in the original or comparable packaging, shipping and insurance charges prepaid. Symbol will ship the repaired or replacement product freight and insurance prepaid in North America. Shipments from the US or other locations will be made F.O.B. Symbol's manufacturing plant.

Symbol will use new or refurbished parts at its discretion and will own all parts removed from repaired products. Customer will pay for the replacement product in case it does not return the replaced product to Symbol within 3 days of receipt of the replacement product. The process for return and customer's charges will be in accordance with Symbol's Exchange Policy in effect at the time of the exchange.

Customer accepts full responsibility for its software and data including the appropriate backup thereof.

Repair or replacement of a product during warranty will not extend the original warranty term.


Symbol's Customer Service organization offers an array of service plans, such as on-site, depot, or phone support, that can be implemented to meet customer's special operational requirements and are available at a substantial discount during warranty period.

General

Except for the warranties stated above, Symbol disclaims all warranties, express or implied, on products furnished hereunder, including without limitation implied warranties of merchantability and fitness for a particular purpose. The stated express warranties are in lieu of all obligations or liabilities on part of Symbol for damages, including without limitation, special, indirect, or consequential damages arising out of or in connection with the use or performance of the product.

Seller's liability for damages to buyer or others resulting from the use of any product, shall in no way exceed the purchase price of said product, except in instances of injury to persons or property.

Some states (or jurisdictions) do not allow the exclusion or limitation of incidental or consequential damages, so the proceeding exclusion or limitation may not apply to you.

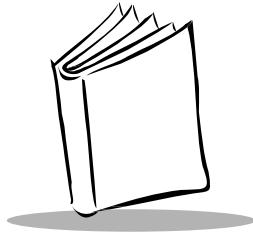

Chapter 1

Getting Started



Per FDA and IEC standards, the scan engines described in this guide are not given a laser classification. However, the following precautions should be observed:


Caution

This laser component emits FDA/IEC Class 2 laser light at the exit port. Do not stare into beam.

Overview

The SE 2223/3223 is a miniaturized 1-D and 2-D bar code scanning device intended for integration into OEM equipment. The SE 2223/3223 has a retrocollective scan element, generates laser light in a raster, cyclone or semi-omni pattern that opens in both X and Y directions, and processes bar code information into digitized data.

The SE 2223 and SE 3223 are two members of a family of decoded scan engines that provide a number of scan patterns selectable through the interface. These patterns include single line, raster, semi-omni, and full omnidirectional.



A flex cable connector mounted on the SE 2223/3223 provides connection between the scanner and host. The SE 2223 and SE 3223 use the same hardware and software components, but differ from each other in the following ways:

- The SE 2223 employs focusing more suited to reading 1-D and PDF symbols using a raster laser pattern. The working range is larger than the SE 3223.
- The SE 3223 uses focusing more suited to reading 1-D bar codes in an omnidirectional manner while still able to decode PDF symbols in a raster mode.

Theory of Operation

The scan pattern is created via a laser diode that produces a single beam of coherent light. Two orthogonal scanning elements are contained within the chassis of the SE 2223/3223. The laser light first hits the Y scan element mirror that can move the beam in a vertical direction. The light beam is reflected to the mirror of the X scan element. By controlling the scan angle and scan frequencies, the movement of the X and Y scan element mirrors creates the various scan patterns.

When the laser light strikes a bar code, the dark bars absorb the light, and the light spaces reflect it. The reflected laser light is bounced back to the scan engine where it reflects off the X element mirror to the Y element mirror, then to the collection mirror. The collection mirror focuses the light onto a photo diode which generates a current proportional to the reflected light signal. That current, in turn, produces an analog voltage which is amplified, filtered, and sent to a digitizer. Here the signal is transformed into a digital representation of the bar code called the Digitized Bar Pattern (DBP). The DBP data is then sent to the decoder board for processing into the SSI format.

The heart of the SE 2223/3223 is a custom Application-Specific Integrated Circuit (ASIC) and a single chip decoding system (SCDS), which control the majority of functions associated with a laser-based scanner. The ASIC controls the analog front end, the digitizer, the Visible Laser Diode (VLD) driver, and control circuitry. The VLD driver circuit turns the laser on and off, and regulates power to the laser. It incorporates a motor fail detection circuit that turns the laser off should the motor fail.

The SCDS controls the X and Y scan element mirror motion, which oscillates the X and Y mirrors at the required frequencies in order to produce the various scan patterns.

Analog Front End

This transforms the signal current from the photodiode into a voltage signal, then filters and amplifies for use by a digitizer. That signal is amplified, while noise and the effects of ambient light are removed.

Digitizer

This analyzes the conditioned analog signal and threshold amplitudes to create a digitized representation of the bar code being read.

Visible Laser Diode (VLD) Driver

This consists mainly of an operational amplifier, which regulates optical power from the laser.

Single Chip Decoding System (SCDS)

This controls operating frequencies and amplitudes of both the X (horizontal) and Y (vertical) patterns and contains the decoding algorithms.

The SCDS provides two functions:

- The motor control sections generate the waveform frequencies and shape to control highly efficient scan elements.
- The decoder section has logic that converts the digital bar pattern (DBP) into an SSI-compatible format that is sent serially to the host system.

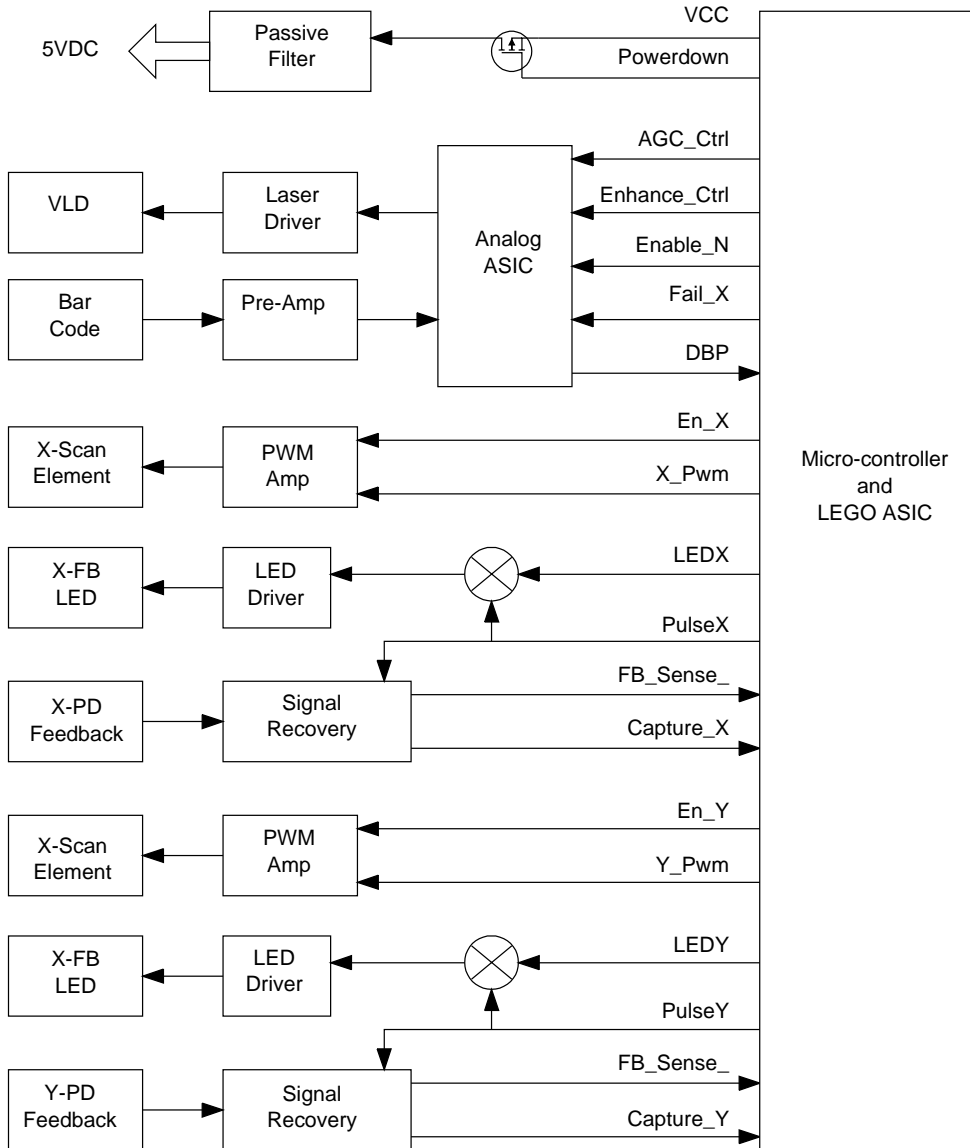



Figure 1-1. Functional Block Diagram

Decoder

The heart of the decoder is a micro-controller that provides the necessary intelligence for bar code decoding, host I/O interface protocol, and general decoder maintenance.

Power Management

The SE 2223/3223 has two power modes:

- Continuous Power
- Low Power.

In Continuous Power mode, the SE 2223/3223 always waits for a trigger pull or serial communication.

In Low Power mode, the SE 2223/3223 draws less current than when in Continuous Power mode, making it more suitable for battery powered applications. The SE 2223/3223 can be put into Low Power mode via the SSI *SLEEP* command. See the *Simple Serial Interface (SSI) Programmer's Guide*, p/n 72-40451-XX

The SE 2223/3223 must be awakened from the Low Power mode before performing any functions.

When the SE 2223/3223 is in the Low Power mode, the PWRDWN signal is asserted. This signal alerts the host that the SE 2223/3223 is in sleep mode. Table 1-1 shows how to put the SE 2223/3223 into Low Power mode. Table 1-2 shows how to awaken it.

Table 1-1. Putting the SE 2223/3223 into Low Power Mode

Action	Behavior
Send the serial SLEEP command	The SE 2223/3223 enters Low Power mode only once, as soon as possible.
Note: All Wake Up signals (see Table 1-2) must be inactive in order to enter Low Power mode.	

Table 1-2. Waking Up the SE 2223/3223

Signal	State to Wake Up
AIM/WKUP*	Low
TRIG*	Low




Table 1-2. Waking Up the SE 2223/3223

Signal	State to Wake Up
CTS*	Low
RXD	Send 0x00

Serial I/O

Simple Serial Interface Protocol (SSI) is a half-duplex asynchronous serial interface with two hardware handshaking lines. The four SSI specific interface signals are:

- TXD - Transmitted Data
- RXD - Received Data
- RTS* - Request to Send
- CTS* - Clear to Send.

Signal names with the "*" modifier are asserted when at the positive logic 0 state (active low). Signal names without the "*" modifier are asserted when at the positive logic 1 state (active high).

Note: This guide uses "decoder" to mean the scan engine. "Host" refers to the OEM host.

The TXD transmits asynchronous serial data from the decoder to the host. The RXD is used by the decoder to receive asynchronous serial data from the host. The SSI protocol does not support full-duplex data transfers; data is either transmitted or received by the decoder, but never both simultaneously.

The RTS* and CTS* signals help coordinate data transfers between the decoder and the host.

Beeper and Decode LED

The BPR* and DLED* output lines do not provide enough current drive for the actual beeper and LED device. Additional buffering is needed.

The SE 2223/3223's beeper output ranges from 1.8 to 2.5 kHz. The beeper output is a 50% duty cycle square wave.

If a non-inverting driver is used to buffer the DLED* line, the output of the driver should be connected to the cathode (-) end of the LED.

Electrical Interface

See Table 2-2 on page 2-4 for the pin functions of the SE 2223/3223 interface and typical input and output circuitry.

Scanning Patterns

The SE 2223/3223 generates four scanning patterns based on the software command received at the interface. These patterns are raster, semi-omni, and cyclone. The slab and raster patterns can be used to read 1-D bar codes and PDF symbols. The cyclone pattern reads 1-D bar codes in an omnidirectional manner.

Raster Scan Pattern

The decoder determines when to open the “slab” to a full raster depending on the bar code presented to the SE 2223/3223. For a 1-D bar code the SE 2223/3223 can remain in the slab pattern until the bar code is decoded. When reading a PDF417 bar code, the decoder instructs the SE 2223/3223 to open the raster pattern to the height of the bar code presented. Figure 1-2 illustrates the slab and full raster patterns.

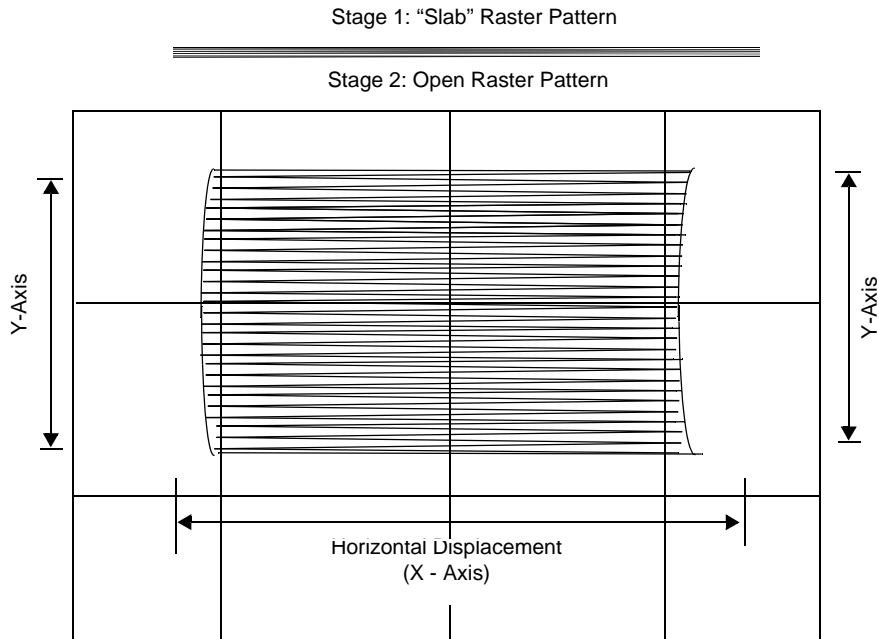



Figure 1-2. SE 2223/3223 Raster Scan Pattern

The slab and open raster pattern perform a process called "dithering" in which the entire pattern moves up and down by one degree. This ensures that the pattern covers the entire bar code.

Semi-omnidirectional Scan Pattern

The semi-omnidirectional pattern is used to scan highly truncated bar codes. The bar code must be presented horizontally with up to a 20° tilt.

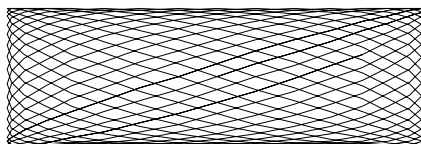


Figure 1-3. Semi-omnidirectional Scan Pattern

Cyclone Omnidirectional Scan Pattern

The cyclone omnidirectional pattern illustrated below is used by the SE 3223 for omnidirectional decoding of 1-D symbols.


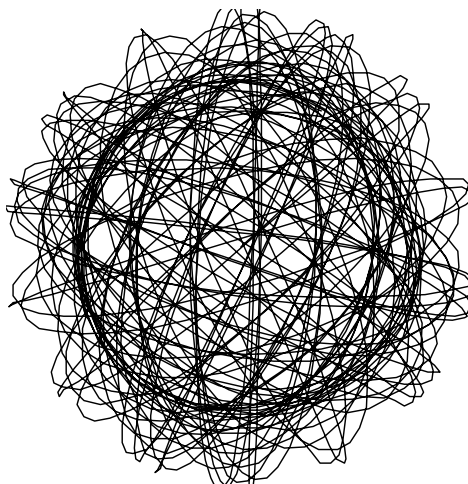


Figure 1-4. SE 3223 Cyclone Omnidirectional Scan Pattern



Beeper Definitions

Table 1-3 provides standard beeper definitions.

Table 1-3. Standard Beeper Definitions

Beeper Sequence	Indication
Standard Use	
1 Beep - short high tone	A bar code symbol was decoded (if decode beeper is enabled).
1 Beep - long high tone	Thermal shutdown.
3 Beeps - short high tone	Power-on or reset. Occurs immediately after the unit is turned on, indicating that the system software is working properly. If three beeps occur during normal operation, it is due to a reset and any work in progress is lost. If this occurs often, contact the Symbol Services Division.
Parameter Menu Scanning	
1 Beep- short high tone	Correct entry scanned or correct menu sequence performed.
1 Beep- hi/lo/hi/lo tone	Successful program exit with change in the parameter setting.
2 Beeps - lo/hi tone	Input error, incorrect bar code, or "Cancel" scanned, wrong entry, incorrect bar code programming sequence; remain in program mode.
Communication	
4 Beeps - short high tone	Communication error in the indication field.
4 Beeps - hi/hi/hi/lo	Receive error.
3 Beeps - lo/hi/lo	ADF transmit error.

Macro PDF


Table 1-4 provides beeper definitions for Macro PDF mode.

Table 1-4. Macro PDF Beeper Indications


Beeper Sequence	Indication
Error	
1 Low Long	Hi-level decode error caused by incorrect symbol.

Table 1-4. Macro PDF Beeper Indications

Beeper Sequence	Indication
2 Low Long	File ID error. A bar code not in the current MPDF sequence was scanned.
3 Low Long	Out of memory. There is not enough buffer space to store the current MPDF symbol.
4 Low Long	Bad symbology. You scanned a 1-D or 2-D bar code in an MPDF sequence, a duplicate MPDF label, an incorrect sequence, or are trying to transmit an empty or illegal MPDF field.
5 Low Long	Flushing buffer.
Fast Warble	Successful parameter scanned.
Decode Beep Sequence	
Single short	Standard decode and transmit beep for all symbols.
Double short	MPDF symbol is buffered. A single beep indicates transmission of the buffered data.



SE 2223/3223 Scan Engine Integration Guide

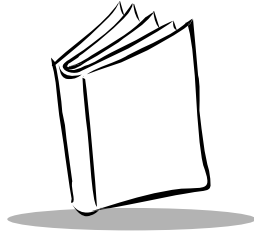


Chapter 2 *Installation*

Mechanical Interface



Physical dimensions of the SE 2223/3223 are shown in [Figure 2-1](#). Mounting holes for both products are on the bottom surface of the zinc die-cast chassis. One of the three mounting holes is in the same location as the SE 1200. SE 2223/3223 mounting holes are also illustrated in these figures.

The SE 2223/3223 is resistant to the shock of drop for up to 2000 Gs. If the shock level is anticipated to be above 1000 Gs, the use of shock mounts is recommended.

The SE 2223/3223 scan patterns are two-dimensional. The height of the exit window must take into account the vertical component of the pattern. See [Table 2-9](#) and [Table 2-10](#) for window height specifications.



SE 2223/3223 Scan Engine Integration Guide

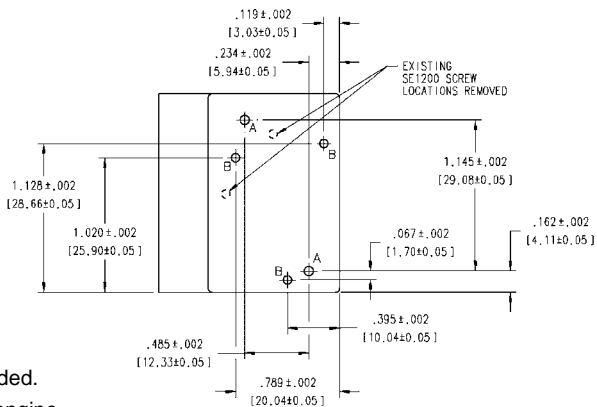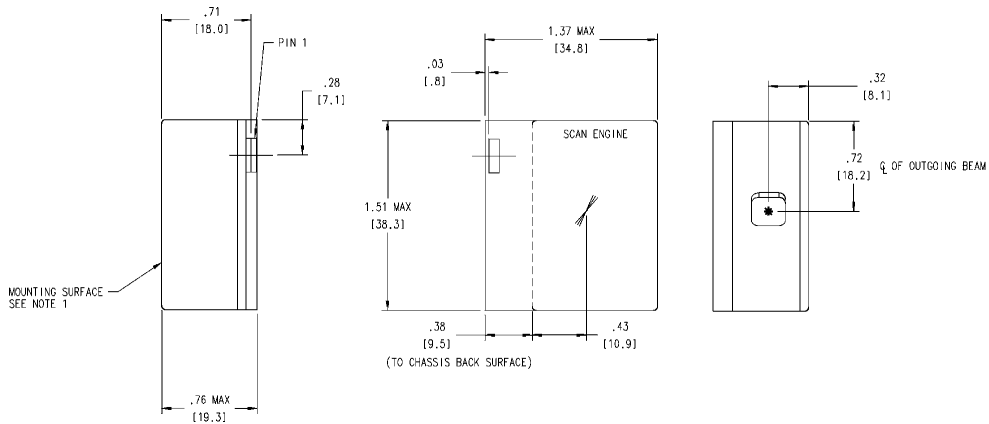

Notes:

1. Chassis is electrically grounded.
2. Holes marked "A" are scan engine location aids. Locate engine with .08 max long pins in two places marked "A".
3. Mounting screws and locating pins may be magnetic or non-magnetic material.

4 MM MAX SCREW THD ENGAGEMENT

A HOLES - .070 ± .001 (1.76 ± .03)
 B HOLES - M2 X 0.4
 SEE NOTES 1, 2 & 3

Figure 2-1. SE 2223/3223 Mechanical Drawing

Table 2-1. Mounting Hole Specifications

Hole	Function	Diameter		Engagement Length (max)	
		in.	mm	in.	mm
A	Locating	0.70 ± 0.001	1.78 ± 0.03	0.08	2.0
B	Mounting	M2x0.4mm		0.16	4.0

Electrical Interface

The SE 2223/3223 is controlled by a 12-pin interface that uses the Simple Serial Interface (SSI) communication protocol. SSI provides a communications link between Symbol Technologies decoders (e.g., SE 2223 scan engine, slot scanners, hand-held scanners, two-dimensional scanners, hands-free scanners, and RF base stations) and a serial host. It provides the means for the host to control the decoder.

Table 2-2. Electrical Interface

Mnemonic	No.	Type	Name and Function
	1		Not connected. Reserved for future versions of the SE 2223/3223.
VBATT	2		Power Supply: Power supply voltage for the SE 2223/3223.
GND	3		Ground: 0 V reference.
Signal names with the "*" modifier are asserted when at the ground level (active low). Signal names without the "*" modifier are asserted when at the positive supply voltage level (active high).			


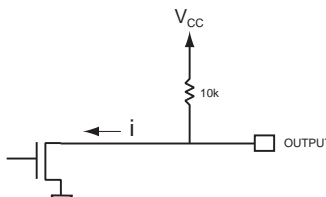
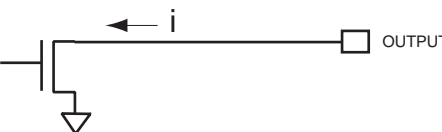



Table 2-2. Electrical Interface (Continued)

Mnemonic	No.	Type	Name and Function												
RXD	4	I	Received Data: Serial input port. Clear to Send: Serial port handshaking line.												
CTS*	6	I													
			<table> <tr> <th></th><th>Min.</th><th>Max.</th><th>Condition</th></tr> <tr> <td>V_{IL}</td><td>-0.5V</td><td>0.4V</td><td>$V_{CC} = 4.5$</td></tr> <tr> <td>V_{IH}</td><td>2.5V</td><td>5.5V</td><td>$V_{CC} = 5.5$</td></tr> </table>		Min.	Max.	Condition	V_{IL}	-0.5V	0.4V	$V_{CC} = 4.5$	V_{IH}	2.5V	5.5V	$V_{CC} = 5.5$
	Min.	Max.	Condition												
V_{IL}	-0.5V	0.4V	$V_{CC} = 4.5$												
V_{IH}	2.5V	5.5V	$V_{CC} = 5.5$												
AIM/WAKE*	11	I	Wake Up: When the SE 2223/3223 is in the low power mode, pulsing this pin low for 2 μ s awakens the SE 2223/3223. Trigger: This pin is the hardware triggering line. Driving this pin low causes the SE 2223/3223 to start a scan and decode session.												
TRIG*	12	I													
			<table> <tr> <th></th><th>Min.</th><th>Max.</th><th>Condition</th></tr> <tr> <td>V_{IL}</td><td>-0.5V</td><td>0.4V</td><td>$V_{CC} = 4.5$</td></tr> <tr> <td>V_{IH}</td><td>2.5V</td><td>5.5V</td><td>$V_{CC} = 5.5$</td></tr> </table>		Min.	Max.	Condition	V_{IL}	-0.5V	0.4V	$V_{CC} = 4.5$	V_{IH}	2.5V	5.5V	$V_{CC} = 5.5$
	Min.	Max.	Condition												
V_{IL}	-0.5V	0.4V	$V_{CC} = 4.5$												
V_{IH}	2.5V	5.5V	$V_{CC} = 5.5$												

Signal names with the "*" modifier are asserted when at the ground level (active low). Signal names without the "*" modifier are asserted when at the positive supply voltage level (active high).

Table 2-2. Electrical Interface (Continued)

Mnemonic	No.	Type	Name and Function																
RTS*	7	O	Request to Send: Serial port handshaking line.																
PWRDWN	8	O	Power Down Ready: When high, the decoder is in low power mode.																
BPR*	9	O	Beeper*: Low current beeper output.																
DLED*	10	O	Decode LED: Low current decode LED output.																
			<table> <tr> <th></th><th>Min.</th><th>Max.</th><th>Condition</th></tr> <tr> <td>V_{OL}</td><td></td><td>0.45</td><td>$I_{OL} = 1.6\text{mA}$</td></tr> <tr> <td>V_{OH}</td><td>2.40</td><td></td><td>$I_{OH} = -1.6\text{mA}, V_{CC}=4.5\text{V}$</td></tr> <tr> <td></td><td>4.0</td><td></td><td>$I_{OH} = -250\mu\text{A}@V_{CC}=4.5\text{V}$</td></tr> </table> 		Min.	Max.	Condition	V_{OL}		0.45	$I_{OL} = 1.6\text{mA}$	V_{OH}	2.40		$I_{OH} = -1.6\text{mA}, V_{CC}=4.5\text{V}$		4.0		$I_{OH} = -250\mu\text{A}@V_{CC}=4.5\text{V}$
	Min.	Max.	Condition																
V_{OL}		0.45	$I_{OL} = 1.6\text{mA}$																
V_{OH}	2.40		$I_{OH} = -1.6\text{mA}, V_{CC}=4.5\text{V}$																
	4.0		$I_{OH} = -250\mu\text{A}@V_{CC}=4.5\text{V}$																
TXD	5	O	Transmitted Data: Serial output port.																
			<table> <tr> <th></th><th>Min.</th><th>Max.</th><th>Condition</th></tr> <tr> <td>V_{OL}</td><td></td><td>0.45</td><td>$I_{OL} = 1.6\text{mA}$</td></tr> <tr> <td>V_{OH}</td><td>2.40</td><td></td><td>$I_{OH} = -1.6\text{mA}, V_{CC}=4.5\text{V}$</td></tr> <tr> <td></td><td>4.0</td><td></td><td>$I_{OH} = -250\mu\text{A}@V_{CC}=4.5\text{V}$</td></tr> </table> 		Min.	Max.	Condition	V_{OL}		0.45	$I_{OL} = 1.6\text{mA}$	V_{OH}	2.40		$I_{OH} = -1.6\text{mA}, V_{CC}=4.5\text{V}$		4.0		$I_{OH} = -250\mu\text{A}@V_{CC}=4.5\text{V}$
	Min.	Max.	Condition																
V_{OL}		0.45	$I_{OL} = 1.6\text{mA}$																
V_{OH}	2.40		$I_{OH} = -1.6\text{mA}, V_{CC}=4.5\text{V}$																
	4.0		$I_{OH} = -250\mu\text{A}@V_{CC}=4.5\text{V}$																
Signal names with the "*" modifier are asserted when at the ground level (active low). Signal names without the "*" modifier are asserted when at the positive supply voltage level (active high).																			



1-D and PDF Decoding

The on-board SCSD provides fully decoded PDF and 1-D output using the SSI protocol.

Scan Pattern Control: Scan Engine and Decoder Interface

The scanner's aggressiveness depends on how well the scan pattern covers the target bar code. This partly depends on the operator's aiming skill, but the SE 3223/3223 also allows for decoder adjustments of the scan pattern. The decoder can adjust the scan pattern to fit the target symbol by evaluating optical feedback from the area scanned.

Grounding

Because the SE 2223/3223 chassis is at GND potential, a grounded host can accept the SE 2223/3223 directly. If the host is not at GND potential (as in SE 1200 installations), isolation can be accomplished by inserting an insulator between the two chassis, and if metallic screws are used, shoulder washers are required to isolate the screws from the host. Non-metallic screws may also be used if mechanical considerations permit.

Power

The SE 2223/3223 uses +5V power $\pm 10\%$ with a typical current draw of 300 mA. "Hot-plugging" the interface connector with power activated is not allowed.

ESD

The SE 2223/3223 is protected from ESD events that may occur in an ESD-controlled environment. Use care when handling the scan engine. Be sure grounding wrist straps and properly grounded work areas are used.

Environment

The SE 2223/3223 must be sufficiently enclosed to prevent dust particles from gathering on the mirrors, laser lens and the photodiode. Dust and other external contaminants eventually cause degradation in unit performance. Symbol does not warrant performance of the engine when used in an exposed application.

Optical

The SE 2223/3223 uses a sophisticated optical system that can provide scanning performance that matches or exceeds the performance of much larger scanners. However, an improperly designed enclosure, or improper selection of the window material can reduce scanner performance.

Note: *This guide provides general instructions for the installation of the scan engine into a customer's device. It is strongly recommended that an opto-mechanical engineer perform an opto-mechanical analysis prior to integration.*

Positioning the Window

The window must be positioned so that laser light reflected off the inside of the window is not reflected back into the collection optics of the scanner. See [Table 2-9](#) to determine position and angle of the window. The window can be positioned more nearly parallel to the face of the scanner if an anti-reflection coating is used. An improperly positioned window can result in significant performance degradation.

Avoiding Scratched Windows


Scratches on the window can reduce the performance of the scanner. Recess the window into the housing, or apply a scratch resistance coating to minimize scratching.

Window Material

Many window materials that look perfectly clear to the eye can contain stresses and distortions that can reduce scanner performance. For this reason, cell cast acrylic or CR-39 is highly recommended. Following is a description of these window materials.

Acrylic

Easily fabricated by extruding, injection-molding, or by cell-casting. Very good optical quality and low initial cost, but surface must be protected from the environment due to its susceptibility to attack by chemicals, mechanical stresses, and UV light. Reasonably good impact resistance. Can be ultrasonically welded.



CR-39

A thermal-setting plastic produced by the cell casting process. Excellent chemical and environmental resistance. Good surface hardness, so does not have to be hard-coated, but may be for severe environments. Reasonably good impact resistance. Most plastic eye glasses sold today are uncoated, cell cast CR-39. Cannot be ultrasonically welded.

Table 2-3. Suggested Window Properties

Material	Red cell cast acrylic
Spectral Transmission	85% minimum from 630 to 680 nanometers
Thickness	.060 ±.005
Wavefront Distortion (transmission)	0.2 wavelengths peak-to-valley maximum over any .08 in. diameter within the clear aperture
Clear Aperture	To extend to within .04 in. of the edges all around
Surface Quality	60-20
Coating	Both sides to be anti-reflection coated to provide 0.5% max reflectivity (each side) from 630 to 680 nanometers at nominal window tilt angle. Coating must meet the hardness adherence requirements of MIL-M-13508.

Commercially Available Coatings

Note: You may not be able to ultrasonically weld these coatings.

Anti-Reflection Coatings

An anti-reflection coating can be applied to the inside and/or outside of the window, which greatly reduces the amount of light reflected off the window back into the scanner. This coating can increase the range of acceptable window positions and minimize performance degradation due to signal loss as the light passes through the window. Anti-reflection coatings on the inside of the window is highly recommended because coating on the outside is subject to scratching.

Polysiloxane Coating

Polysiloxane coatings are applied to plastic surfaces to improve the surface resistance to both scratch and abrasion. They are generally applied by dipping and air drying in an oven with filtered hot air.

A Word About Coatings

If using an anti-reflective coating, a polysiloxane coating is not needed. It is strongly recommended that an anti-reflective coating be used on the inside surface first, unless high performance requirements require coating on the outside surface. If not, a CR-39 without a protective coat is recommended. In all cases, adhere to the minimum tilt angle outlined in [Location and Positioning](#) on page 2-10. Also, it is recommended to recess the exit window to minimize scratches and digs.

Below is a table of exit window manufacturers and anti-reflection coaters.

Table 2-4. Exit Window Manufacturers and Coaters

Company	Discipline	Specifics
Evaporated Coatings, Inc. 2365 Maryland Road Willow Grove, PA 19090 (215) 659-3080	Anti-reflection coater	Acrylic window supplier Anti-reflection coater
Fosta-Tek Optics, Inc. 320 Hamilton Street Leominster, MA 01453 (978) 534-6511	Cell caster, hard coater, laser cutter	CR39 exit window manufacturer
Glasflex Corporation 4 Sterling Road Sterling, NJ 07980 (908) 647-4100	Cell caster	Acrylic exit window manufacturer
Optical Polymers Int. (OPI) 110 West Main Street Milford, CT 06460 (203) 882-9093	CR-39 cell-caster, coater, laser cutter	CR39 exit window manufacturer
Polycast 70 Carlisle Place Stamford, CT 06902 800-243-9002	Acrylic cell-caster, hard coater, laser cutter	Acrylic exit window manufacturer




Table 2-4. Exit Window Manufacturers and Coaters (Continued)

Company	Discipline	Specifics
TS Polyers 2009 Glen Parkway Batavia, OH 45103 800-277-9778	Acrylic cell-caster, coater, laser cutter	Acrylic exit window manufacturer

Mounting

On the bottom of the chassis there are three mounting holes (M2x0.4) and two locator holes, shown in [Figure 2-1](#).

The SE 2223/3223 may be mounted in any orientation with no degradation in performance.

Location and Positioning

Symbol Position with Respect to a Fixed-Mount Scan Engine

The SE 2223/3223 may need to be mounted to read symbols that are automatically presented to it, or that are always presented in a pre-determined location. In these situations positioning of the SE 2223/3223 with respect to the symbol location is critical, or unsatisfactory reading performance may result.

Use the following steps to ensure satisfactory operation of the SE 2223/3223 in your installation.

1. Determine the optimum distance between the scan engine and the symbol. Due to the large variety of symbol sizes, densities, print quality, etc., there is no simple formula to calculate this optimum symbol distance. Try this:
 - a. Measure the maximum and minimum reading range that can be achieved with your symbols.
 - b. Locate the scanner so the symbols are near the middle of this range when being scanned.

Check the near and far range on several symbols. If they are not reasonably consistent there may be a printing quality problem that can degrade the performance of your system. Symbol Technologies can provide advice on how to improve your installation.

[Table 2-5](#) and [Table 2-6](#) provide general guidelines for bar code ranges.

2. Center the symbol (left to right) in the scan beam whenever possible.
3. Position the symbol so that the scan beam is as near as possible to perpendicular to the bars and spaces in the symbol. Although the scanner can tolerate some tilt of the symbols, best results are obtained with no tilt. This is especially important with 2-D symbols.
4. Avoid specular reflection (glare) off the symbol by tilting the top or bottom of the symbol away from the engine. The exact angle is not critical, but it must be large enough so that if a mirror were inserted in the symbol location, the reflected scan line would miss the front surface of the engine. 15 degrees is recommended (see [Figure 3-5 on page 3-8](#)).
5. If a window is to be placed between the engine and the symbol, use a representative window in the desired window position to determine optimum symbol location. See the sections concerning window quality, coatings and positioning.
6. Give the scanner time to dwell on the symbol for several scans. Poor quality symbols may not read on the first scan. When the scanner is first enabled, it may take two or three scans before the scanner reaches maximum performance. Enable the scanner before the symbol is presented, if possible.

Table 2-5. SE 2223 Decode Distances

Symbol Density/ Bar Code Type	Typical Working Ranges	
	Near	Far
6.0 mil Code 39	2.25 in / 5.72 cm	6.0 in / 15.24 cm
7.5 mil Code 39	2 in / 5.08 cm	8.0 in / 20.32 cm
13 mil 100% UPC	See Note	15.0 in / 38.10 cm
20 mil Code 39	See Note	20.0 in / 50.80 cm
40 mil Code 39	See Note	25.0 in / 63.50 cm
55 mil Code 39	See Note	32.0 in / 81.28 cm
6.6 mil PDF417	2.3 in / 5.72 cm (Note)	7.0 in / 17.78 cm
10 mil PDF417	2.0 in / 5.08 cm (Note)	10.0 in / 25.40 cm
15 mil PDF417	2.0 in / 5.08 cm (Note)	16.0 in / 40.64 cm
Note: Near ranges for lower density bar codes are limited by the width of the bar code and the scan angle.		




Table 2-6. SE 3223 Decode Distances

Symbol Density/ Bar Code Type	Typical Working Ranges	
	Near	Far
6.0 mil Code 39	1.25 in / 3.18 cm	4.25 in / 10.80 cm
80% UPC	2 in / 5.08 cm	7.5 in / 19.05 cm
13 mil 100% UPC	2.5 in / 6.35 cm	14.0 in / 35.56 cm
20 mil Code 39	2.75 in / 6.99 cm	14.25 in / 36.20 cm
55 mil 1-D	2.0 in / 5.08 cm (Note)	33.0 in / 83.82 cm
6.6 mil PDF417	2.0 in / 5.08 cm (Note)	6.25 in / 15.88 cm
10 mil PDF417	5.75 in / 14.61 cm	10.75 in / 27.31 cm
15 mil PDF417	8.5 in / 21.59 cm	16.5 in / 41.91 cm
10 mil PDF417	2.0 in / 5.08 cm (Note)	10.0 in / 25.40 cm
Note: Near ranges for lower density bar codes are limited by the width of the bar code and the scan angle.		

Installing the SE 2223/3223

Before installing the SE 2223/3223 into your host equipment, there are two important points to consider:

- The SE 2223/3223 chassis is electrically connected to ground. However, if other members of this scan engine family are used, isolate the chassis since the family chassis is connected to Vcc.
- Recommended screw torque is 2.5 to 3.5 in. lbs.

Accessories

Table 2-7. Accessories

Accessory	Symbol Part Number
Flex Cable	15-10750-01
12-pin Connector	50-12102-xxx
Universal Developer's Kit	KT-0032DK-000

Software Developer's Kit (SDK)

The Universal Software Developer's Kit (SDK) provides the software and hardware tools required to integrate and communicate to the SE 2223 and SE 3223 scan engines. It contains the a universal power supply, development board, application software, jumpers, and other materials.


The SDK is used for all SSI scan engines, including both the SE 2223 and SE 3223 scan engines.

The scan engine can be configured by scanning bar code menus or through the serial interface. Using Symbol Technologies Simple Serial Interface (SSI) protocol, your product can support every scanning function through the serial port.

Whether your device is Windows®, DOS, or even an embedded system, the Universal SDK will help you take full advantage of the SE 2223 and SE 3223 features and obtain maximum performance.

The Universal SDK Contains:

- CD - Provides the software and user documentation to support the Simple Serial Interface:
 - Simple Serial Interface Header Files
 - DOS Serial Communication Library and Source Code
 - Windows Serial Communication Library and Source Code
 - Simple Serial Interface Library and Source Code
 - DOS and Windows Demo Programs and Source Code.
- Development Board, used to connect the scan engine to your PC development workstation. Development board functions include:
 - Conversion of the scan engine CMOS Serial Output to RS-232




- Beeper and LED drivers
- 9 pin RS-232 for connection to PC workstation
- Aim and Trigger Buttons
- Beeper
- Power, Decode, Low Power Mode LEDs
- Test Points.
- Flex connector to connect the scan engine to the board
- Jumpers - Developers can:
 - Use the SDK's embedded features by placing a jumper across the desired signal to activate the device on the board, making it accessible to the scan engine.
 - Omit the provided jumper and wire their own device into the circuit via the unused jumper (the single row of pins), thereby using their own signals to activate a feature (e.g., LED or beeper).
- User Documentation - the SE2223/3223 Integration Guide provides the detailed technical specifications for the scan engine. The SSI Programmer's Guide provides system requirements and programming information about Symbol Technologies' Simple Serial Interface, which enables Symbol's decoders (e.g., SE 2223 scan engine, hand-held scanners, 2D scanners, etc.) to communicate with a serial host.
- Power supply - Choice of 110 or 220V.
- Cable to connect the development board to your PC workstation.

Note: If using the Cyclone pattern, be sure to mount the scan engine close to the edge of the development board to prevent the pattern from being clipped by any portion of the board.

Table 2-8 lists the signals available on the board.

Table 2-8. Board Signals

Signal	Pin No.	Type (I/O)	Function
TRIG*	1	I	Trigger: This pin is the hardware triggering line. Driving this pin low causes the SE 2223/3223 to start a scan and decode session.
AIM/WAKE*	2	I	Wake Up: When the SE 2223/3223 is in the low power mode, pulsing this pin low for a minimum of 2 μ s wakes the SE 2223/3223.
DLED*	3	O	Decode LED: Low current decode LED output.
BPR*	4	O	Beeper*: Low current beeper output.
RTS	5	O	Request to Send: Serial port handshaking line.
CTS	6	I	Clear to Send: Serial port handshaking line.
TXD	7	O	Transmitted Data: Serial output port.
RXD	8	I	Received Data: Serial input port.
GND	9		Ground: 0 V reference.
Vcc	10		Power Supply: Power supply voltage for the SE 2223/3223.
Download	11	I	Holding this line low enables downloading of software to the SE 2223/3223.
PWRDWN	12	O	Power Down Ready: When high, the decoder is in low power mode.
Signal names with the "*" modifier are asserted when at the ground level (active low). Signal names without the "*" modifier are asserted when at the positive supply voltage level (active high).			



SE 2223 Optical Path and Exit Window


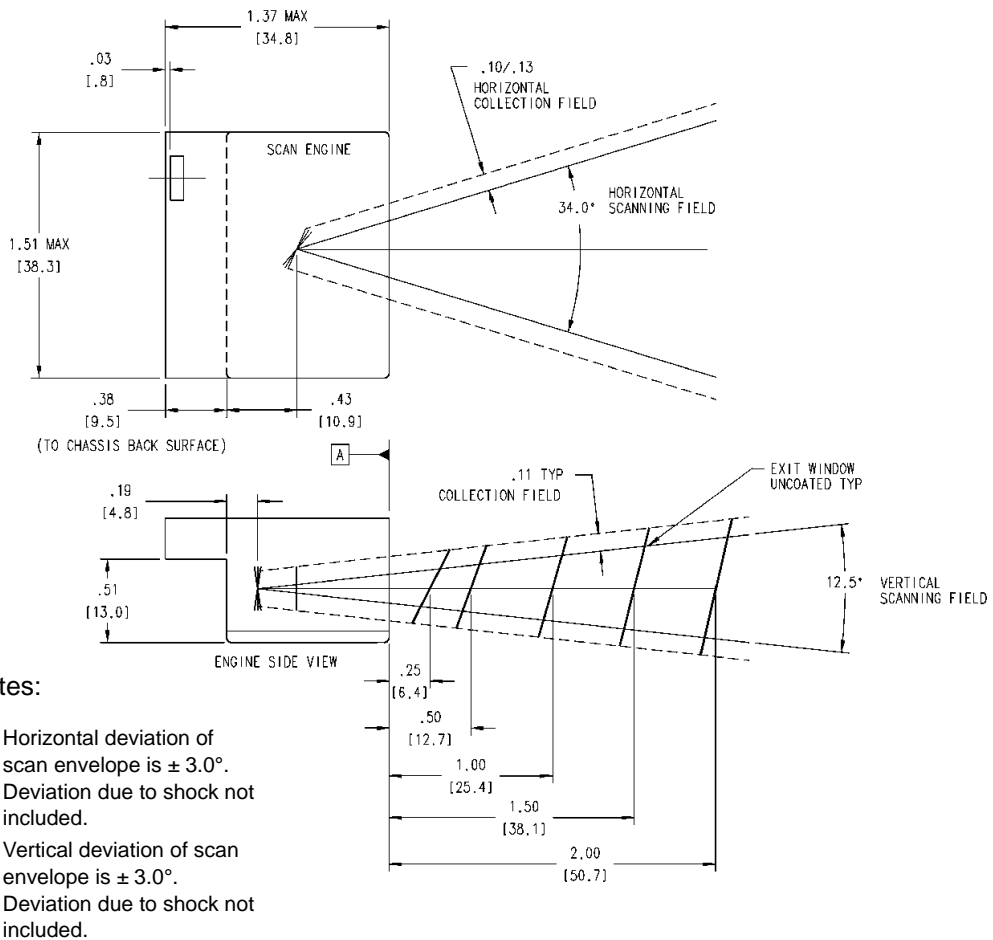


Figure 2-2. SE 2223 Optical Path

SE 3223 Optical Path and Exit Window

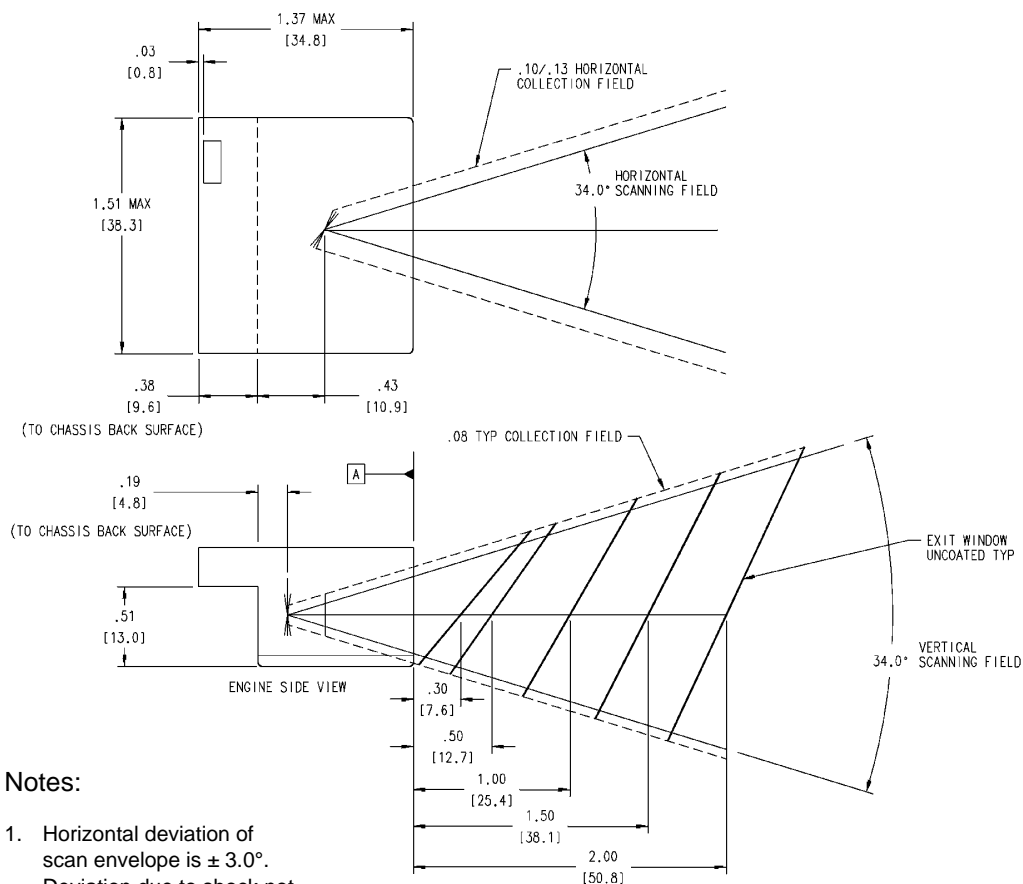

Notes:

1. Horizontal deviation of scan envelope is $\pm 3.0^\circ$. Deviation due to shock not included.
2. Vertical deviation of scan envelope is $\pm 3.0^\circ$. Deviation due to shock not included.

Figure 2-3. SE 3223 Optical Path




Table 2-9. SE 2223 Exit Window Height & Angles

Distance from Engine at Scan Center Line (in.)	0.25	.50	1.00	1.50	2.00
Minimum Window Width Coated or Uncoated	0.96	1.10	1.45	1.85	2.20
Minimum Window Height One Side Antireflective Coated or Uncoated (Note 1)	0.85	0.85	0.97	1.12	1.30
Minimum Window Tilt One Side Antireflective Coated or Uncoated (Note 2)	27°	20°	16°	14°	13°
Minimum Window Height Two Sides Antireflective Coated (Note 1)	0.70	0.75	0.92	1.10	1.25
Minimum Window Tilt Two Sides Antireflective Coated (Note 2)	12.5°	12.5°	12.5°	12.5°	12.5°
Notes: 1. Measured parallel to window surface. 2. Window may tilt away from or toward scan engine. 3. Mounting tolerances are not included.					


Interface Specifications

Table 2-10. SE 3223 Exit Window Height & Angles

Distance from Engine at Scan Center Line (in.)	.30	.50	1.00	1.50	2.00
Minimum Window Width Coated or Uncoated	1.10	1.25	1.60	1.95	2.30
Minimum Window Height One Side Antireflective Coated or Uncoated (Note 1)	1.50	1.55	1.90	2.25	2.60
Minimum Window Tilt One Side Antireflective Coated or Uncoated (Note 2)	40°	35°	30°	27°	25°
Minimum Window Height Two Sides Antireflective Coated (Note 1)	1.20	1.30	1.70	2.10	2.50
Notes: 1. Measured parallel to window surface. 2. Window may tilt away from or toward scan engine. 3. Mounting tolerances are not included.					

Table 2-10. SE 3223 Exit Window Height & Angles

Distance from Engine at Scan Center Line (in.)	.30	.50	1.00	1.50	2.00
Minimum Window Tilt Two Sides Antireflective Coated (Note 2)	24°	24°	24°	24°	24°
Notes: 1. Measured parallel to window surface. 2. Window may tilt away from or toward scan engine. 3. Mounting tolerances are not included.					



Flex Cable

A flex strip cable is used to connect the SE 3223 to your host interface. If desired, the flex strip is available from Symbol (p/n 15-10750-01).

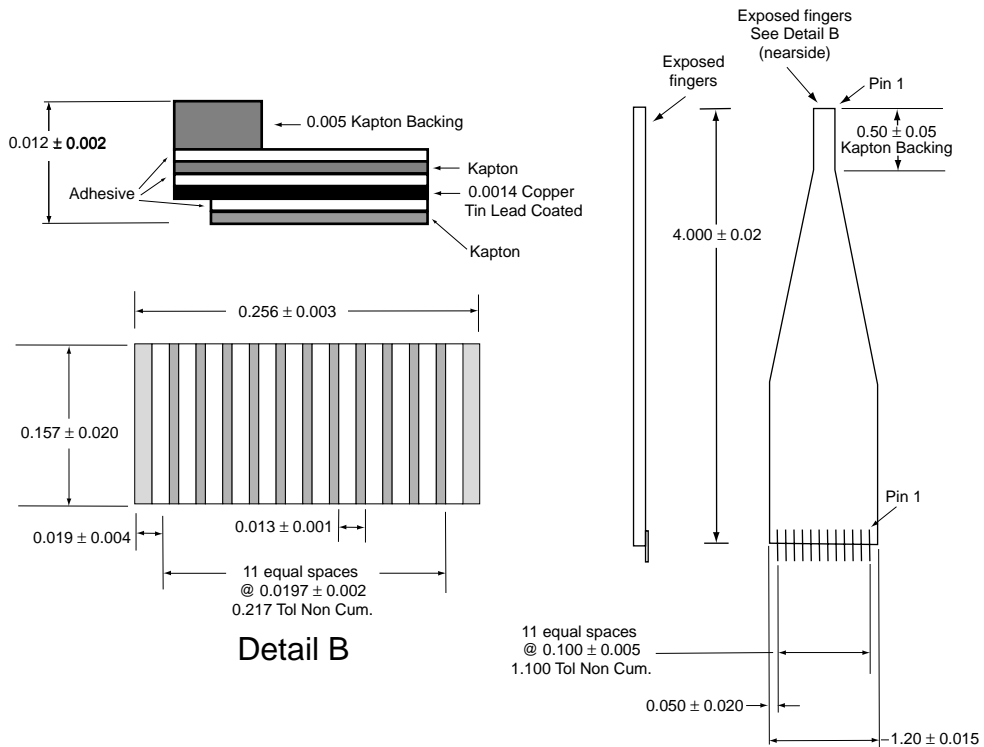



Figure 2-4. Flex Cable (For Evaluation)

Incoming Test Procedure ($V_{CC} = 5V$)


Test Fixture Requirements

A platform must be part of the test fixture, and it must tilt in the corresponding axes to compensate for the deviations. The pivoting point of this platform should be at or near the x-scan mirror.

For maximizing test efficiency, use the aim line prior to scanning the symbols.



SE 2223/3223 Scan Engine Integration Guide

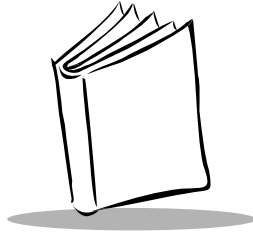

Chapter 3

SE 2223 Specifications

Technical Specifications

Table 3-1. SE 2223 Technical Specifications

Item	Description
Power Requirements	
Input Voltage	+5.0 VDC \pm 10%
Continuous Mode (max. current draw)	230 \pm 25 mA typical
Low Power (min. current draw)	6.5 \pm 3 mA max.
Idle (power applied, laser off)	80 mA \pm 10 mA typical
Surge Current	440 mA typical with 15 msec duration (using 5V supply with 10 ms rise time)
V_{cc} Noise Level	200 mV p to p max.
Laser Diode Power	1.2 mW maximum @ 650 nm
Scan Pattern	Cyclone, raster, line, dot
Start Time	0.065 sec. to 75% of steady state horizontal amplitude
Scan Angle	Horizontal: 34° \pm 1.5° Vertical: 12.5° \pm 1.5° Y-dithering (during operation): 0.8° \pm .16°
Beam Deviation (offset from the nominal)	Horizontal: \pm 3.0° Vertical: \pm 3.0° Horizontal tilt: \pm 2°





Table 3-1. SE 2223 Technical Specifications (Continued)

Item	Description
Additional Post Shock Beam Deviation (2000G Shock)	Horizontal: $\pm 3.0^\circ$ max Vertical: $\pm 6.0^\circ$ max
Scan Frequency: Horizontal	295 Hz \pm 5 Hz
Scan Frequency: Vertical	10 Hz \pm 2 Hz
Frame Rate	22 frames/sec. 11 Hz \pm 1 Hz (vertical)
Optical Resolution	Can decode a 6.6 mil (minimum X-dimension) symbol (PDF417); <i>Y-dimension must be 3X.</i>
Angular Orientation Tolerances	
Pitch	$\pm 30^\circ$ ("front to back")
Yaw	$\pm 15^\circ$ from plane parallel to symbol ("side-to-side")
Rotation	$\pm 4^\circ$ (for scanning benchmark label, assuming 3:1 codeword aspect ratio). Note that this is dependent on the decoder.
Specular Dead Zone	1.5" from front of chassis
Print Contrast Minimum	35% absolute dark/light reflectance differential (PDF); 35% absolute dark/light reflectance differential (1-D)
Humidity	5% to 95% non-condensing
Shock	2000 G. max, 0.85 ms sine
Vibration	Unpowered engine withstands a random vibration along each of the X, Y and Z axes for a period of one hour per axis, defined as follows: 20 to 80 Hz Ramp up to 0.04 G ² /Hz at the rate of 3dB/octave. 80 to 350 Hz 0.04 G ² /Hz 350 to 2000 Hz Ramp down at the rate of 3 dB/octave.
SCDS Memory	256Kb flash, 64Kb RAM
Ambient Light Immunity	
Sunlight	8000 ft. candles (86,112 lux) with correct enclosure
Incandescent	450 ft. candles (4845 lux)
Fluorescent	450 ft. candles (4845 lux)
Sodium Vapor	450 ft. candles (4845 lux)
Mercury	450 ft. candles (4845 lux)
Operating Temperature	-22° to 140° F; (-30° to 60° C) @ 100% duty cycle

Table 3-1. SE 2223 Technical Specifications (Continued)

Item	Description
Storage Temperature	-40° to 158° F; (-40° to 70° C)
Humidity	5% to 95% non-condensing
Dimensions	
Height	0.76 in. max. (1.93 cm) (see Figure 2-1)
Width	1.51 in. max. (3.84 cm) (see Figure 2-1)
Length	1.37 in. max. (3.48 cm) (see Figure 2-1)
Weight	1.4 oz. max. (40 gm)
Laser Class	The scan engine, by itself, is an unclassified component. It is intended for use in CDRH Class II (or Class IIa/IEC Class 1 with software to control the laser duty cycle) devices with proper housing, labeling, and instructions to comply with federal and/or international standards.



SE 2223 Scanning Specifications

SE 2223 1-D Decode Zone

Note: Typical performance at 68°F (20°C)
on high quality symbols in normal room light.
Vcc = 5V

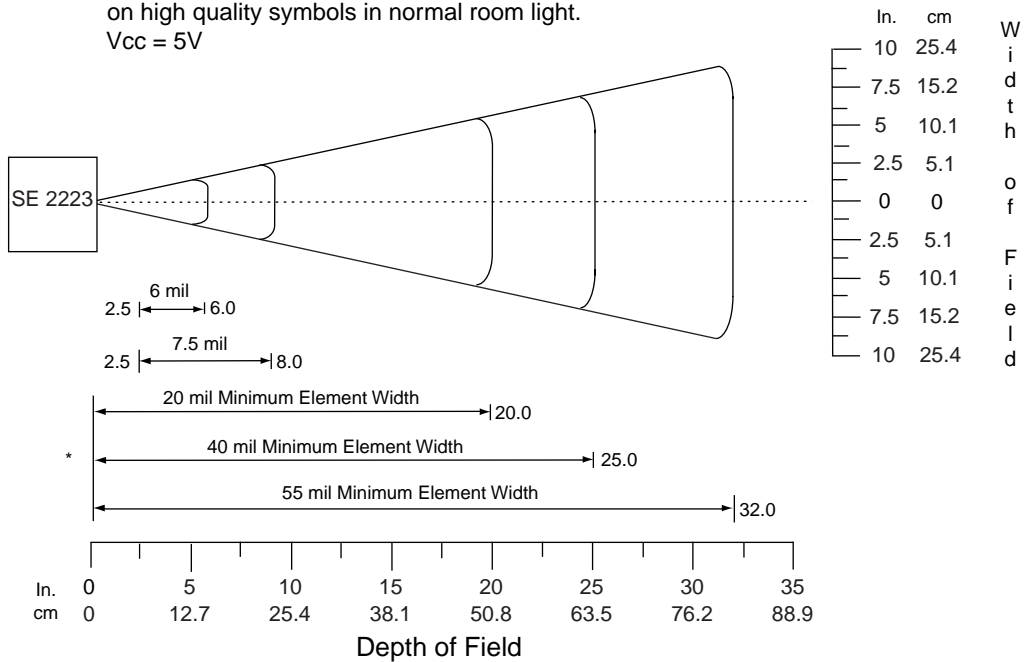


Figure 3-1. SE 2223 1-D Decode Zone

The decode zone is a function of various symbol characteristics including density, print contrast, wide to narrow ratio and edge acuity. Scanner is in horizontal orientation.

SE 2223 PDF Decode Zone

Note: Typical performance at 68°F (20°C) on high quality symbols in normal room light. Y-module dimension = 3X.
Vcc = 5V

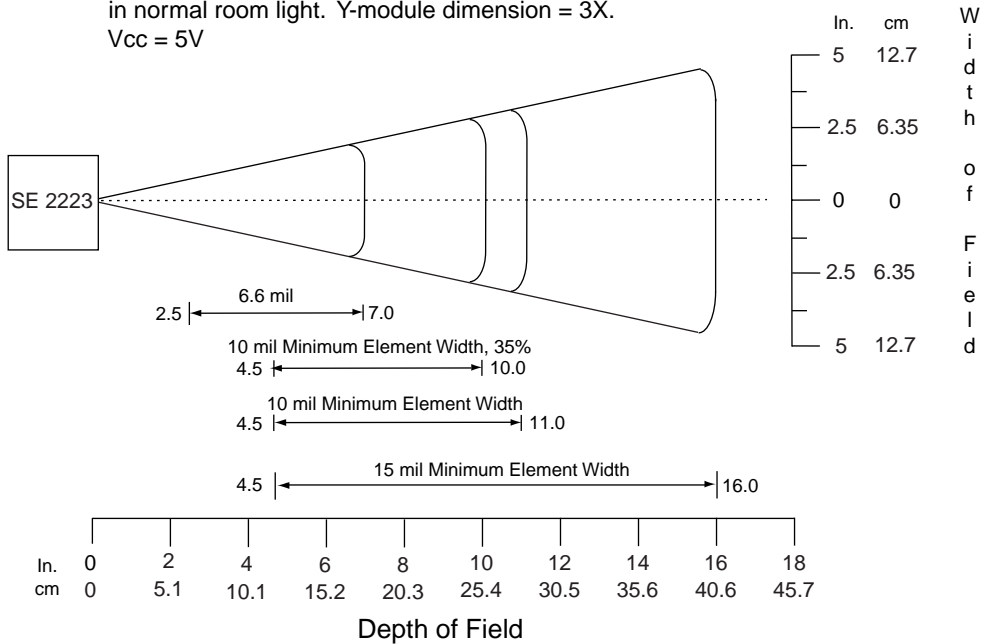



Figure 3-2. SE 2223 2-D Decode Zone

The decode zone is a function of various symbol characteristics including density, print contrast, wide to narrow ratio and edge acuity. Scanner is in horizontal orientation.

**Table 3-2. SE 2223 1-D Decode Distances**


Symbol Part Number	Symbol Density/ Bar Code Type	Bar Code Content/ Contrast ¹	Typical Working Ranges		Guaranteed Working Ranges	
			Near	Far	Near	Far
60-01755-01	6.0 mil Code 39	123 80% MRD	2.5 in 6.35 cm	6.0 in 15.24 cm	3.5 in 8.89 cm	4.75 in 12.07 cm
64-17452-01	7.5 mil Code 39	ABCDEF 80% MRD	2.5 in 6.35 cm	8.0 in 20.32 cm	3.25 in 8.26 cm	6.0 in 15.24 cm
64-05303-01	13 mil 100% UPC	012345678905 80% MRD	Note 2	15.0 in 38.10 cm	N/A	11.5 in 29.21 cm
64-17456-01	20 mil Code 39	123 80% MRD	Note 2	20.0 in 50.80 cm	N/A	15.0 in 38.10 cm
64-17457-01	40 mil Code 39	AB 80% MRD	Note 2	25.0 in 63.50 cm	N/A	19.0 in 48.26 cm
60-01601-01	55 mil Code 39	A 80% MRD	Note 2	32.0 in 81.28 cm	Note 2	26.0 in 66.04 cm

Notes:

1. CONTRAST measured as Mean Reflective Difference (MRD) at 650 nm.
2. Near ranges on lower densities (not specified) are largely dependent upon the width of the bar code and the scan angle.
3. Working range specifications: Photographic quality symbols, pitch = 15°, skew = 0°, roll = 0°, ambient light < 150 ft. candles, and temperature = 23 °C, Vcc = 5V
4. Measured from the front of the chassis.

Table 3-3. SE 2223 2-D Decode Distances

Symbol Part Number	Symbol Density/ Bar Code Type	Typical Working Ranges		Guaranteed Working Ranges	
		Near	Far	Near	Far
64-14035-01	6.6 mil, 80% MRD PDF417	2.5 in 6.35 cm	7.0 in 17.78 cm	See Note	5.75 in 14.61 cm
64-14937-01	10 mil, 35% MRD PDF417	4.5 in 11.43 cm	10.0 in 25.40 cm	See Note	6.0 in 15.24 cm
64-14037-01	10 mil, 80% MRD PDF417	4.5 in 11.43 cm	11.0 in 27.94 cm	See Note	8.5 in 21.59 cm
64-14038-01	15 mil, 80% MRD PDF417	4.5 in 11.43 cm	16.0 in 40.64 cm	See Note	14.0 in 35.56 cm
Note: Near ranges for some bar codes (typically low density) are limited by the scan angle.					



Pitch, Skew, and Specular Dead Zone (Horizontal Spread of Pattern)

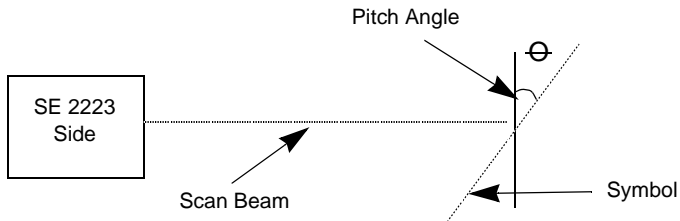


Figure 3-3. Pitch (Side View of Module)

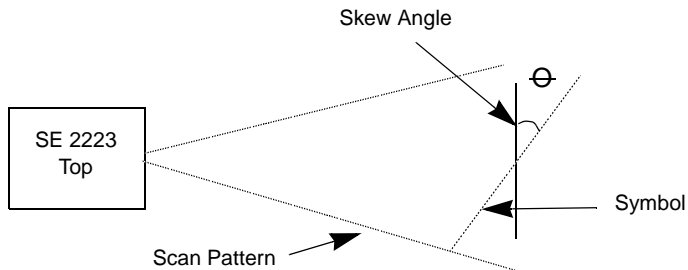


Figure 3-4. Yaw (Top View of Module)

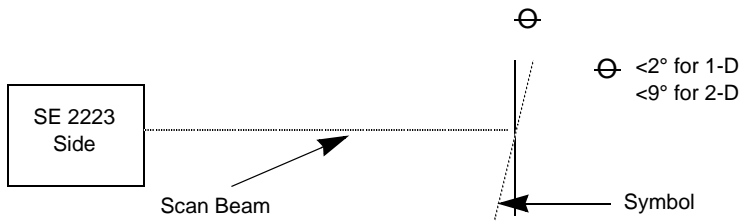


Figure 3-5. Specular Dead Zone (Side View of Module)

Decode Zone

The decode zone is a function of various symbol characteristics including density, print contrast, wide to narrow ratio and edge acuity. Width of field at any given distance must be considered when designing a system.

Usable scan length is calculated as follows (assuming 10% on each side of scan line is not decodable):

$$L = 1.8 \times (D+d) \times \tan (A/2)$$

Where:

D = Distance (in inches) from the front edge of the housing.

d = The housing's internal optical path (in inches) from the x mirror to the front edge of the housing.

A = Scan angle in degrees (34°).

So:

$$L = 1.8 \times (D+d) \times \tan 17^\circ$$

Note: Usable scan length determined by above formula, or 90% of scan line at any working distance.


The calculations above are based on good quality symbols in the center of the working range.

For 2D PDF417 symbols the height of the symbol must be considered to determine if the scanner can open in the Y direction sufficiently to read the symbol. The formula is the same as above except that the Y angle is 12.5°.

$$L = 1.8 \times (D + d) \times \tan (A/2)$$

$$L = 1.8 \times (D + d) \times \tan 6.25^\circ$$

If the above equation yields a greater height than the symbol height, the scan engine automatically adjusts the Y pattern to fit the symbol. If the symbol is taller, a manual swipe in the Y direction may be necessary to read the symbol.



SE 2223/3223 Scan Engine Integration Guide




Chapter 4

SE 2223VHD Specifications

Technical Specifications

Table 4-1. SE 2223VHD Technical Specifications


Item	Description
Power Requirements	
Input Voltage	+5.0 VDC \pm 10%
Continuous Mode (max. current draw)	230 \pm 25 mA typical
Low Power (min. current draw)	6.5 \pm 3 mA max.
Idle (power applied, laser off)	80 mA \pm 10 mA typical
Surge Current	440 mA typical with 15 msec duration (using 5V supply with 10 ms rise time)
V_{cc} Noise Level	200 mV p to p max.
Laser Diode Power	1.2 mW maximum @ 650 nm
Scan Pattern	Cyclone, raster, line, dot
Start Time	0.065 sec. to 75% of steady state horizontal amplitude
Scan Angle	Horizontal: 34° \pm 1.5° Vertical: 11.5° \pm 1.5° Y-dithering (during operation): 0.8° \pm 0.16°
Beam Deviation (offset from the nominal)	Horizontal: \pm 3.0° Vertical: \pm 3.0° Horizontal tilt: \pm 2°


Table 4-1. SE 2223VHD Technical Specifications (Continued)

Item	Description
Additional Post Shock Beam Deviation (2000G Shock)	Horizontal: $\pm 3.0^\circ$ max Vertical: $\pm 6.0^\circ$ max
Scan Frequency: Horizontal	295 Hz \pm 5 Hz
Scan Frequency: Vertical	10 Hz \pm 1 Hz
Frame Rate	20 frames/sec. 10 Hz \pm 1 Hz (vertical)
Optical Resolution	Can decode a 6.6 mil (minimum X-dimension) symbol (PDF417); <i>Y-dimension must be 3X.</i>
Angular Orientation Tolerances	
Pitch	$\pm 30^\circ$ ("front to back")
Yaw	$\pm 15^\circ$ from plane parallel to symbol ("side-to-side")
Rotation	$\pm 4^\circ$ (for scanning benchmark label, assuming 3:1 codeword aspect ratio). Note that this is dependent on the decoder.
Specular Dead Zone	1.5" from front of chassis
Print Contrast Minimum	35% absolute dark/light reflectance differential (PDF); 35% absolute dark/light reflectance differential (1-D)
Humidity	5% to 95% non-condensing
Shock	2000 G. max, 0.85 ms sine
Vibration	Unpowered engine withstands a random vibration along each of the X, Y and Z axes for a period of one hour per axis, defined as follows: 20 to 80 Hz Ramp up to 0.04 G ² /Hz at the rate of 3dB/octave. 80 to 350 Hz 0.04 G ² /Hz 350 to 2000 Hz Ramp down at the rate of 3 dB/octave.
SCDS Memory	256Kb flash, 64Kb RAM
Ambient Light Immunity	
Sunlight	8000 ft. candles (86,112 lux) with correct enclosure
Incandescent	450 ft. candles (4845 lux)
Fluorescent	450 ft. candles (4845 lux)
Sodium Vapor	450 ft. candles (4845 lux)
Mercury	450 ft. candles (4845 lux)
Operating Temperature	-22° to 140° F; (-30° to 60° C) @ 100% duty cycle

Table 4-1. SE 2223VHD Technical Specifications (Continued)

Item	Description
Storage Temperature	-40° to 158° F; (-40° to 70° C)
Humidity	5% to 95% non-condensing
Dimensions	
Height	0.76 in. max. (1.93 cm) (see Figure 2-1)
Width	1.51 in. max. (3.84 cm) (see Figure 2-1)
Length	1.37 in. max. (3.48 cm) (see Figure 2-1)
Weight	1.4 oz. max. (40 gm)
Laser Class	The scan engine, by itself, is an unclassified component. It is intended for use in CDRH Class II (or Class IIa/IEC Class 1 with software to control the laser duty cycle) devices with proper housing, labeling, and instructions to comply with federal and/or international standards.



SE 2223VHD Scanning Specifications

SE 2223VHD 1-D Decode Zone

Note: Typical performance at 68°F (20°C)
on high quality symbols in normal room light.
Vcc = 5V

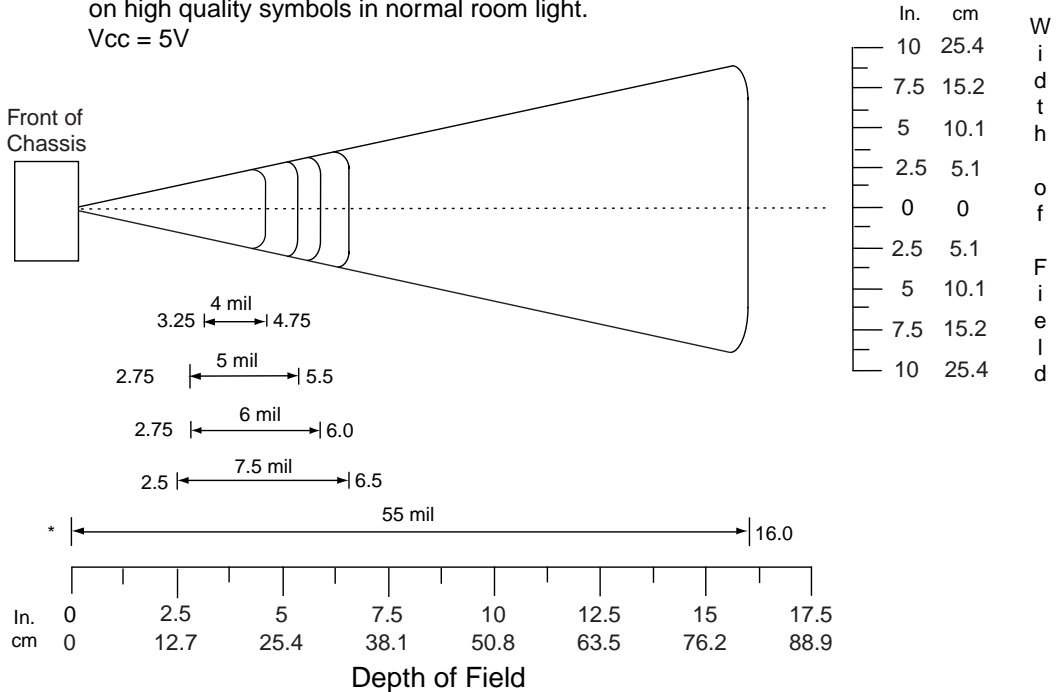


Figure 4-1. SE 2223VHD 1-D Decode Zone

The decode zone is a function of various symbol characteristics including density, print contrast, wide to narrow ratio and edge acuity. Scanner is in horizontal orientation.

SE 2223VHD PDF Decode Zone

Note: Typical performance at 68°F (20°C) on high quality symbols in normal room light. Y-module dimension = 3X.
Vcc = 5V

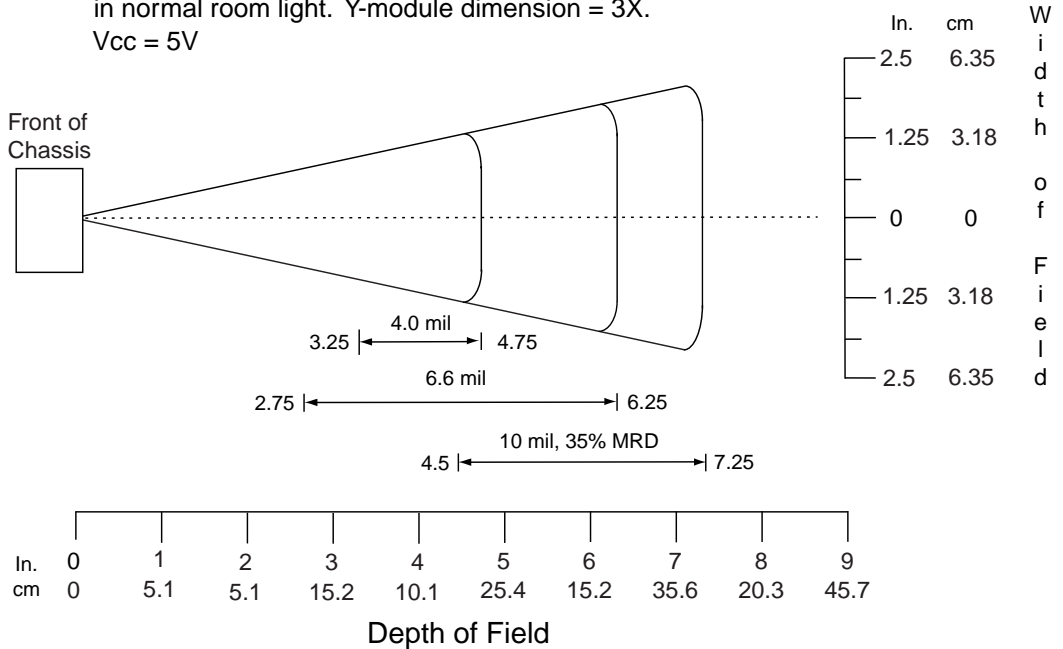



Figure 4-2. SE 2223VHD 2-D Decode Zone


The decode zone is a function of various symbol characteristics including density, print contrast, wide to narrow ratio and edge acuity. Scanner is in horizontal orientation.

**Table 4-2. SE 2223VHD 1-D Decode Distance**

Symbol Part Number	Symbol Density/ Bar Code Type	Bar Code Content/ Contrast ¹	Typical Working Ranges		Guaranteed Working Ranges	
			Near	Far	Near	Far
64-15660-01	4.0 mil Code 39	STI4026 80% MRD	3.25 in 8.26 cm	4.75 in 12.07 cm	3.75 in 9.53 cm	4.00 in 10.16 cm
64-18779-01	5 mil Code 39	STI5025 80% MRD	2.75 in 6.99 cm	5.50 in 13.97 cm	3.25 in 8.26 cm	4.75 in 12.07 cm
64-01755-01	6 mil Code 39	123 80% MRD	2.75 in 6.99 cm	6.0 in 15.24 cm	3.25 in 8.26 cm	5.50 in 13.97 cm
63-04191-01	7.5 mil Code 39	STI30F4 80% MRD	2.5 in 6.35 cm	6.5 in 16.51 cm	3.00 in 7.62 cm	6.00 in 15.24 cm
60-01601-01	55 mil Code 39	A 80% MRD	Note 2	16.0 in 40.64 cm	Note 2	13.5 in 34.29 cm
Notes: 1. CONTRAST measured as Mean Reflective Difference (MRD) at 650 nm. 2. Near ranges on lower densities (not specified) are largely dependent upon the width of the bar code and the scan angle. 3. Working range specifications: Photographic quality symbols, pitch = 15°, skew = 0°, roll = 0°, ambient light < 150 ft. candles, and temperature = 23 °C, Vcc = 5V 4. Measured from the front of the chassis.						

Table 4-3. SE-2223VHD 2-D Decode Distances

Symbol Part Number	Symbol Density/ Bar Code Type	Typical Working Ranges		Guaranteed Working Ranges	
		Near	Far	Near	Far
64-17025-01	4 mil, 80% MRD PDF417	3.25 in 8.26 cm	4.75 in 12.07 cm	3.65 in 9.27 cm	4.15 in 10.54 cm
64-14035-01	6.6 mil, 80% MRD PDF417	2.75 in 6.99 cm	6.25 in 15.88 cm	3.15 8.00 cm	5.75 in 14.61 cm
64-14937-01	10 mil, 35% MRD PDF417	4.5 in 11.43 cm	7.25 in 18.42 cm	5.35 in 13.59	6.25 in 15.88 cm



Pitch, Skew, and Specular Dead Zone (Horizontal Spread of Pattern)

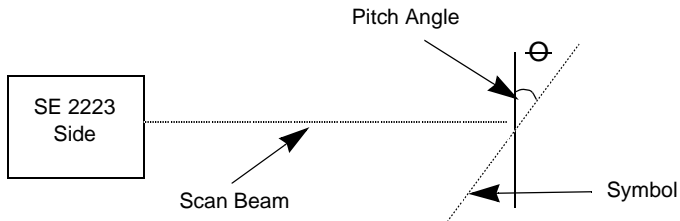


Figure 4-3. Pitch (Side View of Module)

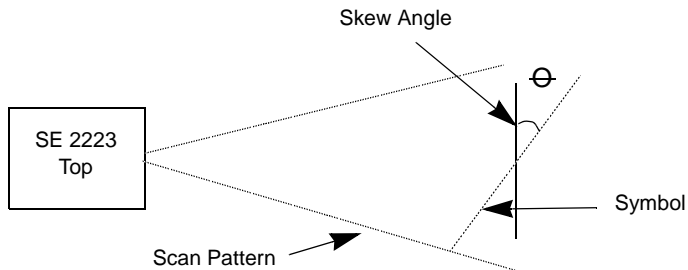


Figure 4-4. Yaw (Top View of Module)

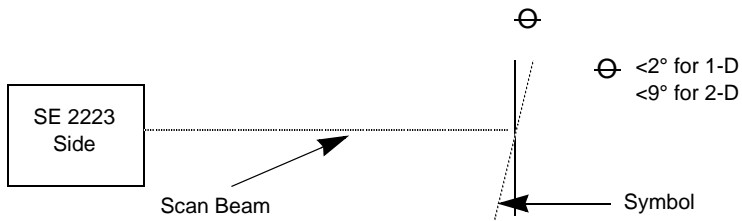


Figure 4-5. Specular Dead Zone (Side View of Module)

Decode Zone

The decode zone is a function of various symbol characteristics including density, print contrast, wide to narrow ratio and edge acuity. Width of field at any given distance must be considered when designing a system.

Usable scan length is calculated as follows (assuming 10% on each side of scan line is not decodable):

$$L = 1.8 \times (D+d) \times \tan (A/2)$$

Where:

D = Distance (in inches) from the front edge of the housing.

d = The housing's internal optical path (in inches) from the x mirror to the front edge of the housing.

A = Scan angle in degrees (34°).

So:

$$L = 1.8 \times (D+d) \times \tan 17^\circ$$

Note: Usable scan length determined by above formula, or 90% of scan line at any working distance.


The calculations above are based on good quality symbols in the center of the working range.

For 2D PDF417 symbols the height of the symbol must be considered to determine if the scanner can open in the Y direction sufficiently to read the symbol. The formula is the same as above except that the Y angle is 11.5°.


$$L = 1.8 \times (D + d) \times \tan (A/2)$$

$$L = 1.8 \times (D + d) \times \tan 5.75^\circ$$

If the above equation yields a greater height than the symbol height, the scan engine automatically adjusts the Y pattern to fit the symbol. If the symbol is taller, a manual swipe in the Y direction may be necessary to read the symbol.



SE 2223/3223 Scan Engine Integration Guide

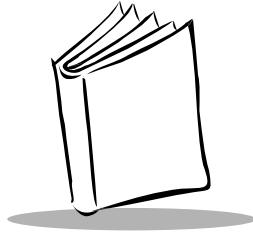


Chapter 5

SE 3223 Specifications

Technical Specifications

Table 5-1. SE 3223 Technical Specifications


Item	Description
Power Requirements	
Input Voltage	+5.0 VDC \pm 10%
Continuous Mode (max. current draw)	230 \pm 25 mA typical
Low Power (min. current draw)	6.5 \pm 3 mA typical
Idle (power applied, laser off)	80 mA \pm 10 mA typical
Surge Current	440 mA typical with 15 msec duration (using 5V supply with 10 ms rise time)
V_{CC} Noise Level	200 mV p to p max.
Laser Diode Power	.83 mW maximum @ 650 nm
Scan Pattern	Cyclone, raster, line, dot
Start Time:	0.065 sec. to 75% of steady state horizontal amplitude
Scan Angle (Cyclone)	Horizontal: 34° \pm 1.5° Vertical: 34° \pm 1.5°
Scan Angle (Raster)	Horizontal: 34° \pm 1.5° Vertical: 12.5° \pm 1.5°


Table 5-1. SE 3223 Technical Specifications (Continued)

Item	Description
Beam Deviation - raster (offset from the nominal)	Horizontal = $\pm 3.0^\circ$; Vertical = $\pm 3.0^\circ$ Horizontal tilt: $\pm 2^\circ$.
Additional Post Shock Beam Deviation - raster (2000G shock)	Horizontal = $\pm 3.0^\circ$ max; Vertical = $\pm 6.0^\circ$ max
Beam Deviation - cyclone (offset from the nominal)	Horizontal = $\pm 3.0^\circ$; Vertical = $\pm 3.0^\circ$ Horizontal tilt: $\pm 2^\circ$.
Additional Post Shock Beam Deviation - cyclone (2000G shock)	Horizontal = $\pm 3.0^\circ$ max; Vertical = $\pm 3.0^\circ$ max
Scan Frequency: Horizontal	320 Hz ± 5 Hz
Scan Frequency: Vertical	295 Hz ± 5 Hz
Frame Rate	20 frames/sec. 10 Hz ± 1 Hz (vertical raster)
Optical Resolution	Can decode a 6.6 mil (minimum X-dimension) symbol (PDF417); <i>Y-dimension must be 3X.</i>
Angular Orientation Tolerances	
Pitch	$\pm 30^\circ$ ("front to back")
Yaw	$\pm 15^\circ$ from plane parallel to symbol ("side-to-side")
Rotation	$\pm 4^\circ$ (for scanning benchmark label, assuming 3:1 codeword aspect ratio). Note that this is dependent on the decoder.
Specular Dead Zone	1.5" from front of chassis
Print Contrast Minimum	40% absolute dark/light reflectance differential (PDF); 35% absolute dark/light reflectance differential (1-D)
Humidity	5% to 95% non-condensing
Shock	2000 G. max, 0.85 ms sine
Vibration	Unpowered engine withstands a random vibration along each of the X, Y and Z axes for a period of one hour per axis, defined as follows: 20 to 80 Hz Ramp up to $0.04 \text{ G}^2/\text{Hz}$ at the rate of 3dB/octave. 80 to 350 Hz $0.04 \text{ G}^2/\text{Hz}$ 350 to 2000 Hz Ramp down at the rate of 3 dB/octave.
SCDS Memory	256Kb flash, 64Kb RAM
Ambient Light Immunity	
Sunlight	8000 ft. candles (86,112 lux) with correct enclosure

Table 5-1. SE 3223 Technical Specifications (Continued)

Item	Description
Incandescent	450 ft. candles (4845 lux)
Fluorescent	450 ft. candles (4845 lux)
Sodium Vapor	450 ft. candles (4845 lux)
Mercury	450 ft. candles (4845 lux)
Operating Temperature	-22° to 140° F; (-30° to 60° C) @ 100% duty cycle
Storage Temperature	-40° to 158° F; (-40° to 70° C)
Humidity	5% to 95% non-condensing
Dimensions	
Height	0.76 in. max. (1.93 cm) (see Figure 2-1)
Width	1.51 in. max. (3.84 cm) (see Figure 2-1)
Length	1.37 in. max. (3.48 cm) (see Figure 2-1)
Weight	1.4 oz. max. (40 gm)
Laser Class	The scan engine, by itself, is an unclassified component. It is intended for use in CDRH Class II (or Class IIa/IEC Class 1 with software to control the laser duty cycle) devices with proper housing, labeling, and instructions to comply with federal and/or international standards.



SE 3223 Scanning Specifications

SE 3223 Slab/Raster Decode Zone

Note: Typical performance at 68°F (20°C) on high quality symbols in normal room light.
Vcc = 5V

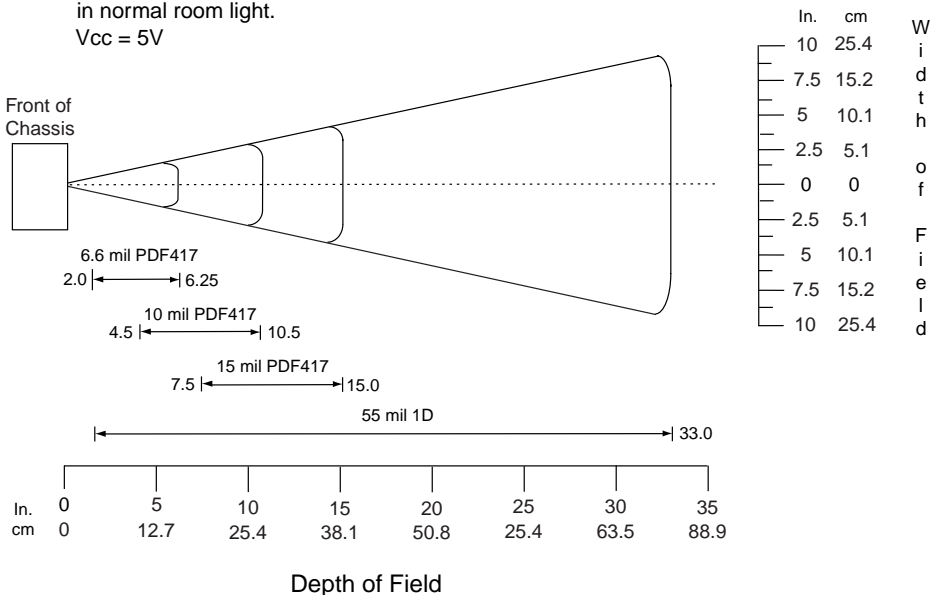


Figure 5-1. SE 3223 Slab/Raster Decode Zone

The decode zone is a function of various symbol characteristics including density, print contrast, wide to narrow ratio and edge acuity. Scanner is in horizontal orientation.

SE 3223 Omnidirectional Decode Zone

Note: Typical performance at 68°F (20°C) on high quality symbols
in normal room light.
Vcc = 5V

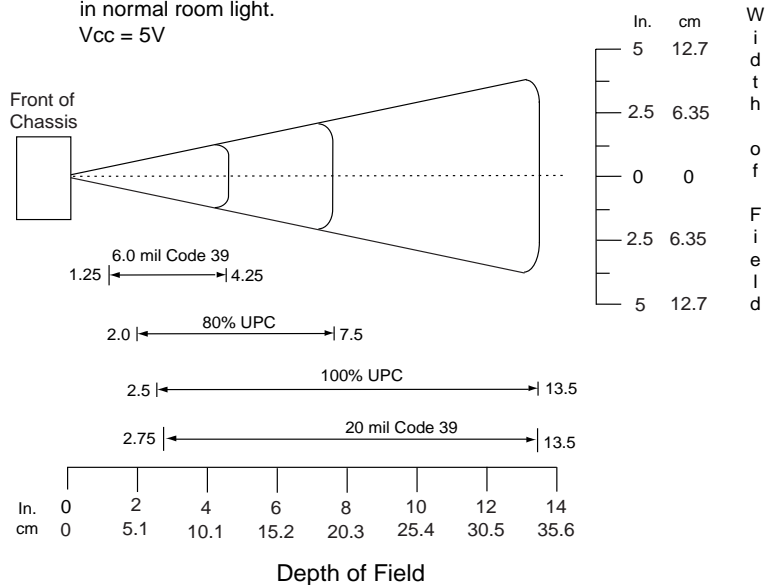


Figure 5-2. SE 3223 Omnidirectional Decode Zone

Table 5-2. SE 3223 Slab/Raster Decode Distances

Symbol Part Number	Symbol Density/ Bar Code Type	Typical Working Ranges		Guaranteed Working Ranges	
		Near	Far	Near	Far
64-14035-01	6.6 mil 2D	2.0 in 5.08 cm	6.25 in 15.88 cm	2.5 in 6.35 cm	4.75 in 12.07 cm
64-14037-01	10 mil 2D	4.5 in 11.43 cm	10.5 in 26.67 cm	6.0 in 15.24 cm	8.5 in 21.59 cm
64-14038-01	15 mil 2D	7.5 in 19.05 cm	15.0 in 38.1 cm	*See note	12.0 in 30.48 cm
60-01601-01	55 mil 1D	*2.0 in 5.08 cm	33 in 83.82 cm	N/A	23.0 in 58.42 cm
*Near ranges on are largely dependent upon the width of the bar code and the scan angle.					



Table 5-3. SE 3223 Omnidirectional Decode Distances

Symbol Part Number	Symbol Density/ Bar Code Type	Bar Code Content/ Contrast ¹	Typical Working Ranges		Guaranteed Working Ranges	
			Near	Far	Near	Far
60-01755-01	6.0 mil Code 39	123 80% MRD	1.25 in 3.18 cm	4.25 in 10.80 cm	1.75 in 4.45 cm	3.25 in 8.26 cm
64-06629-01	80% UPC	ABCDEF 80% MRD	2.0 in 5.08 cm	7.5 in 19.05 cm	2.5 in 6.35 cm	5.5 in 13.97 cm
64-05303-01	13 mil 100% UPC	012345678905 80% MRD	2.5 in 6.35 cm	13.5 in 34.29 cm	Note 2	10.5 in 26.67 cm
60-02710-03	20 mil 1D LC 35%	123 80% MRD	2.75 in 13.97 cm	13.5 in 34.29 cm	Note 2	11.0 in 27.94 cm

Notes:

1. CONTRAST measured as Mean Reflective Difference (MRD) at 650 nm.
2. Near ranges on are largely dependent upon the width of the bar code and the scan angle.
3. Working range specifications: Photographic quality symbols, pitch = 15°, skew = 0°, roll = 0°, ambient light < 150 ft. candles, and temperature = 23 °C, Vcc = 5V
4. Measured from the front of the chassis.

Pitch, Skew, and Specular Dead Zone (Horizontal Spread of Pattern)

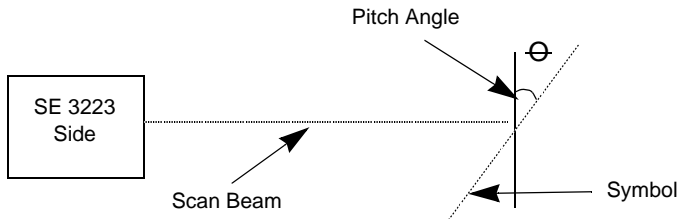


Figure 5-3. Pitch (Side View of Module)

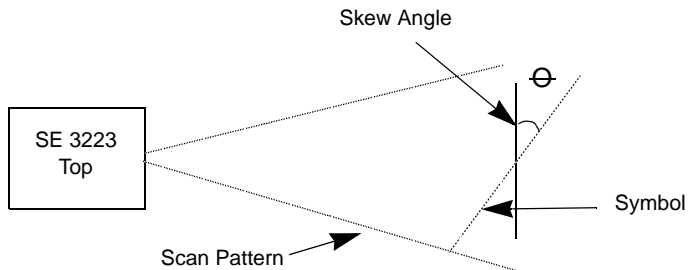


Figure 5-4. Yaw (Top View of Module)


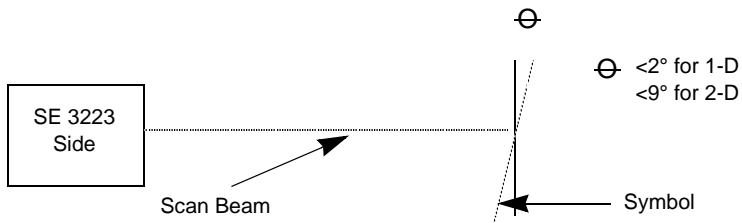


Figure 5-5. Specular Dead Zone (Side View of Module)



Decode Zone

The decode zone is a function of various symbol characteristics including density, print contrast, wide to narrow ratio and edge acuity. Width of field at any given distance must be considered when designing a system.

Usable scan length is calculated as follows (assuming 10% on each side of scan line is not decodable):

$$L = 1.8 \times (D+d) \times \tan (A/2)$$

Where:

D = Distance (in inches) from the front edge of the housing.

d = The housing's internal optical path (in inches) from the x mirror to the front edge of the housing.

A = Scan angle in degrees (34°).

So:

$$L = 1.8 \times (D+d) \times \tan 17^\circ$$

Note: Usable scan length determined by above formula, or 90% of scan line at any working distance.


The calculations above are based on good quality symbols in the center of the working range.

For 2D PDF417 symbols the height of the symbol must be considered to determine if the scanner can open in the Y direction sufficiently to read the symbol. The formula is the same as above except that the Y angle is 12.5°.

$$L = 1.8 \times (D + d) \times \tan (A/2)$$

$$L = 1.8 \times (D + d) \times \tan 6.25^\circ$$

If the above equation yields a greater height than the symbol height, the scan engine automatically adjusts the Y pattern to fit the symbol. If the symbol is taller, a manual swipe in the Y direction may be necessary to read the symbol.

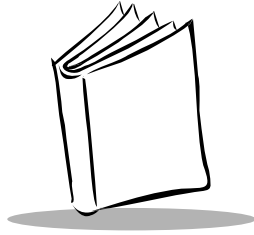

Chapter 6

End-User Documentation

Following are suggested topics to cover when creating end user documentation.

Scanning Hints

Position at an Angle


The bar codes to be read should not be presented to the scanner perpendicularly. This orientation permits too much light to be reflected back into the photodiode, blinding the optics. Position bar codes at a 15° angle to the scanner.

Scan the Entire Symbol

Be sure the bar codes are positioned so that the scan beam crosses all the bars and spaces.


Troubleshooting

- Check all the connections to be sure they are secure.
- Check the system power.
- Be sure the interface controller is programmed to read the type of bar codes you are trying to decode.
- Make sure the symbol is not defaced.
- Be sure the symbol is aligned correctly and is within the range of the scanner.



Servicing

Provide a phone number, and if appropriate, a procedure for returning the scanner for servicing.

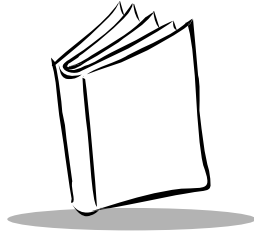

Chapter 7

Regulatory Requirements


This scan element does not comply with 21 CFR 1040. It is to be used only as a component. It is the buyer's responsibility to comply with all federal laser safety regulations and submit an FDA Laser Product Report.

Laser products are regulated by federal safety standards administered by the Center for Devices and Radiological Health (CDRH), Food and Drug Administration.

The following label appears on the shipping tray.

THIS DEVICE DOES NOT
COMPLY WITH 21 CFR 1040.
USE ONLY AS A COMPONENT.
symbol technologies.

The following section outlines the legal requirements for the United States, Canada, and Europe. This scan engine (SE 2223/3223) is designed to comply with the U.S. and foreign standards for Information Technology Equipment (ITE).



United States

Food and Drug Administration, Center For Devices and Radiological Health (CDRH)

U.S. Federal Laser Product Performance Standard

Laser products fall into two major categories, components and finished products. The scan engine is a component. When placed in a properly labeled housing it becomes a laser product.

The FDA requires a laser product report to be on file with the FDA prior to introducing the product into commerce. The person (i.e., a one-person operation) or company who places the scan engine into a housing is the “manufacturer” of this laser product. This “manufacturer” establishes the specifications for the finished product and is responsible for compliance with Federal CDRH laser product requirements. These Federal regulations include:

21 CFR Subchapter J - Radiological Health:

Part 1000 - General

Part 1002 - Records And Reports

Part 1003 - Notification Of Defects Or Failure To Comply

Part 1004 - Repurchase, Repairs, Or Replacement Of Electronic Products

Part 1005 - Importation Of Electronic Products

Part 1010 - Performance Standards For Electronic Products: General

Part 1040 - Performance Standards For Light-Emitting Products

Under the requirements of Part 1040 the manufacturer is required to classify the laser product, and then certify through the Laser Product Report that all requirements (performance features) of the standard have been complied with.

To support the customer with the FDA filing requirements, the scan engine has been registered with the FDA as a component under the following model number scheme: SE-3XXXXXX-XXXXX, SE-2XXXXXX-XXXXX. Customers are encouraged to refer to this

model number and Symbol Technologies Inc. in their laser product report. For more information the customer should contact:

Center For Devices And Radiological Health
Office of Compliance
Attn.: Electronic Product Report
2098 Gaither Road
Rockville, MD 20850
(301) 594-4654
www.fda.gov/cdrh/index.html

The Code Of Federal Regulations (CFR 21) is available from:

Superintendent Of Documents
U.S. Government Printing Office
Washington D.C. 20402

Note: *State and local governments may regulate the use of products containing lasers. The manufacturer should consult the applicable government regulations for more information.*

Federal Communications Commission (EMI/RFI)

Certain combinations of scan engines and associated electronics may require testing to insure compliance with the following federal regulation:


47 CFR Part 15

Note: *Scan engines used with RF equipment, modems, etc. may require examination(s) to the standard(s) for the specific equipment combination. It is the manufacturer's responsibility to comply with the applicable federal regulation(s).*

Canada

Health And Welfare Canada (Laser Safety)

Products meeting the FDA standards are currently accepted in Canada by Health And Welfare Canada, Bureau Of Radiation And Medical Devices.



For more information the customer should contact:

Health And Welfare Canada
Health Protection Branch
Bureau Of Radiation And Medical Devices
Room 233
Environmental Health Centre
Tunney's Pasture
Ottawa, Ontario K1A 0L2

Department Of Communications (EMI/RFI)

Products meeting FCC 47 CFR Part 15 will meet DOC standards for computing equipment.
Additional testing is not required.

Europe

Laser Safety

IEC 825-1:1993 + A1:1997 & EN60825-1:1994 + A11:1996 "Safety Of Laser Products And Equipment Classification, Requirements And User's Guide."

Note: *Non-EC countries may impose additional testing/certification requirements.*

EMI/RFI

Certain combinations of scan engines and associated electronics may require certification of compliance with the European EMI/RFI directive. EMI/RFI compliance of finished products in Europe may be accomplished via one of two strategies:

- The manufacturer may certify to the EC's Electromagnetic Compatibility Directive 89/336/EEC. Compliance allows placing the product in any EC nation.
- The manufacturer may meet EMI/RFI requirements on a country-by-country basis.

Testing and certification may be conducted by TUV Rheinland or other European "Notified" Laboratory.


For more information the customer should contact TUV or:

Interference Technology International
41-42 Shrivenham Hundred Business Park
Shrivenham, Swindon
Wilts, SN6 8TZ
England

Note: *Non-EC countries may impose additional testing/certification requirements.*


Electrical Safety

The scan engine conforms to the European Low Voltage directive. Additional testing/certification is not required.



Patents and Licenses


No license is granted, either expressly or by implication, estoppel, or otherwise under any patent right or patent, covering or relating to any combination, system, apparatus, machine, material, method, or process in which Symbol products might be used. An implied license only exists for equipment, circuits, and subsystems contained in Symbol products.

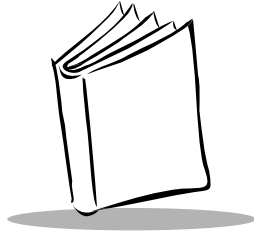

Chapter 8

Application Notes

This chapter includes AC electrical characteristics as well as timing information.



AC Electrical Characteristics


For the AC electrical characteristics shown in [Table 8-1](#), $T_{amb} = -30^{\circ}\text{C}$ to 60°C , $V_{BATT} = 4.5\text{ V}$ to 5.5 V . All output lines are measured with 10K pull-up.

Table 8-1. Timing Characteristics

Symbol	Figure	Parameter	Min	Max	Unit
General Characteristics					
t_f	Figure 8-1	High-to-Low fall time, all outputs, $C_L = 50\text{ pF}$		1.0	μsec
t_r	Figure 8-1	Low-to-High rise time, all outputs, $C_L = 50\text{ pF}$		1.0	μsec
Serial I/O Timing, Host Transmit					
$trlcl$	Figure 8-2	Request to Send low to Clear to Send low	0	25	msec
$tclxl$	Figure 8-2	Clear to Send low to first start bit		note 2	
$txlxl$	Figure 8-2	Byte to byte delay, (see note 1)		990	msec
Serial I/O Timing, Decoder Transmit, (see Note 3)					
$tlvvl$	Figure 8-4	Byte to byte delay, (see note 1)		99	msec
$tvhvh$	Figure 8-3	End of the packet to RTS* high		note 4	msec
Notes: 1. If byte to byte delay exceeds the maximum specified time, a transmission error occurs. The sender must retransmit the entire packet. 2. The host may hold the Host RTS* low indefinitely, but it locks out the SE 2223/3223 from transmitting. 3. The decoder may transmit any time the Host RTS* is high. 4. The host should release its Host RTS* as soon as possible after transmitting so that the decoder can process the message. 5. The SE 2223/3223's micro-controller is in full operation whenever the PWRDWN line is driven low. 6. See Power Management on page 1-5 if trigger is not pulled after the maximum specified amount of time. 7. In addition, refer to Parameter # 88h on page 9-13 and Parameter # 8Ah on page 9-15.					

Table 8-1. Timing Characteristics (Continued)

Symbol	Figure	Parameter	Min	Max	Unit
Hardware Trigger Timing					
tglwl	Figure 8-5	Trigger hold time, level trigger mode, (see note 6)	6		msec
tghtw	Figure 8-5	Trigger release time, level trigger mode (see note 6)	25		msec
tglwl	Figure 8-5	Trigger hold time, pulse trigger mode, (see note 6)	6		msec
tghtw	Figure 8-5	Trigger release time, pulse trigger mode, (see note 6)	25		msec
Beeper Timing					
tblht	Figure 8-6	Beeper frequency	1800	2500	Hz
Power Up Timing					
tehpm	Figure 8-7	V _{BATT} rise time		10	msec
Wake Up Timing					
taldl	Figure 8-8	From wake up to full operation, (see note 5)		TBD	msec
tdlgl	Figure 8-8	Trigger low after full operation, (see notes 6 and 7)	0	TBD	sec
Notes: 1. If byte to byte delay exceeds the maximum specified time, a transmission error occurs. The sender must retransmit the entire packet. 2. The host may hold the Host RTS* low indefinitely, but it locks out the SE 2223/3223 from transmitting. 3. The decoder may transmit any time the Host RTS* is high. 4. The host should release its Host RTS* as soon as possible after transmitting so that the decoder can process the message. 5. The SE 2223/3223's micro-controller is in full operation whenever the PWRDWN line is driven low. 6. See Power Management on page 1-5 if trigger is not pulled after the maximum specified amount of time. 7. In addition, refer to Parameter # 88h on page 9-13 and Parameter # 8Ah on page 9-15.					



Timing Waveforms

Explanation Of The AC Symbols


Each timing symbol has five characters. The first character is always “t.” The other characters indicate the name of the signal or the logical status of that signal. Designations are:

a = WKUP*
b = BPR
c = Host CTS
d = PWRDWN
e = PWREN
f = float, fall time
g = trigger
h = logic level high
l = logic level low
pm = minimum voltage level
r = Host RTS
tw = time duration
v = Host RXD
w = width
x = Host TXD

Example:

tbltw = Beeper drive low time
trlcl = Time for RTS low to CTS low

AC Test Points



Note: AC inputs during testing are driven at $V_{BATT} - 0.5$ for logic “1” and 0.45 for logic “0.” Timing measurements are made at $0.2 V_{BATT} + 0.9$ and $0.2 V_{BATT} - 0.1$.

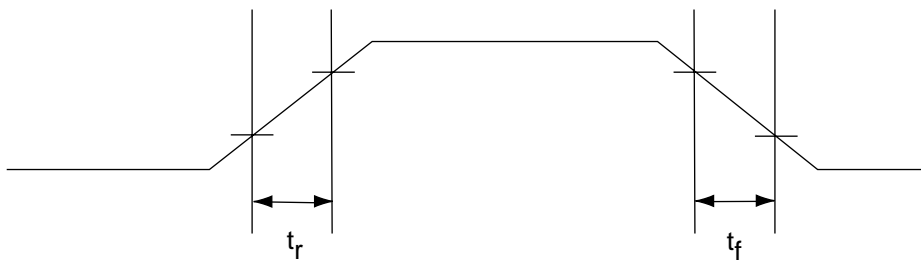


Figure 8-1. General Characteristics

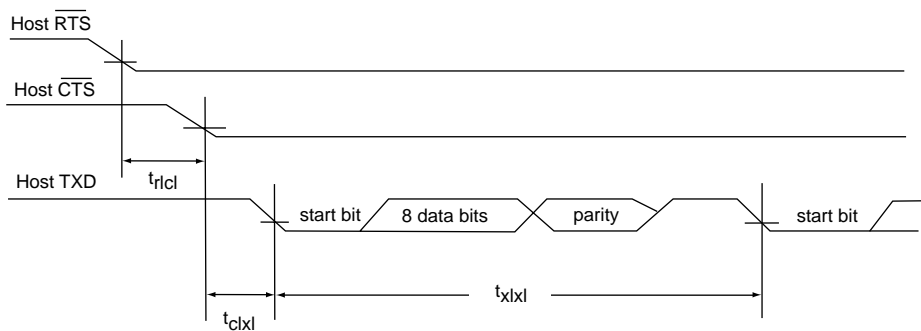


Figure 8-2. Serial I/O Timing, Host Transmit

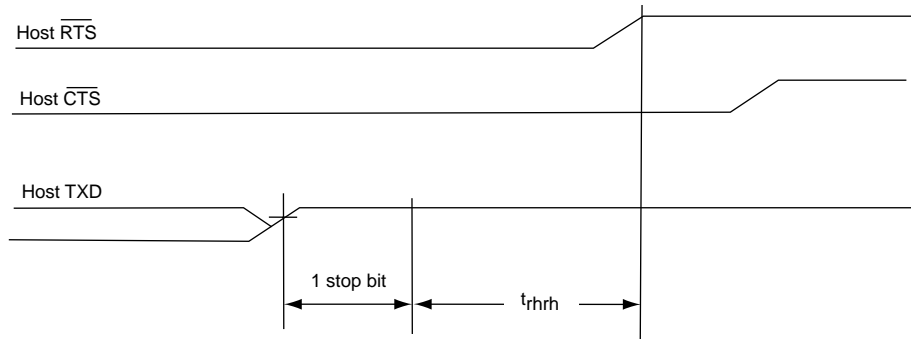



Figure 8-3. Serial I/O Timing, Host Transmit

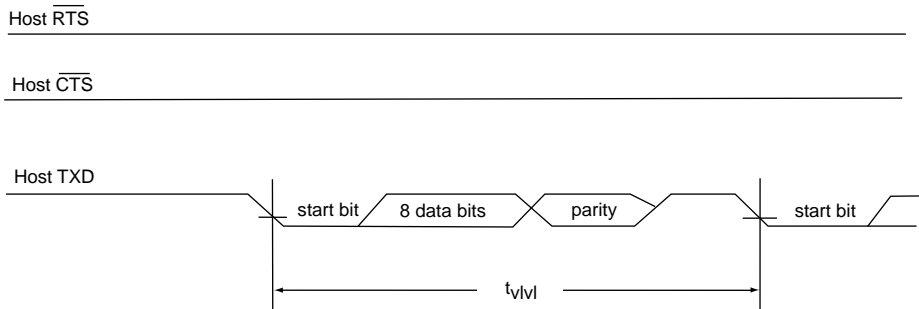


Figure 8-4. Serial I/O Timing, Decoder Transmit




Figure 8-5. Hardware Trigger Timing




Figure 8-6. Beeper Timing




Figure 8-7. V_{BATT} Rise Time



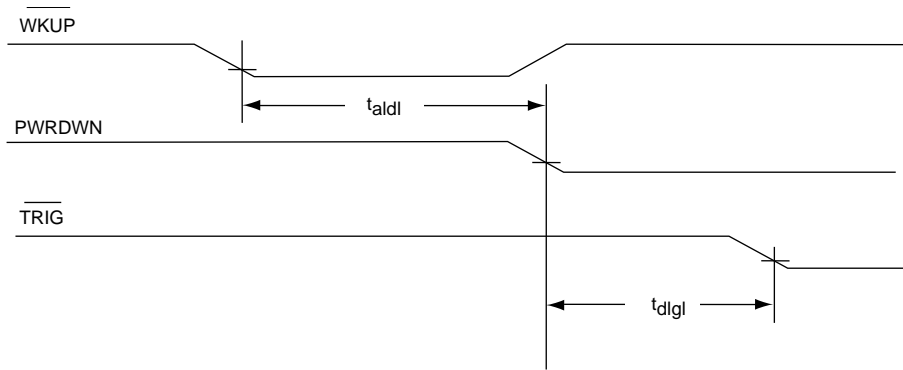


Figure 8-8. Wake Up Timing

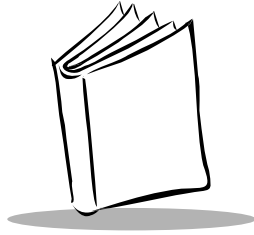

Chapter 9

Parameter Menus

This chapter describes the programmable parameters, provides bar codes for programming, and hexadecimal equivalents for host download programming.

Operational Parameters


The SE 2223/3223 is shipped with the default settings shown in [Table 9-2 on page 9-3](#). These default values are stored in non-volatile memory and are preserved even when the scanner is powered down.

You can change the default values by:

- Scanning the appropriate bar codes in this chapter. These new values replace the standard default values in memory. The default parameter values can be recalled by scanning the [Set All Defaults](#) bar code on page [9-10](#).

or

- Downloading data through the scan engine's serial port using Symbol's Simple Serial Interface (SSI). Hexadecimal parameter numbers are shown in this chapter below the parameter title, and options are shown in parenthesis beneath the accompanying bar codes. Detailed instructions for changing parameters using this method are found in the *Simple Serial Interface (SSI) Programmer's Guide*.



Simple Serial Interface (SSI)

The *Simple Serial Interface (SSI) Programmer's Guide* provides general information on SSI, includes information on the decoder's hardware signals, and details the commands. The following SSI information is specific to the SE 2223/3223 Scan Engine.

SE 2223/3223 Revision String

When the decoder sends the `REPLY_REVISION` message, the revision string is in the following format:

```
SW_REVISION <space> BOARD_TYPE <space> ENGINE_CODE <space> PGM_CHKSUM
```

Where:

- **SW_REVISION** is the release name of the software
- **BOARD_TYPE** is N for non-flash decoder board, F for flash
- **ENGINE_CODE** indicates the type of scan engine paired with the decoder
- **PGM_CHKSUM** is the two byte checksum of the program code.

[Table 9-1](#) lists the scan engine codes identifying the SE 2223/3223 when using SSI.

Table 9-1. Scan Engine Codes

Engine Code	Engine Description
38h	SE 2223 Standard
48h	SE 3223 Standard
3Eh	SE 2223VHD

SSI Commands Not Supported

The following SSI Commands included in the *Simple Serial Interface (SSI) Programmer's Guide* are NOT supported by the SE 2223/3223 Scan Engine:

- C4h AIM_OFF
- C5h AIM_ON
- B1h IMAGE_DATA
- F7h IMAGER_MODE
- B4h VIDEO_DATA

Multipackaging


The SE 2223/3223 only supports Multipackaging Option 1.

Default Table

Table 9-2 lists the defaults for all parameters, and the page number each parameter appears on. If you wish to change any option, scan the appropriate bar code(s).

Table 9-2. Default Table

Parameter	Parameter Number	Default	Page Number
Set Default Parameter		All Defaults	9-10
Scanning Options			
Beeper Tone	91h	High Frequency	9-11
LED Mode	F0h 51h	Decode LED Mode	9-12
Laser On Time	88h	5.0 sec	9-13
Power Mode	80h	Low Power	9-14
Trigger Mode	8Ah	Level	9-15
Scanning Mode	8Dh	Smart Raster	9-16
Aiming Mode	F0h 7Eh	Disabled	9-16
Raster Height	E4h	15	9-18
Raster Expansion Rate	E5h	11	9-18
Time Delay to Low Power	92h	30 sec	9-19
Time-out Between Same Symbol	89h	0.6 sec	9-20
Time-out Between Different Symbols	90h	0.0 sec	9-20
Beep After Good Decode	38h	Enable	9-21

**Table 9-2. Default Table (Continued)**

Parameter	Parameter Number	Default	Page Number
Transmit “No Decode” Message	5Eh	Disable	9-22
Parameter Scanning	ECh	Enable	9-23
Linear Code Type Security Levels	4Eh	2	9-24
Bi-directional Redundancy	43h	Disable	9-26
UPC/EAN			
UPC-A	01h	Enable	9-27
UPC-E	02h	Enable	9-27
UPC-E1	0Ch	Disable	9-29
EAN-8	04h	Enable	9-30
EAN-13	03h	Enable	9-31
Bookland EAN	53h	Disable	9-32
Decode UPC/EAN Supplementals	10h	Ignore	9-33
Decode UPC/EAN Supplemental Redundancy	50h	20	9-35
Transmit UPC-A Check Digit	28h	Enable	9-36
Transmit UPC-E Check Digit	29h	Enable	9-37
Transmit UPC-E1 Check Digit	2Ah	Enable	9-38
UPC-A Preamble	22h	System Character	9-39
UPC-E Preamble	23h	System Character	9-40
UPC-E1 Preamble	24h	System Character	9-41
Convert UPC-E to A	25h	Disable	9-42

Table 9-2. Default Table (Continued)

Parameter	Parameter Number	Default	Page Number
Convert UPC-E1 to A	26h	Disable	9-43
EAN-8 Zero Extend	27h	Disable	9-44
UPC/EAN Security Level	4Dh	0	9-45
Linear UPC/EAN Decode	44h	Disable	9-47
UPC Half Block Stitching	4Ah	Disable	9-48
UPC Composite Mode	F0h 58h	Never Linked	9-49
Code 128			
Code 128	08h	Enable	9-50
UCC/EAN-128	0Eh	Enable	9-51
ISBT 128	54h	Disable	9-52
Code 128 Decode Performance	48h	Enable	9-53
Code 128 Decode Performance Level	49h	Level 1	9-54
Code 39			
Code 39	00h	Enable	9-55
Trioptic Code 39	0Dh	Disable	9-56
Convert Code 39 to Code 32	56h	Enable	9-57
Code 32 Prefix	E7h	Enable	9-58
Set Length(s) for Code 39	12h 13h	Length within Range: 01-55	9-59
Code 39 Check Digit Verification	30h	Disable	9-61
Transmit Code 39 Check Digit	2Bh	Disable	9-62

**Table 9-2. Default Table (Continued)**

Parameter	Parameter Number	Default	Page Number
Code 39 Full ASCII Conversion	11h	Disable	9-63
Code 39 Decode Performance	46h	Enable	9-64
Code 39 Decode Performance Level	47h	Level 1	9-65
Code 93			
Code 93	09h	Disable	9-66
Set Length(s) for Code 93	1Ah 1Bh	Length within Range: 04-55	9-67
Interleaved 2 of 5			
Interleaved 2 of 5	06h	Disable	9-69
Set Length(s) for I 2 of 5	16h 17h	1 Discrete Length: 14	9-70
I 2 of 5 Check Digit Verification	31h	Disable	9-72
Transmit I 2 of 5 Check Digit	2Ch	Disable	9-73
Convert I 2 of 5 to EAN 13	52h	Disable	9-74
Discrete 2 of 5			
Discrete 2 of 5	05h	Disable	9-75
Set Length(s) for D 2 of 5	14h 15h	1 Discrete Length: 12	9-76
Codabar			
Codabar	07h	Disable	9-78
Set Lengths for Codabar	18h 19h	Length within Range: 05-55	9-79

Table 9-2. Default Table (Continued)


Parameter	Parameter Number	Default	Page Number
CLSI Editing	36h	Disable	9-81
NOTIS Editing	37h	Disable	9-82
MSI Plessey			
MSI Plessey	0Bh	Disable	9-83
Set Length(s) for MSI Plessey	1Eh 1Fh	Length Within Range: 06 - 55	9-84
MSI Plessey Check Digits	32h	One	9-86
Transmit MSI Plessey Check Digit	2Eh	Disable	9-87
MSI Plessey Check Digit Algorithm	33h	Mod 10/Mod 10	9-88
PDF417/MicroPDF417			
PDF417	0fh	Enable	9-89
MicroPDF417	E3h	Disable	9-90
Code 128 Emulation	7Bh	Disable	9-91
RSS			
RSS-14	F0h 52h	Disable	9-92
RSS Limited	F0h 53h	Disable	9-93
RSS Expanded	F0h 54h	Disable	9-94
Composite			
CC-C	F0h 55h	Disable	9-95
CC-AB	F0h 56h	Disable	9-96
TLC-39	F0h 73h	Disable	9-97

**Table 9-2. Default Table (Continued)**

Parameter	Parameter Number	Default	Page Number
Data Options			
Transmit Code ID Character	2Dh	None	9-98
Prefix/Suffix Values Prefix Suffix 1 Suffix 2	69h 68h 6Ah	NULL CR LF	9-101
Scan Data Transmission Format	EBh	Data as is	9-103
Simple Serial Interface (SSI) Options			
Baud Rate	9Ch	9600	9-105
Parity	9Eh	None	9-107
Check Parity	97h	Enable	9-110
Software Handshaking	9Fh	ACK/NAK	9-111
Decode Data Packet Format	EEh	Unpacketed	9-112
Stop Bit Select	9Dh	1	9-113
Intercharacter Delay	6Eh	0	9-114
Host Serial Response Time-out	9Bh	2 sec	9-114
Host Character Time-out	EFh	200 msec	9-115
Event Reporting			
Decode Event	F0h 00h	Disable	9-116
Boot Up Event	F0h 02h	Disable	9-117
Parameter Event	F0h 03h	Disable	9-118

Table 9-2. Default Table (Continued)

Parameter	Parameter Number	Default	Page Number
Macro PDF			
Transmit Each Symbol in Codeword Format	Afh	Disable	9-119
Transmit Unknown Codewords	BAh	Disable	9-121
Escape Character	E9h	None	9-122
ECI			
Delete Character Set ECIs	E6h	Enable	9-123
ECI Decoder	E8h	Enable	9-124
Transmit Macro PDF User-Selected Field			
Transmit File Name	B0h	Disable	9-125
Transmit Block Count	B1h	Disable	9-126
Transmit Time Stamp	B2h	Disable	9-127
Transmit Sender	B3h	Disable	9-128
Transmit Addressee	B4h	Disable	9-129
Transmit Checksum	B6h	Disable	9-130
Transmit File Size	B5h	Disable	9-131
Transmit Macro PDF Control Header	B7h	Disable	9-132
Last Block Marker	B9h	Disable	9-133



Set Default Parameter

Scanning this bar code returns all parameters to the values listed in [Table 9-2 on page 9-3](#).



Set All Defaults

Scanning Options

Beeper Tone

Parameter # 91h

To select a decode beep frequency (tone), scan the appropriate bar code.



Low Frequency

(02h)




Medium Frequency

(01h)



High Frequency


(00h)



LED Mode


Parameter # F0h, 51h

Scan a bar code below to select whether the LED illuminates on decode, or whenever the laser is on.



Decode LED Mode

(00h)



Laser LED Mode

(01h)

Laser On Time


Parameter # 88h

This parameter sets the maximum time decode processing continues during a scan attempt. It is programmable in 0.1 second increments from 0.5 to 9.9 seconds.

To set a Laser On Time, scan the bar code below. Next scan two numeric bar codes beginning on [page 9-134](#) that correspond to the desired on time. Times less than 1.0 second must have a leading zero. For example, to set an on time of 0.5 seconds, scan the bar code below, then scan the “0” and “5” bar codes. If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



Laser On Time



Power Mode

Parameter # 80h

This parameter determines whether or not power remains on after a decode attempt. When in Low Power mode, the scanner enters into a low power consumption mode when possible, provided all WAKEUP signals are released. See [Power Management](#) on page 1-5. When in Continuous On mode, power remains on after each decode attempt.



Continuous On

(00h)



Low Power

(01h)

Triggering Modes

Parameter # 8Ah

Choose one of the options below to trigger the scan engine. Bar codes and option numbers are on the following page.

- Level - A trigger pull activates the laser and decode processing. The laser remains on, and decode processing continues until a trigger release, a valid decode, or the Laser On Time-out is reached.
- Pulse - A trigger pull activates the laser and decode processing. The laser remains on and decode processing continues until a valid decode, or the Laser On Time-out is reached.
- Continuous - The laser is always on and decoding.
- Host - The triggering signal comes from a host command. An actual trigger pull is interpreted as a Level triggering option.



**Level
(00h)**




**Pulse
(02h)**



**Continuous
(04h)**



**Host
(08h)**



Scanning Mode

Parameter # 8Dh

Select one of the following scanning modes:

- Smart Raster
- Slab Only Raster
- Omnidirectional (Cyclone)
- Always Raster
- Programmable Raster
- Semi-Omnidirectional

Note: For Cyclone pattern, it is recommended to disable the following parameters: PDF417, MicroPDF417, RSS-Limited, CC_C, CC-AB, TLC-39 and Linear UPC.



Smart Raster
(01h)



Always Raster
(02h)



Programmable Raster
(03h)



Slab Pattern
(04h)



Cyclone Pattern
(06h)



Semi-Omni Pattern
(07h)

Aiming Mode

Parameter # F0h 7Eh

For hand-held mode only, select an aiming dot to appear for a normal or extended period of time.




**No Aiming Dot
(00h)**



**Aiming Dot
Normal (200 ms) Timeout
(01h)**



**Aiming Dot
Extended (400 ms) Timeout
(02h)**



Programmable Raster Height And Raster Expansion Speed

Parameter # E4h, E5h

This parameter selects the laser pattern's height and rate of expansion, and is only used when Programmable Raster or Always Raster is enabled. This parameter is intended for very specific applications, and is usually not necessary.

Select the laser pattern's height and/or rate of expansion.

1. Scan the bar code for either **Raster Height** or **Raster Expansion Speed** below.
2. Scan two numeric bar codes beginning on [page 9-134](#) that represent a two-digit value. Valid values are between 01 and 15.
3. If you make an error, or wish to change your selection, scan **Cancel**.



Raster Height (Default 15)



Raster Expansion Speed (Default 11)

Time Delay to Low Power Mode

Parameter # 92h

To extend laser life in continuous-on mode, select the time the scanner remains active following a successful decode. Selectable options include 30 seconds, 1 minute, 2 minutes, 3 minutes. To awaken the scanner in low power mode, present a symbol to the scan path. A successful decode restores it to normal blinking.



30 Second Delay

(00h)



1 Minute Delay

(01h)




2 Minute Delay

(02h)



3 Minute Delay

(03h)



Timeout Between Decodes

Timeout Between Decodes, Same Symbol

Parameter # 89h

This option is used in continuous-on mode to prevent the beeper from continuously beeping when a symbol is left in the scanner's field of view. It is programmable in 0.1 second increments from 0.0 to 9.9 seconds. The recommended interval is 0.6 seconds.

Timeout Between Decodes, Different Symbol

Parameter # 90h

Timeout Between Decodes, Different Symbols is used in continuous-on mode to prevent the beeper from beeping when a different symbol appears in the scanner's field of view before the timeout period between decodes expires. This is programmable in 0.1 second increments from 0.0 to 9.9 seconds. The recommended value is 0.0 seconds.

Select the timeouts between decodes for the same or different symbols.

1. Scan the option bar code you wish to set.
2. Scan two numeric bar codes beginning on [page 9-134](#) which correspond to the desired interval, in 0.1 second increments.
3. If you make an error, or wish to change your selection, scan **Cancel**.



**Timeout Between Decodes -
The Same Symbol**



**Timeout Between Decodes -
Different Symbols**

Beep After Good Decode

Parameter # 38h

Scan this symbol if you want the scanner to beep after a good decode.



Beep After Good Decode


(01h)

Scan this symbol if you do not want the scanner to beep after a good decode. The beeper still operates during parameter menu scanning and indicates error conditions.



Do Not Beep After Good Decode

(00h)



Transmit “No Read” Message

Parameter # 5Eh

When enabled, if a 1-D symbol does not decode, “NR” is transmitted. If a 2-D symbol does not decode, “FR” is transmitted. Any prefix or suffixes which have been enabled are appended around this message.



Enable No Read

(01h)

When disabled, if a symbol does not read, nothing is sent to the host.



Disable No Read

(00h)

Parameter Scanning

Parameter # ECh

To disable decoding of parameter bar codes, scan the bar code below. Note that the Set Defaults parameter bar code will still be decoded. To enable decoding of parameter bar codes, either scan [Enable Parameter Scanning](#), [Set All Defaults](#) or set this parameter to 01h via a serial command.




Enable Parameter Scanning

(01h)



Disable Parameter Scanning

(00h)



Linear Code Type Security Level

Parameter # 4Eh

Note: Does not apply to Code 128.

The SE 2223/3223 offers four levels of decode security for linear code types (e.g., Code 39, Interleaved 2 of 5). Higher security levels are selected for decreasing levels of bar code quality. As security levels increase, the scanner's aggressiveness decreases.

Select the security level appropriate for your bar code quality.

Linear Security Level 1

The following code types must be successfully read twice before being decoded:

Code Type	Length
Codabar	All
MSI Plessey	4 or less
D 2 of 5	8 or less
I 2 of 5	8 or less



Linear Security Level 1
(01h)

Linear Security Level 2

All code types must be successfully read twice before being decoded.



**Linear Security Level 2
(02h)****Linear Security Level 3**


Code types other than the following must be successfully read twice before being decoded.
The following codes must be read three times:

Code Type	Length
MSI Plessey	4 or less
D 2 of 5	8 or less
I 2 of 5	8 or less

**Linear Security Level 3
(03h)****Linear Security Level 4**

All code types must be successfully read three times before being decoded.

**Linear Security Level 4
(04h)**



Bi-directional Redundancy

Parameter # 43h

This parameter is only valid when a [Linear Code Type Security Level](#) is enabled (see [page 9-24](#)). When this parameter is enabled, a bar code must be successfully scanned in both directions (forward and reverse) before being decoded.



Enable Bi-directional Redundancy

(01h)



Disable Bi-directional Redundancy

(00h)

UPC/EAN

Enable/Disable UPC-A

Parameter # 01h

To enable or disable UPC-A, scan the appropriate bar code below.




Enable UPC-A

(01h)



Disable UPC-A


(00h)



Enable/Disable UPC-E

Parameter # 02h

To enable or disable UPC-E, scan the appropriate bar code below.



Enable UPC-E

(01h)



Disable UPC-E

(00h)

Enable/Disable UPC-E1

Parameter # 0Ch

To enable or disable UPC-E1, scan the appropriate bar code below.




Enable UPC-E1

(01h)



Disable UPC-E1


(00h)



Enable/Disable EAN-8


Parameter # 04h

To enable or disable EAN-8, scan the appropriate bar code below.



Enable EAN-8

(01h)



Disable EAN-8

(00h)

Enable/Disable EAN-13

Parameter # 03h

To enable or disable EAN-13, scan the appropriate bar code below.




Enable EAN-13

(01h)



Disable EAN-13

(00h)



Enable/Disable Bookland EAN

Parameter # 53h

To enable or disable EAN Bookland, scan the appropriate bar code below.



Enable Bookland EAN

(01h)



Disable Bookland EAN

(00h)

Decode UPC/EAN Supplementals


Parameter # 10h

Supplementals are additionally appended characters (2 or 5) according to specific code format conventions (e.g., UPC A+2, UPC E+2, EAN 8+2). Three options are available.


- If UPC/EAN with supplemental characters is selected, UPC/EAN symbols without supplemental characters are not decoded.
- If UPC/EAN without supplemental characters is selected, and the SE 2223/3223 is presented with a UPC/EAN plus supplemental symbol, the UPC/EAN is decoded and the supplemental characters ignored.
- An autodiscriminate option is also available. If this option is selected, scan [Decode UPC/EAN Supplemental Redundancy](#) on [page 9-35](#), then select a value from the numeric bar codes beginning on [page 9-134](#). A value of 5 or more is recommended.

Note: *To minimize the risk of invalid data transmission, we recommend that you select whether to read or ignore supplemental characters.*

Select the desired option by scanning one of the bar codes on the following page.




Decode UPC/EAN Supplementals (continued)




Decode UPC/EAN With Supplementals

(01h)



Ignore UPC/EAN With Supplementals

(00h)



Autodiscriminate UPC/EAN Supplementals


(02h)

Decode UPC/EAN Supplemental Redundancy


Parameter # 50h

With *Autodiscriminate UPC/EAN Supplementals* selected, this option adjusts the number of times a symbol without supplementals is decoded before transmission. The range is from 2 to 20 times. Five or above is recommended when decoding a mix of UPC/EAN symbols with and without supplementals, and the autodiscriminate option is selected.

Scan the bar code below to select a decode redundancy value. Next scan two numeric bar codes beginning on [page 9-134](#). Single digit numbers must have a leading zero. If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).




**Decode UPC/EAN
Supplemental Redundancy**



Transmit UPC-A Check Digit

Parameter # 28h

Scan the appropriate bar code below to transmit the symbol with or without the UPC-A check digit.



Transmit UPC-A Check Digit

(01h)



Do Not Transmit UPC-A Check Digit

(00h)

Transmit UPC-E Check Digit

Parameter # 29h

Scan the appropriate bar code below to transmit the symbol with or without the UPC-E check digit.




Transmit UPC-E Check Digit

(01h)



Do Not Transmit UPC-E Check Digit

(00h)



Transmit UPC-E1 Check Digit


Parameter # 2Ah

Scan the appropriate bar code below to transmit the symbol with or without the UPC-E1 check digit.



Transmit UPC-E1 CHECK DIGIT

(01h)



Do Not Transmit UPC-E1 Check Digit

(00h)

UPC-A Preamble


Parameter # 22h

Three options are given for lead-in characters for UPC-A symbols transmitted to the host device: transmit system character only, transmit system character and country code ("0" for USA), and no preamble transmitted. The lead-in characters are considered part of the symbol.



**No Preamble
<DATA>**

(00h)




**System Character
<SYSTEM CHARACTER> <DATA>**

(01h)



**System Character & Country Code
< COUNTRY CODE> <SYSTEM CHARACTER> <DATA>**


(02h)



UPC-E Preamble


Parameter # 23h

Three options are given for lead-in characters for UPC-E symbols transmitted to the host device: transmit system character only, transmit system character and country code ("0" for USA), and no preamble transmitted. The lead-in characters are considered part of the symbol.



No Preamble
(<DATA>)

(00h)



System Character
(<SYSTEM CHARACTER> <DATA>)

(01h)



System Character & Country Code
(< COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)

(02h)

UPC-E1 Preamble

Parameter # 24h

Three options are given for lead-in characters for UPC-E1 symbols transmitted to the host device: transmit system character only, transmit system character and country code ("0" for USA), and no preamble transmitted. The lead-in characters are considered part of the symbol.



**No Preamble
(<DATA>)**

(00h)




**System Character
(<SYSTEM CHARACTER> <DATA>)**

(01h)



**System Character & Country Code
(< COUNTRY CODE> <SYSTEM CHARACTER> <DATA>)**

(02h)




Convert UPC-E to UPC-A

Parameter # 25h

This parameter converts UPC-E (zero suppressed) decoded data to UPC-A format before transmission. After conversion, data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

Scanning **DO NOT CONVERT UPC-E TO UPC-A** allows you to transmit UPC-E (zero suppressed) decoded data.



**Convert UPC-E To UPC-A
(Enable)**

(01h)



**Do Not Convert UPC-E To UPC-A
(Disable)**

(00h)

Convert UPC-E1 to UPC-A

Parameter # 26h

This parameter converts UPC-E1 (zero suppressed) decoded data to UPC-A format before transmission. After conversion, data follows UPC-A format and is affected by UPC-A programming selections (e.g., Preamble, Check Digit).

Scanning **DO NOT CONVERT UPC-E1 TO UPC-A** allows you to transmit UPC-E1 (zero suppressed) decoded data.




**Convert UPC-E1 To UPC-A
(Enable)**

(01h)



**Do Not Convert UPC-E1 To UPC-A
(Disable)**

(00h)




EAN Zero Extend

Parameter # 27h


When this parameter is enabled, five leading zeros are added to decoded EAN-8 symbols to make them compatible in format to EAN-13 symbols.

Disabling this parameter returns EAN-8 symbols to their normal format.



Enable EAN Zero Extend

(01h)



Disable EAN Zero Extend

(00h)

UPC/EAN Security Level

Parameter # 4Dh

The SE 2223/3223 offers four levels of decode security for UPC/EAN bar codes. Increasing levels of security are provided for decreasing levels of bar code quality. There is an inverse relationship between security and scanner aggressiveness, so be sure to choose only that level of security necessary for any given application.

UPC/EAN Security Level 0

This is the default setting which allows the scanner to operate in its most aggressive state, while providing sufficient security in decoding “in-spec” UPC/EAN bar codes.



UPC/EAN Security Level 0

(00h)


UPC/EAN Security Level 1

As bar code quality levels diminish, certain characters become prone to misdecodes before others (i.e., 1, 2, 7, 8). If you are experiencing misdecodes of poorly printed bar codes, and the misdecodes are limited to these characters, select this security level.




UPC/EAN Security Level 1

(01h)



UPC/EAN Security Level 2

If you are experiencing misdecodes of poorly printed bar codes, and the misdecodes are not limited to characters 1, 2, 7, and 8, select this security level.




UPC/EAN Security Level 2

(02h)

UPC/EAN Security Level 3

If you have tried Security Level 2, and are still experiencing misdecodes, select this security level. Be advised, selecting this option is an extreme measure against misdecoding severely out of spec bar codes. Selection of this level of security significantly impairs the decoding ability of the scanner. If this level of security is necessary, try to improve the quality of your bar codes.



UPC/EAN Security Level 3

(03h)

Linear UPC/EAN Decode


Parameter # 44h

This option applies to code types containing two adjacent blocks (e.g., UPC-A, EAN-8, EAN-13). When enabled, a bar code is transmitted only when both the left and right blocks are successfully decoded within one laser scan. This option should be enabled when bar codes are in proximity to each other.




Enable Linear UPC/EAN Decode

(01h)



Disable Linear UPC/EAN Decode


(00h)



UPC Half Block Stitching

Parameter # 4Ah

This parameter enables UPC Half Block Stitching for the SE 3223 omnidirectional engine only.



Enable UPC Half Block Stitching

(01h)



Disable UPC Half Block Stitching

(00h)

UPC Composite Mode

Parameter # F0h 58h

UPC symbols can be “linked” with a 2D symbol during transmission as if they were one symbol. Three options are offered for these symbols:

- If **UPC Never Linked** is selected, UPC bar codes are transmitted regardless of whether a 2D symbol is detected.
- If **UPC Always Linked** is selected, UPC bar codes are only transmitted when the 2D portion is detected.
- If **Autodiscriminate UPC Composites** is selected, the scanner determines if there is a 2D portion, then transmits the UPC portion only.




UPC Never Linked



UPC Always Linked



Autodiscriminate UPC Composites




Code 128

Enable/Disable Code 128


Parameter # 08h

To enable or disable Code 128, scan the appropriate bar code below.



Enable Code 128

(01h)



Disable Code 128

(00h)

Enable/Disable UCC/EAN-128

Parameter # 0Eh

To enable or disable UCC/EAN-128, scan the appropriate bar code below. (See [Miscellaneous Code Information](#) for details on [UCC/EAN-128](#).)




Enable UCC/EAN-128

(01h)



Disable UCC/EAN-128

(00h)



Enable/Disable ISBT 128

Parameter # 54h

To enable or disable ISBT 128, scan the appropriate bar code below.



Enable ISBT 128

(01h)



Disable ISBT 128

(00h)

Lengths for Code 128

No length setting is required for Code 128. The default setting is Any Length.

Code 128 Decode Performance

Parameter # 48h

This option offers three levels of decode performance or “aggressiveness” for Code 128 symbols. Increasing the performance level reduces the amount of required bar code orientation, which is useful if you are scanning very long and/or truncated bar codes. Increased levels reduce decode security.

If you enable this option, you may select a Decode Performance level from the next page to suit your performance needs.




Enable Code 128 Decode Performance

(01h)



Disable Code 128 Decode Performance


(00h)



Code 128 Decode Performance Level


Parameter # 49h

Select a level of decode performance.




Code 128 Decode Performance Level 1

(01h)



Code 128 Decode Performance Level 2

(02h)



Code 128 Decode Performance Level 3


(03h)

Code 39

Enable/Disable Code 39


Parameter # 00h

To enable or disable Code 39, scan the appropriate bar code below.




Enable Code 39

(01h)



Disable Code 39

(00h)



Enable/Disable Trioptic Code 39

Parameter # 0Dh

Trioptic Code 39 symbols always contain six characters. Trioptic Code 39 and Code 39 Full ASCII should not be enabled simultaneously. To enable or disable Trioptic Code 39, scan the appropriate bar code below.



Enable Trioptic Code 39

(01h)



Disable Trioptic Code 39

(00h)

Convert Code 39 to Code 32

Parameter # 56h

Scan this symbol if you want to convert Code 39 to Code 32.



**Convert Code 39 To Code 32
(Enable)**

(01h)


Note: *Code 39 must be enabled in order for this parameter to function.*

Scan this symbol if you do not want to convert Code 39 to Code 32.



**Do Not Convert Code 39 To Code 32
(Disable)**

(00h)



Code 32 Prefix

Parameter # E7h

Enable this parameter to add the prefix character “A” to all Code 32 bar codes. [Convert Code 39 to Code 32](#) must be enabled for this parameter to function.



Enable Code 32 Prefix

(01h)



Disable Code 32 Prefix

(00h)

Set Lengths for Code 39

Parameter # L1 = 12h, L2 = 13h

Lengths for Code 39 may be set for any length, one or two discrete lengths, or lengths within a specific range. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. If Code 39 Full ASCII is enabled, **Length Within a Range** or **Any Length** are the preferred options. See [Table A-5 on page A-8](#) for ASCII equivalents. To set lengths via serial commands, see [Setting Code Lengths Via Serial Commands](#) on page A-8.

One Discrete Length - This option allows you to decode only those codes containing a selected length. For example, if you select **Code 39 One Discrete Length**, then scan **1, 4**, only Code 39 symbols containing 14 characters are decoded. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).




Code 39 - One Discrete Length

Two Discrete Lengths - This option allows you to decode only those codes containing two selected lengths. For example, if you select **Code 39 Two Discrete Lengths**, then scan **0, 2, 1, 4**, only Code 39 symbols containing 2 or 14 characters are decoded. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



Code 39 - Two Discrete Lengths



Length Within Range - This option allows you to decode a code type within a specified range. For example, to decode Code 39 symbols containing between 4 and 12 characters, first scan **Code 39 Length Within Range**. Then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



Code 39 - Length Within Range

Any Length - Scanning this option allows you to decode Code 39 symbols containing any number of characters.




Code 39 - Any Length

Code 39 Check Digit Verification

Parameter # 30h

When enabled, this parameter checks the integrity of a Code 39 symbol to ensure it complies with specified algorithms.

Only those Code 39 symbols which include a modulo 43 check digit are decoded when this parameter is enabled.




Enable Code 39 Check Digit

(01h)



Disable Code 39 Check Digit

(00h)



Transmit Code 39 Check Digit

Parameter # 2Bh

Scan this symbol if you want to transmit the check digit with the data.



**Transmit Code 39 Check Digit
(Enable)**

(01h)

Scan this symbol if you want to transmit the data without the check digit.



**Do Not Transmit Code 39 Check Digit
(Disable)**

(00h)

Enable/Disable Code 39 Full ASCII

Parameter # 11h

To enable or disable Code 39 Full ASCII, scan the appropriate bar code below.

When enabled, the ASCII character set assigns a code to letters, punctuation marks, numerals, and most control keystrokes on the keyboard.

The first 32 codes are non-printable and are assigned to keyboard control characters such as BACKSPACE and RETURN. The other 96 are called printable codes because all but SPACE and DELETE produce visible characters.

Code 39 Full ASCII interprets the bar code special character (\$ + % /) preceding a Code 39 character and assigns an ASCII character value to the pair. For example, when Code 39 Full ASCII is enabled and a **+B** is scanned, it is interpreted as **b**, **%J** as **?**, and **\$H** emulates the keystroke **BACKSPACE**. Scanning **ABC\$M** outputs the keystroke equivalent of **ABC ENTER**. Refer to the [Table A-6 on page A-9](#).

Code 39 Full ASCII and Trioptic Code 39 should not be enabled simultaneously.

The scanner does not autodiscriminate between Code 39 and Code 39 Full ASCII.




Enable Code 39 Full ASCII

(01h)



Disable Code 39 Full ASCII

(00h)




Code 39 Decode Performance

Parameter # 46h

This option offers three levels of decode performance or “aggressiveness” for Code 39 symbols. Increasing the performance level reduces the amount of required bar code orientation, which is useful if you are scanning very long and/or truncated bar codes. Increased levels reduce decode security.


If you enable this option, you may select a Decode Performance level from the next page to suit your performance needs.

Note: *This option only works with Code 39 One Discrete Length.*



Enable Code 39 Decode Performance

(01h)



Disable Code 39 Decode Performance

(00h)

Code 39 Decode Performance Level

Parameter # 47h

Select a level of decode performance.



Code 39 Decode Performance Level 1

(01h)




Code 39 Decode Performance Level 2

(02h)



Code 39 Decode Performance Level 3

(03h)



Code 93

Enable/Disable Code 93

Parameter # 09h

To enable or disable Code 93, scan the appropriate bar code below.



Enable Code 93

(01h)



Disable Code 93

(00h)

Set Lengths for Code 93

Parameter # L1 = 1Ah, L2 = 1Bh

Lengths for Code 93 may be set for any length, one or two discrete lengths, or lengths within a specific range. The length of a code refers to the number of characters (i.e., human readable characters), including check digit(s) the code contains. See [Table A-6 on page A-9](#) for ASCII equivalents. To set lengths via serial commands, see [Setting Code Lengths Via Serial Commands](#) on page A-8.

One Discrete Length - This option allows you to decode only those codes containing a selected length. For example, if you select **Code 93 One Discrete Length**, then scan **1, 4**, only Code 93 symbols containing 14 characters are decoded. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).




Code 93 - One Discrete Length

Two Discrete Lengths - This option allows you to decode only those codes containing two selected lengths. For example, if you select **Code 93 Two Discrete Lengths**, then scan **0, 2, 1, 4**, only Code 93 symbols containing 2 or 14 characters are decoded. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



Code 93 - Two Discrete Lengths



Length Within Range - This option allows you to decode a code type within a specified range. For example, to decode Code 93 symbols containing between 4 and 12 characters, first scan **Code 93 Length Within Range**. Then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



Code 93 - Length Within Range

Any Length - Scanning this option allows you to decode Code 93 symbols containing any number of characters.



Code 93 - Any Length

Interleaved 2 of 5

Enable/Disable Interleaved 2 of 5


Parameter # 06h

To enable or disable Interleaved 2 of 5, scan the appropriate bar code below.




Enable Interleaved 2 Of 5

(01h)



Disable Interleaved 2 Of 5

(00h)



Set Lengths for Interleaved 2 of 5

Parameter # L1 = 16h, L2 = 17h

Lengths for I 2 of 5 may be set for any length, one or two discrete lengths, or lengths within a specific range. The length of a code refers to the number of characters (i.e., human readable characters) the code contains, and includes check digits. See [Table A-6 on page A-9](#) for ASCII equivalents. To set lengths via serial commands, see [Setting Code Lengths Via Serial Commands](#) on page A-8.

One Discrete Length - This option allows you to decode only those codes containing a selected length. For example, if you select **I 2 of 5 One Discrete Length**, then scan **1, 4**, the only I 2 of 5 symbols decoded are those containing 14 characters. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



I 2 of 5 - One Discrete Length

Two Discrete Lengths - This option allows you to decode only those codes containing two selected lengths. For example, if you select **I 2 of 5 Two Discrete Lengths**, then scan **0, 2, 1, 4**, the only I 2 of 5 symbols decoded are those containing 2 or 14 characters. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



I 2 of 5 - Two Discrete Lengths

Length Within Range - This option allows you to decode a code type within a specified range. For example, to decode I 2 of 5 symbols containing between 4 and 12 characters, first scan **I 2 of 5 Length Within Range**. Then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).




I 2 of 5 - Length Within Range

Any Length - Scanning this option allows you to decode I 2 of 5 symbols containing any number of characters.

Note: *Selecting this option may lead to misdecodes for I 2 of 5 codes.*



I 2 of 5 - Any Length



I 2 of 5 Check Digit Verification

Parameter # 31h

When enabled, this parameter checks the integrity of an I 2 of 5 symbol to ensure it complies with a specified algorithm, either USS (Uniform Symbology Specification), or OPCC (Optical Product Code Council).



Disable

(00h)



USS Check Digit

(01h)



OPCC Check Digit

(02h)

Transmit 1 2 of 5 Check Digit

Parameter # 2Ch

Scan this symbol if you want to transmit the check digit with the data.



**Transmit 1 2 of 5 Check Digit
(Enable)**


(01h)

Scan this symbol if you want to transmit the data without the check digit.



**Do Not Transmit 1 2 of 5 Check Digit
(Disable)**

(00h)



Convert I 2 of 5 to EAN-13


Parameter # 52h

This parameter converts a 14 character I 2 of 5 code into EAN-13, and transmits to the host as EAN-13. To accomplish this, the I 2 of 5 code must be enabled, one length must be set to 14, and the code must have a leading zero and a valid EAN-13 check digit.



**Convert I 2 of 5 to EAN-13
(Enable)**

(01h)



**Do Not Convert I 2 of 5 to EAN-13
(Disable)**

(00h)

Discrete 2 of 5

Enable/Disable Discrete 2 of 5

Parameter # 05h

To enable or disable Discrete 2 of 5, scan the appropriate bar code below.




Enable Discrete 2 Of 5

(01h)



Disable Discrete 2 Of 5

(00h)



Set Lengths for Discrete 2 of 5

Parameter # L1 = 14h, L2 = 15h

Lengths for D 2 of 5 may be set for any length, one or two discrete lengths, or lengths within a specific range. The length of a code refers to the number of characters (i.e., human readable characters) the code contains, and includes check digits. See [Table A-6 on page A-9](#) for ASCII equivalents. To set lengths via serial commands, see [Setting Code Lengths Via Serial Commands](#) on page A-8.

One Discrete Length - This option allows you to decode only those codes containing a selected length. For example, if you select **D 2 of 5 One Discrete Length**, then scan **1, 4**, the only D 2 of 5 symbols decoded are those containing 14 characters. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



D 2 of 5 - One Discrete Length

Two Discrete Lengths - This option allows you to decode only those codes containing two selected lengths. For example, if you select **D 2 of 5 Two Discrete Lengths**, then scan **0, 2, 1, 4**, the only D 2 of 5 symbols decoded are those containing 2 or 14 characters. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



D 2 of 5 - Two Discrete Lengths

Length Within Range - This option allows you to decode a code type within a specified range. For example, to decode D 2 of 5 symbols containing between 4 and 12 characters, first scan **D 2 of 5 Length Within Range**. Then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).




D 2 of 5 - Length Within Range

Any Length - Scanning this option allows you to decode D 2 of 5 symbols containing any number of characters.

Note: *Selecting this option may lead to misdecodes for D 2 of 5 codes.*



D 2 of 5 - Any Length




Codabar

Enable/Disable Codabar

Parameter # 07h

To enable or disable Codabar, scan the appropriate bar code below.



Enable Codabar

(01h)



Disable Codabar

(00h)

Set Lengths for Codabar

Parameter # L1 = 18h, L2 = 19h

Lengths for Codabar may be set for any length, one or two discrete lengths, or lengths within a specific range. The length of a code refers to the number of characters (i.e., human readable characters) the code contains. It also includes any start or stop characters. See [Table A-6 on page A-9](#) for ASCII equivalents. To set lengths via serial commands, see [Setting Code Lengths Via Serial Commands](#) on page A-8.

One Discrete Length - This option allows you to decode only those codes containing a selected length. For example, if you select **Codabar One Discrete Length**, then scan **1, 4**, the only Codabar symbols decoded are those containing 14 characters. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).




Codabar - One Discrete Length

Two Discrete Lengths - This option allows you to decode only those codes containing two selected lengths. For example, if you select **Codabar Two Discrete Lengths**, then scan **0, 2, 1, 4**, the only Codabar symbols decoded are those containing 2 or 14 characters. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



Codabar - Two Discrete Lengths



Length Within Range - This option allows you to decode a code type within a specified range. For example, to decode Codabar symbols containing between 4 and 12 characters, first scan **Codabar Length Within Range**. Then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



Codabar - Length Within Range

Any Length - Scanning this option allows you to decode Codabar symbols containing any number of characters.




Codabar - Any Length

CLSI Editing

Parameter # 36h


When enabled, this parameter strips the start and stop characters and inserts a space after the first, fifth, and tenth characters of a 14-character Codabar symbol.

Note: *Symbol length does not include start and stop characters.*




Enable CLSI Editing

(01h)



Disable CLSI Editing


(00h)



NOTIS Editing

Parameter # 37h

When enabled, this parameter strips the start and stop characters from decoded Codabar symbol.



Enable NOTIS Editing

(01h)



Disable NOTIS Editing

(00h)

MSI Plessey

Enable/Disable MSI Plessey

Parameter # 0Bh

To enable or disable MSI Plessey, scan the appropriate bar code below.




Enable MSI Plessey

(01h)



Disable MSI Plessey

(00h)



Set Lengths for MSI Plessey

Parameter # L1 = 1Eh, L2 = 1Fh

Lengths for MSI Plessey may be set for any length, one or two discrete lengths, or lengths within a specific range. The length of a code refers to the number of characters (i.e., human readable characters) the code contains, and includes check digits. See [Table A-6 on page A-9](#) for ASCII equivalents. To set lengths via serial commands, see [Setting Code Lengths Via Serial Commands](#) on page A-8.

One Discrete Length - This option allows you to decode only those codes containing a selected length. For example, if you select **MSI Plessey One Discrete Length**, then scan **1, 4**, the only MSI Plessey symbols decoded are those containing 14 characters. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



MSI Plessey - One Discrete Length

Two Discrete Lengths - This option allows you to decode only those codes containing two selected lengths. For example, if you select **MSI Plessey Two Discrete Lengths**, then scan **0, 2, 1, 4**, the only MSI Plessey symbols decoded are those containing 2 or 14 characters. Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



MSI Plessey - Two Discrete Lengths

Length Within Range - This option allows you to decode a code type within a specified range. For example, to decode MSI Plessey symbols containing between 4 and 12 characters, first scan **MSI Plessey Length Within Range**. Then scan **0, 4, 1** and **2** (single digit numbers must always be preceded by a leading zero). Numeric bar codes begin on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).




MSI Plessey - Length Within Range

Any Length - Scanning this option allows you to decode MSI Plessey symbols containing any number of characters.

Note: *Selecting this option may lead to misdecodes for MSI Plessey codes.*



MSI Plessey - Any Length



MSI Plessey Check Digits

Parameter # 32h

These check digits at the end of the bar code verify the integrity of the data. At least one check digit is always required. Check digits are not automatically transmitted with the data.



One MSI Plessey Check Digit

(00h)

If two check digits is selected, an [MSI Plessey Check Digit Algorithm](#) must also be selected. See [page 9-88](#).



Two MSI Plessey Check Digit

(01h)

Transmit MSI Plessey Check Digit

Parameter # 2Eh

Scan this symbol if you want to transmit the check digit with the data.



**Transmit MSI Plessey Check Digit
(Enable)**


(01h)

Scan this symbol if you want to transmit the data without the check digit.



**Do Not Transmit MSI Plessey Check Digit
(Disable)**


(00h)



MSI Plessey Check Digit Algorithm

Parameter # 33h

When the Two MSI Plessey check digits option is selected, an additional verification is required to ensure integrity. Either of the two following algorithms may be selected.



MOD 10/ MOD 11

(00h)



MOD 10/ MOD 10

(01h)

PDF417/MicroPDF417

Enable/Disable PDF417

Parameter # 0fh

To enable or disable PDF417, scan the appropriate bar code below.




Enable PDF417

(01h)



Disable PDF417

(00h)



Enable/Disable MicroPDF417

Parameter # E3h

To enable or disable MicroPDF417, scan the appropriate bar code below.



Enable MicroPDF417

(01h)



Disable MicroPDF417

(00h)

Code 128 Emulation

Parameter # 7Bh

When this parameter is enabled, the scanner transmits data from certain MicroPDF417 symbols as if it was encoded in Code 128 symbols. Transmit AIM Symbology Identifiers must be enabled for this parameter to work.

If Code 128 Emulation is enabled, these MicroPDF417 symbols are transmitted with one of the following prefixes:

-]C1 if the first codeword is 903-907, 912, 914, 915
-]C2 if the first codeword is 908 or 909
-]C0 if the first codeword is 910 or 911

If disabled, they are transmitted with one of the following prefixes:

-]L3 if the first codeword is 903-907, 912, 914, 915
-]L4 if the first codeword is 908 or 909
-]L5 if the first codeword is 910 or 911

Scan a bar code below to enable or disable Code 128 Emulation.




Enable Code 128 Emulation

(01h)



Disable Code 128 Emulation

(00h)




RSS Codes

RSS-14

Parameter # F0h 52h

To enable or disable RSS-14, scan the appropriate bar code below.



**Enable RSS-14
(01h)**



**Disable RSS-14
(00h)**

RSS-Limited

Parameter # F0h 53h


To enable or disable RSS-Limited, scan the appropriate bar code below.



**Enable RSS-Limited
(01h)**




**Disable RSS-Limited
(00h)**




RSS-Expanded

Parameter # F0h 54h

To enable or disable RSS-Expanded, scan the appropriate bar code below.



**Enable RSS-Expanded
(01h)**



**Disable RSS-Expanded
(00h)**

Composite

Composite CC-C

Parameter # F0h 55h

Scan a bar code below to enable or disable Composite bar codes of type CC-C


.



**Enable CC-C
(01h)**




**Disable CC-C
(00h)**




Composite CC-A/B

Parameter # F0h 56h

Scan a bar code below to enable or disable Composite bar codes of type CC-A/B.



**Enable CC-A/B
(01h)**




**Disable CC-A/B
(00h)**


Composite TLC-39

Parameter # F0h 73h


Scan a bar code below to enable or disable Composite bar codes of type TLC-39.



**Enable TLC39
(01h)**



**Disable TLC39
(00h)**



Data Options

Transmit Code ID Character

Parameter # 2Dh

A code ID character identifies the code type of a scanned bar code. This may be useful when the scanner is decoding more than one code type. In addition to any single character prefix already selected, the code ID character is inserted between the prefix and the decoded symbol.

The user may select no code ID character, a Symbol Code ID character, or an AIM Code ID character. The Symbol Code ID characters are listed below; see [AIM Code Identifiers](#) on page A-3.

Table 9-3. Symbol Code ID Characters

Code Type	Symbol Identifier
UPC-A, UPC-E, UPC-E1, EAN-13, EAN-8	A
Code 39, Code 32	B
Codabar	C
Code 128, ISBT 128	D
Code 93	E
Interleave 2 of 5	F
Discrete 2 of 5, D 2of 5 IATA	G
Code 11	H
MSI Plessey	J
UCC/EAN 128	K
Bookland EAN	L
Trioptic Code 39	M
Coupon Code	N
RSS (all variants)	R
Composite*	T
Scanlet	W
PDF417, Micro PDF-417, Macro PDF-417, Micro MacroPDF-417	X
*Note: UPC/EAN Composite is transmitted in two portions, each with a "T" prefix.	

A = UPC-A, UPC-E, UPC-E1, EAN-8, EAN-13

B = Code 39, Code 32

C = Codabar

D = Code 128, ISBT 128

E = Code 93

F = Interleaved 2 of 5

G = Discrete 2 of 5, or Discrete 2 of 5 IATA

J = MSI Plessey

K = UCC/EAN-128

L = Bookland EAN


M = Trioptic Code 39

N = Coupon Code


X = PDF, Micro PDF, Macro PDF

T = Composite

R = RSS




Transmit Code ID Character (continued)




Symbol Code ID Character

(02h)



AIM Code ID Character

(01h)



None


(00h)

Prefix/Suffix Values

Parameter # P = 69h, S1 = 68h, S2 = 6Ah

A prefix and/or one or two suffixes may be appended to scan data for use in data editing. These values are set by scanning a four digit number (i.e., four bar codes) that corresponds to key codes for various terminals. See the [Table A-6 on page A-9](#), and [Numeric Bar Codes](#) beginning on [page 9-134](#). If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#). To set the Prefix/Suffix values via serial commands, see [Setting Prefixes and Suffixes Via Serial Commands](#) on page A-9.


Note: *In order to use Prefix/Suffix values, the [Scan Data Transmission Format](#) must be set. See [page 9-103](#).*



Prefix/Suffix Values (continued)



Scan Prefix



Scan Suffix 1



Scan Suffix 2



Data Format Cancel

Scan Data Transmission Format

Parameter # EBh

To change the Scan Data Transmission Format, scan one of the following eight bar codes corresponding to the desired format.



Data As Is

(00h)



<DATA> <SUFFIX 1>

(01h)




<DATA> <SUFFIX 2>

(02h)



<DATA> <SUFFIX 1> <SUFFIX 2>

(03h)



Scan Data Transmission Format (continued)



<PREFIX> <DATA >

(04h)



<PREFIX> <DATA> <SUFFIX 1>

(05h)



<PREFIX> <DATA> <SUFFIX 2>

(06h)



<PREFIX> <DATA> <SUFFIX 1> <SUFFIX 2>

(07h)

Simple Serial Interface (SSI) Options

Baud Rate


Parameter # 9Ch

Baud rate is the number of bits of data transmitted per second. The scanner's baud rate setting should match the data rate setting of the host device. If not, data may not reach the host device or may reach it in distorted form.



Baud Rate 300

(01h)



Baud Rate 600

(02h)




Baud Rate 1200

(03h)




Baud Rate 2400




(04h)

Baud Rate (continued)




Baud Rate 4800

(05h)



Baud Rate 9600

(06h)



Baud Rate 19,200

(07h)



38,400

(08h)

Parity

Parameter # 9Eh

A parity check bit is the most significant bit of each ASCII coded character. Select the parity type according to host device requirements.

If you select **Odd** parity, the parity bit has a value 0 or 1, based on data, to ensure that an odd number of 1 bits is contained in the coded character.



Odd


(00h)

If you select **Even** parity, the parity bit has a value 0 or 1, based on data, to ensure that an even number of 1 bits is contained in the coded character.



Even


(01h)



SE 2223/3223 Scan Engine Integration Guide

Parity (continued)


Select **Mark** parity and the parity bit is always 1.



Mark

(02h)

Select **Space** parity and the parity bit is always 0.



Space


(03h)

If no parity is required, select **None**.



None

(04h)



Check Parity

Parameter # 97h

Select whether or not the parity of received characters is checked. The type of parity used is selectable through the *Parity* parameter.



Check Parity

(01h)



Do Not Check Parity

(00h)

Software Handshaking

Parameter # 9Fh

This parameter offers control of the data transmission process in addition to that offered by hardware handshaking. Hardware handshaking is always enabled and cannot be disabled by the user.

Disable ACK/NAK Handshaking

When this option is selected, the decoder neither generates nor expects ACK/NAK handshaking packets.



Disable ACK/NAK

(00h)

Enable ACK/NAK Handshaking


When this option is selected, after transmitting data, the scanner expects either an ACK or NAK response from the host. The scanner also ACKs or NAKs messages from the host when this option is selected.

The scanner waits up to the programmable Host Serial Response Time-out to receive an ACK or NAK. If the scanner does not get a response in this time, it resends its data up to two times before discarding the data and declaring a transmit error.



Enable ACK/NAK

(01h)



Decode Data Packet Format

Parameter # EEh

This parameter selects whether decoded data is transmitted in raw format (unpacked), or transmitted with the packet format as defined by the serial protocol.

If the raw format is chosen, ACK/NAK handshaking is automatically disabled for decode data.



Send Raw Decode Data

(00h)



Send Packeted Decode Data

(01h)

Stop Bit Select

Parameter # 9Dh

The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. The number of stop bits selected (one or two) depends on the number the receiving terminal is programmed to accommodate. Set the number of stop bits to match host device requirements.




1 Stop Bit

(01h)



2 Stop Bits

(02h)



Intercharacter Delay

Parameter # 6Eh

Select the intercharacter delay option matching host requirements. The intercharacter delay gives the host system time to service its receiver and perform other tasks between characters. The delay period can range from no delay to 99 msec in 1 msec increments. After scanning the bar code below, scan two bar codes beginning on [page 9-134](#) to set the desired time-out. If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



Intercharacter Delay

Host Serial Response Time-out

Parameter # 9Bh

This parameter specifies how long the decoder waits for an ACK or NAK before resending. Also, if the decoder wants to send, and the host has already been granted permission to send, the decoder waits for the designated time-out before declaring an error.

The delay period can range from 0.0 to 9.9 seconds in 0.1 second increments. After scanning the bar code below, scan two numeric bar codes beginning on [page 9-134](#). Time durations of less than 1.0 second require a leading zero. If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).



Host Serial Response Time-out

Host Character Time-out

Parameter # EFh

This parameter determines the maximum time the decoder waits between characters transmitted by the host before discarding the received data and declaring an error. The time-out is set in 0.01 second increments from 0.01 seconds to 0.99 seconds. After scanning the bar code below, scan two bar codes beginning on [page 9-134](#) to set the desired time-out. If you make an error, or wish to change your selection, scan the [Cancel](#) bar code on [page 9-136](#).




Host Character Time-out

Event Reporting

The host can request the decoder to provide certain information (events) relative to the decoder's behavior. The events listed in [Table 9-4](#) and on the following pages can be enabled or disabled by scanning the appropriate bar codes. Parameter number format for these parameters follows those shown in the *Simple Serial Interface (SSI) Programmer's Guide* for parameters numbered 256 or higher.

Table 9-4. Event Codes

Event Class	Event	Code Reported
Decode Event	Non parameter decode	01h
Boot Up Event	System power-up	03h
Parameter Event	Parameter entry error	07h
	Parameter stored	08h
	Defaults set (and parameter event is enabled by default)	0Ah
	Number expected	0Fh



Decode Event

Parameter # F0h 00h

When enabled, the decoder generates a message to the host whenever a bar code is successfully decoded. When disabled, no notification is sent.



Enable

(01h)



Disable

(00h)

Boot Up Event

Parameter # F0h 02h

When enabled, the decoder generates a message to the host whenever power is applied.
When disabled, no notification is sent.




Enable

(01h)



Disable

(00h)



Parameter Event

Parameter # F0h 03h

When enabled, the decoder generates a message to the host when one of the events specified in [Table 9-4 on page 9-115](#) occurs. When disabled, no notification is sent.



Enable

(01h)



Disable

(00h)

Macro PDF Features

Transmit Symbols in Codeword Format

Parameter # Afh


Enabling this activates transmission of each PDF symbol as directly decoded data codewords, whether that symbol is part of a macro PDF sequence or not. Note that data is output as codeword values — not as interpreted data.

“Codeword values” is an ASCII representation of a number from 000 to 928 for each codeword, preceded by an escape character. This escape character is a backslash by default, but the user may change this value. For example, the codeword value 005 is sent to the host in the form of \005 for GLIs, and \C005C for ECIs. This output format is based on the AIM USA Uniform Symbology Specification for PDF417 (1994).

All output codewords take up exactly 4 characters for GLIs and 6 characters for ECIs. However, there may be nondecodable characters in the PDF symbol, such as a GLI sequence. This special codeword sequence activates a certain kind of interpretation to the encoded data. Non-decodable codewords like GLIs are embedded in the output stream just like any other codeword, e.g., \927\001.

Because GLIs are indistinguishable from other codewords in the output data stream, the host must intelligently recognize them as GLIs and process their interpretations.

Note that when a macro PDF sequence is transmitted, the last character in the last block of data transmitted is always \922 (if selected). This indicates the end of that macro PDF transmission.



Transmit Symbols in Codeword Format (Continued)

Enable or disable by scanning the appropriate bar code.



Enable Transmit In Codeword Format

(01h)



Disable Transmit In Codeword Format

(00h)

Transmit Unknown Codewords

Parameter # BAh

This enables using the output codeword format for transmitting any non-GLI or non-macro PDF codeword. If this is not enabled and an unknown codeword is found, a decode error beep sounds.

Enable or disable by scanning the appropriate bar code.




Transmit Unknown Codewords

(01h)



Do Not Transmit Unknown Codewords

(00h)



Escape Characters

Parameter # E9h

This enables the backslash (\) character as an Escape character for systems that can process transmissions containing special data sequences. Scan a bar code below to either format special data (e.g., GLI escapes, MacroPDF417 Control Block optional fields) according to the GLI (Global Label Identifier) protocol or the ECI (Extended Channel Interpretation) protocol, or to disable this parameter.



ECI Protocol

(01h)



GLI Protocol

(02h)



None

(00h)

Delete Character Set ECIs

Parameter # E6h

This parameter enables the scanner to delete any escape sequences representing Character Set ECIs (also known as GLIs) from its buffer before transmission. In many receiving systems, Character Set ECIs can be removed without affecting the way data is displayed or processed.

When deletion is selected, the scanner transmits data from PDF417 and MicroPDF417 bar codes containing Character Set ECIs, even when the ECI Protocol is disabled.

Scan a bar code to delete or transmit character set ECIs.




Delete Character Set ECIs

(01h)



Transmit Character Set ECIs

(00h)



ECI Decoder

Parameter # E8h

This parameter enables the scanner to interpret any Extended Channel Interpretations (ECIs) that are supported by the scanner firmware. This parameter has no effect on symbols that were not encoded using ECIs. This version of the product supports ECIs 000900 through 000913, used for efficient encoding of Common Data Syntax Format 00-99. If this parameter is disabled, and a symbol is scanned that was encoded using an ECI escape, the scanner transmits the ECI escape followed by the uninterpreted data.

Scan a bar code to enable or disable this option.



Enable ECI Decoder

(01h)



Disable ECI Decoder

(00h)

Transmit Macro PDF User-Selected Fields

When enabled, the following parameters cause transmission of the specified field in subsequently scanned Macro PDF417 symbols. Unless transmission of a specific field is enabled, it is not transmitted. The options cannot be changed in the middle of a Macro PDF set entry. All user-selected fields are prefixed by \923 for GLIs, and \C923C for ECIs. Tags and examples in the following parameters demonstrate GLI protocol, but the ECI tag (\C923C) can be used instead if ECI protocol is enabled.

Transmit File Name

Parameter # B0h

Transmit File Name activates transmission of the file name field. The field character tag is \923\000. For example, the filename MANHOURS.WK1 is sent as: \923\000MANHOURS.WK1.




Enable File Name Transmit

(01h)



Disable File Name Transmit

(00h)



Transmit Block Count

Parameter # B1h

Transmit Block Count activates transmission of the block count field. The field character tag is \923\001. For example, the field may be: \923\0011856.



Enable Transmit Block Count

(01h)



Disable Transmit Block Count

(00h)

Transmit Time Stamp

Parameter # B2h

Transmit Time Stamp activates transmission of the time stamp field. The field character tag is \923\002. For example, the field may be: \923\0022123443243234.




Enable Transmit Time Stamp

(01h)



Disable Transmit Time Stamp

(00h)



Transmit Sender

Parameter # B3h

Transmit Sender activates transmission of the sender field. The field character tag is \923\003. For example, the field may be: \923\003Symbol Technologies Holtsville, NY.



Enable Sender Transmit

(01h)



Disable Sender Transmit

(00h)

Transmit Addressee

Parameter # B4h

Transmit Addressee activates transmission of the addressee field. The field character tag is \923\004. For example, the field may be: \923\004AIM USA.




Enable Addressee Transmit

(01h)



Disable Addressee Transmit

(00h)



Transmit Checksum

Parameter # B6h

Transmit Checksum activates transmission of the checksum field. The field character tag is \923\006. For example, the field may be: \923\00663823.



Enable Checksum Transmit

(01h)



Disable Checksum Transmit

(00h)

Transmit File Size

Parameter # B5h

Transmit File Size activates transmission of the file size field. The field character tag is \923\005. For example, the field may be: \923\005179234.




Enable File Size Transmit

(01h)



Disable File Size Transmit

(00h)



Transmit Macro PDF Control Header

Parameter # B7h

Transmit Macro PDF Control Header activates transmission of the control header, which contains the segment index and the file ID. For example, the field may be: \92800000\725\120\343. The five digits after the \928 are the segment index (or block index), and \725\120\343 is the file ID.



Enable Macro PDF Control Header Transmit

(01h)



Disable Macro PDF Control Header Transmit

(00h)

Last Blocker Marker

Parameter # B9h

Enable / Disable Last Block Marker enables marking the last block in the set by the codeword \922.




Enable Last Block Marker

(01h)




Disable Last Block Marker

(00h)




Numeric Bar Codes


For parameters requiring specific numeric values, scan the appropriately numbered bar code(s).




0



1



2



3

Numeric Bar Codes (continued)



4




5



6




7



Numeric Bar Codes (continued)



8




9

Cancel

If you make an error, or wish to change your selection, scan the bar code below.



Cancel

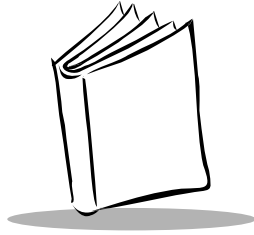

Appendix A

Miscellaneous Code Information

This Appendix provides information on the following:

- *UCC/EAN-128*
- *AIM Code Identifiers*
- Setting Code Lengths
- Setting Prefixes and Suffixes Via Serial Commands
- Character Equivalents.


UCC/EAN-128

UCC/EAN-128 is a convention for printing data fields with standard Code 128 bar code symbols. UCC/EAN-128 symbols are distinguished by a leading FNC 1 character as the first or second character in the symbol. Other FNC 1 characters are used to delineate fields.

When EAN-128 symbols are read, they are transmitted after special formatting strips off the leading FNC 1 character, and replaces other FNC 1 characters with the ASCII 29 GS control character.

When AIM symbology identifiers are transmitted, the modifier character indicates the position of the leading FNC 1 character according to AIM guidelines. For example, **jc1** indicates a UCC/EAN-128 symbol with a leading FNC1 character.

Standard Code 128 bar codes which do not have a leading FNC 1 may still be used, but are not encoded according to the EAN-128 convention. Standard Code 128 and UCC/EAN-128 may be mixed in an application. The SE 2223 autodiscriminates between these symbols, and can enable or disable one or both code types via bar code menus. Table



B-1 indicates the behavior of the SE 2223 in each of the four possible parameter settings.

Table A-1. Reading Standard Code128 & UCC/EAN 128

Standard Code 128	UCC/EAN-128	Effect and Example
Disable	Disable	No Code 128 symbols can be read.
Disable	Enable	Read only symbols with leading FNC 1. Examples: FNC1ABCD ^{FNC1} E are read as ABCD ²⁹ E A ^{FNC1} BCD ^{FNC1} E are read as ABCD ²⁹ E FNC1FNC1ABCD ^{FNC1} E are read as ABCD ²⁹ E ABCD ^{FNC1} E cannot be read ABCDE cannot be read
Enable	Disable	Read only symbols without leading FNC 1. Examples: FNC1ABCD ^{FNC1} E cannot be read A ^{FNC1} BCD ^{FNC1} E cannot be read FNC1FNC1ABCD ^{FNC1} E cannot be read ABCD ^{FNC1} E is read as ABCD ²⁹ E ABCDE is read as ABCDE
Enable	Enable	Read both types of symbols. Examples: FNC1ABCD ^{FNC1} E are read as ABCD ²⁹ E A ^{FNC1} BCD ^{FNC1} E are read as ABCD ²⁹ E FNC1FNC1ABCD ^{FNC1} E are read as ABCD ²⁹ E ABCD ^{FNC1} E is read as ABCD ²⁹ E ABCDE is read as ABCDE


AIM Code Identifiers

Each AIM Code Identifier contains the three-character string **]cm** where:

-] =** Flag Character (ASCII 93)
- c =** Code Character (see Table A-2)
- m =** Modifier Character (see Table A-4)

Table A-2. Code Characters

Code Character	Code Type
A	Code 39, Code 39 Full ASCII
C	Code 128, EAN-128, ISBT 128
E	UPC/EAN
F	Codabar
G	Code 93
H	Code 11
I	Interleaved 2 of 5
L	PDF417, MicroPDF417, MacroPDF417
M	MSI Plessey
S	D2 of 5, IATA 2 of 5
X	Code 39 Trioptic, Bookland EAN, other types not defined by AIM



See Table A-3 for information on RSS and Composite Codes.

Table A-3. Composite Code Data Formats

1-D Component	Data Format	
	Standard Mode	EAN-128 Emulation Mode
EAN-13, UPC-A, UPC-E	1D: JE0 2D: Je0 See note 5	1D: JE0 2D: JC1 before each EAN-128 split transmission See notes 3 -5
EAN-8	1D: JE4 2D: Je0 See note 5	1D: JE4 2D: JC1 before each EAN-128 split transmission See notes 3 -5
RSS-14 RSS Limited	1D: Je0 2D: Je1 See note 2	JC1 before each EAN-128 split transmission See notes 3 -5
EAN-128 RSS Expanded	If the last AI in the EAN-128 is a predefined, fixed length:Je0 Otherwise, Je0 GS See note 2	JC1 before each EAN-128 split transmission See notes 3 and 4
Code 39 (TLC39)	ANSI MH10.8.3M syntax: 06 Format: J L2 []>R _S 06 G _S 6P {1D data}G _S S {2D data}R _S E _T 05 Format: J L2 []>R _S 05 G _S 906P {1D data}G _S 8004 {2D data}R _S E _T See note 6	
Notes: 1. All Function 1 characters in the 1-D and 2-D are sent as G _S ASCII character (29); the first Function 1 in the EAN-128 is not transmitted. 2. In standard mode, data following the Composite Symbol Separator is prefixed with "Je1". 3. In EAN-128 emulation mode, each packet is split on an AI boundary and limited to less than 48 characters. 4. In EAN-128 emulation mode, data is discarded after the first symbol separator or escape mechanism. 5. If the UPC/EAN component has a supplemental , JE1 precedes a 2-digit supplemental and JE2 precedes the 5-digit supplemental. 6. R _S is ASCII character (30) and E _T is ASCII character (4). The transmitted format (05 or 06) is data dependent.		

The modifier character is the sum of the applicable option values based on the following table.

Table A-4. Modifier Characters

Code Type	Option Value	Option
Code 39		
	0	No Check character.
	1	Reader has checked one check character.
	3	Reader has checked and stripped check character.
	4	Reader has performed Full ASCII character conversion.
	5	Reader has performed Full ASCII character conversion and checked one check character.
	7	Reader has performed Full ASCII character conversion and checked and stripped check character.
	Example: A Full ASCII bar code with check character W, A+I+MI+DW , is transmitted as J A7 AimId where 7 = (3+4).	
Trioptic Code 39		
	0	No option specified at this time. Always transmit 0.
	Example: A Trioptic bar code 412356 is transmitted as JX0 412356	
Code 128		
	0	Standard data packet, No Function code 1 in first symbol position.
	1	Function code 1 in first symbol character position.
	2	Function code 1 in second symbol character position.
	Example: A Code (EAN) 128 bar code with Function 1 character in the first position, FNC1 Aim Id is transmitted as J C1 AimId	





Table A-4. Modifier Characters (Continued)

Code Type	Option Value	Option
I 2 of 5		
	0	No check digit processing.
	1	Reader has validated check digit.
	3	Reader has validated and stripped check digit.
	Example: An I 2 of 5 bar code without check digit, 4123, is transmitted as J104123	
Codabar		
	0	Standard Codabar
	1	ABC Codabar
	Example: A standard Codabar bar code, 4123, is transmitted as JF04123	
Code 93		
	0	No options specified at this time. Always transmit 0.
	Example: A Code 93 bar code 012345678905 is transmitted as JG0012345678905	
MSI Plessey		
	0	Mod 10 check digit validated and transmitted.
	1	Mod 10 check digit validated but not transmitted.
	Example: An MSI Plessey bar code 4123, with Mod 10 check digit validated, is transmitted as JM04123	
D 2 of 5		
	0	No options specified at this time. Always transmit 0.
	Example: A D 2 of 5 bar code 4123, is transmitted as JS04123	

Table A-4. Modifier Characters (Continued)

Code Type	Option Value	Option
UPC/EAN		
	0	Standard packet in full EAN country code format, which is 13 digits for UPC-A and UPC-E (not including supplemental data).
	1	Two digit supplement data only.
	2	Five digit supplement data only.
	4	EAN-8 data packet.
	Example: A UPC-A bar code 012345678905 is transmitted as JE00012345678905	
Bookland EAN		
	0	No options specified at this time. Always transmit 0.
	Example: A Bookland EAN bar code 123456789X is transmitted as JX0123456789X	
PDF417, MicroPDF417		
	0	Reader set to conform to protocol defined in 1994 PDF417 symbology specifications. Note: When this option is transmitted, the receiver cannot reliably determine whether ECIs have been invoked or whether data byte 92 _{DEC} has been doubled in transmission.
	1	Reader set to follow the ECI protocol (Extended Channel Interpretation). All data characters 92 _{DEC} are doubled.
	2	Reader set for Basic Channel operation (no escape character transmission protocol). Data characters 92 _{DEC} are not doubled. Note: When decoders are set to this mode, unbuffered Macro symbols and symbols requiring the decoder to convey ECI escape sequences cannot be transmitted.
	3	The bar code contains a UCC/EAN-128 symbol, and the first codeword is 903-907, 912, 914, 915.
	4	The bar code contains a UCC/EAN-128 symbol, and the first codeword is in the range 908-909.
	5	The bar code contains a UCC/EAN-128 symbol, and the first codeword is in the range 910-911.
	Example: A PDF417 bar code ABCD, with no transmission protocol enabled, is transmitted as JL2ABCD .	



According to AIM standards, a UPC with supplemental bar code is transmitted in the following format:

JE0 (UPC chars) (terminator) **JE2** (supplemental) (terminator)

In the SE 2223, however, the format is changed to:

JE0 (UPC chars) **JE2** (supplemental)

Therefore, a UPC with two supplemental characters, 01234567890510, is transmitted to the host as a 21-character string, **JE00012345678905JE110**.

Setting Code Lengths Via Serial Commands

There are two lengths (L1 and L2) for each variable length code type. See the individual code types in *Chapter 8* for the L1 and L2 parameter numbers.

Depending on the selected option, the scanner decodes:

- One discrete length bar code
- Two discrete length bar codes
- Bar codes within a range of lengths
- Any length of bar codes.

Table B-4 lists the requirements for each option.

Table A-5. Setting Variable Code Lengths

Code length option	L1 value	L2 value
One discrete length is decoded	Discrete length to decode	00h
Two discrete lengths are decoded	Higher length value	Lower length value
Lengths within a range are decoded	Lower length value	Higher length value
Any length bar code is decoded	00h	00h

Setting Prefixes and Suffixes Via Serial Commands

To append a prefix and suffixes to the decode data:

1. Set the Scan Data Transmission Format (parameter E2h) to the desired option.
2. Enter the required value(s) for Prefix (68h), Suffix1 (69h) or Suffix2 (6Ah) using the hex values for the desired ASCII value from Table B-5.

Table A-6. Character Equivalents

Scan Value	Hex Value	Full ASCII Code 39 Encode Char.	Keystroke
1000	00h	%U	CTRL 2
1001	01h	\$A	CTRL A
1002	02h	\$B	CTRL B
1003	03h	\$C	CTRL C
1004	04h	\$D	CTRL D
1005	05h	\$E	CTRL E
1006	06h	\$F	CTRL F
1007	07h	\$G	CTRL G
1008	08h	\$H	CTRL H
1009	09h	\$I	CTRL I
1010	0Ah	\$J	CTRL J
1011	0Bh	\$K	CTRL K
1012	0Ch	\$L	CTRL L
1013	0Dh	\$M	CTRL M
1014	0Eh	\$N	CTRL N
1015	0Fh	\$O	CTRL O
1016	10h	\$P	CTRL P
1017	11h	\$Q	CTRL Q




Table A-6. Character Equivalents (Continued)

Scan Value	Hex Value	Full ASCII Code 39 Encode Char.	Keystroke
1018	12h	\$R	CTRL R
1019	13h	\$S	CTRL S
1020	14h	\$T	CTRL T
1021	15h	\$U	CTRL U
1022	16h	\$V	CTRL V
1023	17h	\$W	CTRL W
1024	18h	\$X	CTRL X
1025	19h	\$Y	CTRL Y
1026	1Ah	\$Z	CTRL Z
1027	1Bh	%A	CTRL [
1028	1Ch	%B	CTRL \
1029	1Dh	%C	CTRL]
1030	1Eh	%D	CTRL 6
1031	1Fh	%E	CTRL -
1032	20h	Space	Space
1033	21h	/A	!
1034	22h	/B	'
1035	23h	/C	#
1036	24h	/D	\$
1037	25h	/E	%
1038	26h	/F	&
1039	27h	/G	'
1040	28h	/H	(
1041	29h	/I)
1042	2Ah	/J	*

Table A-6. Character Equivalents (Continued)

Scan Value	Hex Value	Full ASCII Code 39 Encode Char.	Keystroke
1043	2Bh	/K	+
1044	2Ch	/L	,
1045	2Dh	-	-
1046	2Eh	.	.
1047	2Fh	/	/
1048	30h	0	0
1049	31h	1	1
1050	32h	2	2
1051	33h	3	3
1052	34h	4	4
1053	35h	5	5
1054	36h	6	6
1055	37h	7	7
1056	38h	8	8
1057	39h	9	9
1058	3Ah	/Z	:
1059	3Bh	%F	;
1060	3Ch	%G	<
1061	3Dh	%H	=
1062	3Eh	%I	>
1063	3Fh	%J	?
1064	40h	%V	@
1065	41h	A	A
1066	42h	B	B
1067	43h	C	C




Table A-6. Character Equivalents (Continued)

Scan Value	Hex Value	Full ASCII Code 39 Encode Char.	Keystroke
1068	44h	D	D
1069	45h	E	E
1070	46h	F	F
1071	47h	G	G
1072	48h	H	H
1073	49h	I	I
1074	4Ah	J	J
1075	4Bh	K	K
1076	4Ch	L	L
1077	4Dh	M	M
1078	4Eh	N	N
1079	4Fh	O	O
1080	50h	P	P
1081	51h	Q	Q
1082	52h	R	R
1083	53h	S	S
1084	54h	T	T
1085	55h	U	U
1086	56h	V	V
1087	57h	W	W
1088	58h	X	X
1089	59h	Y	Y
1090	5Ah	Z	Z
1091	5Bh	%K	[
1092	5Ch	%L	\

Table A-6. Character Equivalents (Continued)

Scan Value	Hex Value	Full ASCII Code 39 Encode Char.	Keystroke
1093	5Dh	%M]
1094	5Eh	%N	^
1095	5Fh	%O	_
1096	60h	%W	'
1097	61h	+A	a
1098	62h	+B	b
1099	63h	+C	c
1100	64h	+D	d
1101	65h	+E	e
1102	66h	+F	f
1103	67h	+G	g
1104	68h	+H	h
1105	69h	+I	i
1106	6Ah	+J	j
1107	6Bh	+K	k
1108	6Ch	+L	l
1109	6Dh	+M	m
1110	6Eh	+N	n
1111	6Fh	+O	o
1112	70h	+P	p
1113	71h	+Q	q
1114	72h	+R	r
1115	73h	+S	s
1116	74h	+T	t
1117	75h	+U	u




Table A-6. Character Equivalents (Continued)


Scan Value	Hex Value	Full ASCII Code 39 Encode Char.	Keystroke
1118	76h	+V	v
1119	77h	+W	w
1120	78h	+X	x
1121	79h	+Y	y
1122	7Ah	+Z	z
1123	7Bh	%P	{
1124	7Ch	%Q	
1125	7Dh	%R	}
1126	7Eh	%S	~
1127	7Fh		Undefined

Values from 1128 through 1255 (hex values 80h through FFh for SSI) may also be set, but the conversion of these characters to printable characters is not standardized. Therefore, they are not included in the table.




Glossary

Aperture	An opening which limits the amount of light or radiation passing through an optical system.
ASCII	American Standard Code for Information Interchange. A 7 bit-plus-parity code representing 128 letters, numerals, punctuation marks, and control characters. It is a standard data transmission code in the U.S.
Autodiscrimination	The ability of an interface controller to determine the code type of a scanned bar code. After this determination is made, the information content can be decoded.
Bar	The dark element in a printed bar code symbol.
Bar Code Density	The number of characters represented per unit of measurement (e.g., characters per inch).
Bar Height	The dimension of a bar measured perpendicular to the bar width.
Bar Width	Thickness of a bar measured from the edge closest to the symbol start character to the trailing edge of the same bar.
Baud Rate	A measure of the data flow or number of signaling events occurring per second. When one bit is the standard "event," this is a measure of bits per second (bps). For example, a baud rate of 50 means transmission of 50 bits of data per second.
Bit	Binary digit. One bit is the basic unit of binary information. Generally, eight consecutive bits compose one byte of data. The pattern of 0 and 1 values within the byte determines its meaning.




Byte	On an addressable boundary, eight adjacent binary digits (0 and 1) combined in a pattern to represent a specific character or numeric value. Bits are numbered from the right, 0 through 7, with bit 0 the low-order bit. One byte in memory can be used to store one ASCII character.
CDRH	Center for Devices and Radiological Health. A federal agency responsible for regulating laser product safety. This agency specifies various laser operation classes based on power output during operation.
CDRH Class 1	This is the lowest power CDRH laser classification. CDRH Class I devices are safe under reasonably foreseeable conditions of operation. Software and other controls to limit exposure to laser light may be required to achieve CDRH Class I operation. The CDRH time base for Class I devices is 10,000 seconds.
CDRH Class 2	CDRH Class II devices may not emit more than 1 milliwatt average radiant power. For this scan engine, additional software controls are not necessary. Eye protection for CDRH Class II devices is normally afforded by aversion responses, including the blink reflex.
Character	A pattern of bars and spaces which either directly represents data or indicates a control function, such as a number, letter, punctuation mark, or communications control contained in a message.
Character Set	Those characters available for encodation in a particular bar code symbology.
Check Digit	A digit used to verify a correct symbol decode. The scanner inserts the decoded data into an arithmetic formula and checks that the resulting number matches the encoded check digit. Check digits are required for UPC but are optional for other symbologies. Using check digits decreases the chance of substitution errors when a symbol is decoded.
CLSI Editing	An option which inserts a space after the 1st, 5th, and 10th characters of a 14-character Codabar symbol. Length includes start and stop characters.
Codabar	A discrete self-checking code with a character set consisting of digits 0 to 9 and six additional characters: (- \$: / , +).
Code 128	A high density symbology which allows the controller to encode all 128 ASCII characters without adding extra symbol elements.
Code 3 of 9 (Code 39)	A versatile and widely used alphanumeric bar code symbology with a set of 43 character types, including all uppercase letters, numerals from 0 to 9, and 7 special characters (- . / + % \$ and space). The code name is derived from the fact that 3 of 9 elements representing a character are wide, while the remaining 6 are narrow.

Code 93	An industrial symbology compatible with Code 39 but offering a full character ASCII set and a higher coding density than Code 39.
Code Length	Number of data characters in a bar code between the start and stop characters, not including those characters.
Continuous Code	A bar code or symbol in which all spaces within the symbol are parts of characters. There are no intercharacter gaps in a continuous code. The absence of gaps allows for greater information density.
CTS	Clear to send.
Dead Zone	An area within a scanner's field of view, in which specular reflection may prevent a successful decode.
Decode	To recognize a bar code symbology (e.g., UPC/EAN) and then analyze the content of the specific bar code scanned.
Decode Algorithm	A decoding scheme that converts pulse widths into data representation of the letters or numbers encoded within a bar code symbol.
Depth of Field	The range between minimum and maximum distances at which a scanner can read a symbol with a certain minimum element width.
Digitized Bar Pattern (DBP)	A digital representation of a decoded bar code.
Discrete 2 of 5	A binary bar code symbology representing each character by a group of five bars, two of which are wide. The location of wide bars in the group determines which character is encoded; spaces are insignificant. Only numeric characters (0 to 9) and START/STOP characters may be encoded.
Discrete Code	A bar code or symbol in which the spaces between characters (intercharacter gaps) are not part of the code.
EAN	European Article Number. This European/International version of the UPC provides its own coding format and symbology standards. Element dimensions are specified metrically. EAN is used primarily in retail.
Element	Generic term for a bar or space.
Encoded Area	Total linear dimension occupied by all characters of a code pattern, including start/stop characters and data.
Host Computer	A computer that serves other terminals in a network, providing such services as computation, database access, supervisory programs, and network control.




IEC	International Electrotechnical Commission. This international agency regulates laser safety by specifying various laser operation classes based on power output during operation.
IEC (825) Class 1	This is the lowest power IEC laser classification. IEC Class I devices are safe under reasonably foreseeable conditions of operation. Software and other controls to limit exposure to laser light may be required to achieve IEC Class 1 operation. The IEC time base for Class 1 devices is 100 seconds if intentional viewing of laser light is not required in the design or function of the device. The IEC time base for Class 1 devices is 30,000 seconds where intentional viewing of laser light is inherent in the design or function of the device.
IEC (825) Class 2	IEC Class 2 devices may not emit more than 1 milliwatt average radiant power. For this scan engine, additional software controls are not necessary. Eye protection for IEC Class 2 devices is normally afforded by aversion responses, including the blink reflex.
Intercharacter Gap	The space between two adjacent bar code characters in a discrete code.
Interleaved Bar Code	A bar code in which characters are paired together, using bars to represent the first character and the intervening spaces to represent the second.
Interleaved 2 of 5	A binary bar code symbology representing character pairs in groups of five bars and five interleaved spaces. Interleaving provides for greater information density. The location of wide elements (bar/spaces) within each group determines which characters are encoded. This continuous code type uses no intercharacter spaces. Only numeric (0 to 9) and START/STOP characters may be encoded.
LASER - Light Amplification by Stimulated Emission of Radiation	The laser is an intense light source. Light from a laser is all the same frequency, unlike the output of an incandescent bulb. Laser light is typically coherent and has a high energy density.
Laser Diode	A gallium-arsenide semiconductor type of laser connected to a power source to generate a laser beam. This laser type is a compact source of coherent light.
LED Indicator	A semiconductor diode (LED - Light Emitting Diode) used as an indicator, often in digital displays. The semiconductor uses applied voltage to produce light of a certain frequency determined by the semiconductor's particular chemical composition.
MIL	1 mil = 1 thousandth of an inch.

Misread (Misdecode)	A condition which occurs when the data output of a reader or interface controller does not agree with the data encoded within a bar code symbol.
MSI Plessey	A numeric-only bar code type. It can accept a variable number of digits up to 13. MSI Plessey consists of four bars and four adjacent spaces. Each bar\space pair consists of one information bit. A zero bit consists of a narrow bar followed by a wide space, while one bit consist of a wide bar followed by a narrow bar. The zero bit is one unit bar followed by a two-unit space and the one bit is a two-unit bar followed by a one unit space. The primary application for the MSI Plessey code is marking of retail shelves and subsequent scanning with portable devices for inventory purposes.
Nominal	The exact (or ideal) intended value for a specified parameter. Tolerances are specified as positive and negative deviations from this value.
Nominal Size	Standard size for a bar code symbol. Most UPC/EAN codes can be used over a range of magnifications (e.g., from 0.80 to 2.00 of nominal).
NOTIS Editing	An option that strips the start and stop characters from a decoded Codabar symbol.
Parameter	A variable that can have different values assigned to it.
Percent Decode	The average probability that a single scan of a bar code would result in a successful decode. In a well-designed bar code scanning system, that probability should approach near 100%.
Print Contrast Signal (PCS)	Measurement of the contrast (brightness difference) between the bars and spaces of a symbol. A minimum PCS value is needed for a bar code symbol to be scannable. $PCS = (R_L - R_D) / R_L$, where R_L is the reflectance factor of the background and R_D the reflectance factor of the dark bars.
Programming Mode	The state in which a scanner is configured for parameter values. See <i>Scanning Mode</i> .
Quiet Zone	A clear space, containing no dark marks, which precedes the start character of a bar code symbol and follows the stop character.
Random Access Memory (RAM)	Memory devices where any location in memory can be accessed as quickly as any other location.
Reflectance	Amount of light returned from an illuminated surface.
Resolution	The narrowest element dimension which can be distinguished by a particular reading device or printed with a particular device or method.
RTS	Request to send.




RxD	Received data.
Scan Area	Area intended to contain a symbol.
Scanner	<p>An electronic device used to scan bar code symbols and produce a digitized pattern that corresponds to the bars and spaces of the symbol. Its three main components are:</p> <ol style="list-style-type: none">1. Light source (laser or photoelectric cell) - illuminates a bar code.2. Photodetector - registers the difference in reflected light (more light reflected from spaces).3. Signal conditioning circuit - transforms optical detector output into a digitized bar pattern.
Scanning Mode	The scanner is energized, programmed, and ready to read a bar code.
Scanning Sequence	A method of programming or configuring parameters for a bar code reading system by scanning bar code menus.
Self-Checking Code	A symbology that uses a checking algorithm to detect encoding errors within the characters of a bar code symbol.
Space	The lighter element of a bar code formed by the background between bars.
Specular Reflection	The mirror-like reflection of light from a surface which can “blind” a scanner.
Start/Stop Character	A pattern of bars and spaces that provides the scanner with start and stop reading instructions and scanning direction. The start and stop characters are normally to the left and right margins of a horizontal code.
Substrate	A foundation material on which a substance or image is placed.
Symbol	A scannable unit that encodes data within the conventions of a certain symbology, usually including start/stop characters, quiet zones, data characters, and check characters.
Symbol Aspect Ratio	The ratio of symbol height to symbol width.
Symbol Height	The distance between the outside edges of the quiet zones of the first row and the last row.
Symbol Length	Length of symbol measured from the beginning of the quiet zone (margin) adjacent to the start character to the end of the quiet zone (margin) adjacent to a stop character.
Symbology	The structural rules and conventions for representing data within a particular bar code type (e.g. UPC/EAN, Code 39).

Tolerance	Allowable deviation from the nominal bar or space width.
TxD	Transmitted data.
UPC	Universal Product Code. A relatively complex numeric symbology. Each character consists of two bars and two spaces, each of which can be any of four widths. The standard symbology for retail food packages in the United States.
Visible Laser Diode (VLD)	A solid state device which produces visible laser light. Laser light emitted from the diode has a wavelength of 670 to 680 nanometers.



SE 2223/3223 Scan Engine Integration Guide

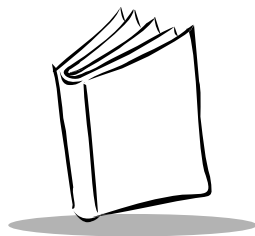

Index

A

AC electrical characteristics 8-2
accessories 2-13
acrylic 2-7
aiming modes 9-17
analog front end 1-3
application notes 8-1

B

bar codes 9-10
 serial parameters
 software handshaking 9-111
beeper
 definitions 1-10
 macro PDF definitions 1-10
beeper definitions 1-10
bullets xii

C

cable
 flex 2-20
codewords 9-119
 transmit unknown 9-121
components 1-3
 analog front end 1-3
 digitizer 1-3
 SCDS 1-3
 single chip decoding system 1-3
 VLD driver 1-3
conventions
 notational xii

D


decode zone 3-9, 4-9, 5-8
 1-D 3-4, 4-4, 5-4
 distances 2-11, 2-12, 3-6, 4-6, 5-5, 5-6
 PDF 3-5, 4-5, 5-5
default table 9-3
digitizer 1-3
dimensions 3-3, 4-3, 5-3

E

ECI
 decoder 9-124
 delete character set ECIs 9-123
electrical interface 1-7, 2-3
environment 2-6
escape characters 9-122
ESD 2-6
exit window
 coatings 2-8
 manufacturers 2-9
 material 2-7
 acrylic 2-7
 CR-39 2-8
 positioning 2-7
 properties 2-8
 scratching 2-7
exit window manufacturers 2-9
exit window specifications 2-18

F

flex cable 2-20



G

grounding 2-6

I

information, service xii

installation 2-12

 mounting 2-10

interface

 electrical 2-3

 mechanical 2-1

 optical 2-7

L

laser classification 3-3, 4-3, 5-3

M

macro PDF

 beeper definitions 1-10

 delete character set ECIs 9-123

 ECI decoder 9-124

 escape characters 9-122

 last blocker marker 9-133

 transmit addressee 9-129

 transmit block count 9-126

 transmit checksum 9-130

 transmit file name 9-125

 transmit filesize 9-131

 transmit macro PDF control header 9-132

 transmit sender 9-128

 transmit symbols in codeword format .. 9-119

 transmit time stamp 9-127

 transmit unknown codewords 9-121

 transmit user-selected fields 9-125

mechanical drawing 2-2

mechanical interface 2-1

mounting 2-10

mounting holes 2-3

N

notational conventions xii

O

operational parameters 9-1

optical 2-7

optical path 2-16, 2-17

overview 1-1

P

parameters, operational 9-1

power 2-6

programming bar codes

 aiming mode 9-17

 beep after good decode 9-21

 beeper tone 9-11

 bi-directional redundancy 9-26

 cancel 9-136

 Codabar 9-78

 CLSI editing 9-81

 enable/disable 9-78

 length 9-79

 NOTIS editing 9-82

 Code 128 9-50

 decode performance 9-53

 lengths 9-52

 UCC/EAN-128 9-51

 Code 128 emulation 9-91

 Code 39 9-55

 check digit verification 9-61

 Code 39 full ASCII 9-63

 decode performance 9-64

 lengths 9-59

 transmit check digit 9-62

 Trioptic Code 39 9-56

 Code 93

 lengths 9-67

 composite CC-A/B 9-95

 composite CC-C 9-95

 delete character set ECIs 9-123

 Discrete 2 of 5

 lengths 9-76


 ECI decoder 9-124

 escape characters 9-122

 event reporting 9-115–9-118

 boot up event 9-117

- decode event 9-116
 - parameter event 9-118
 - Interleaved 2 of 5 9-69
 - check digit verification 9-72
 - convert I 2 of 5 to EAN-13 9-74
 - lengths 9-70
 - transmit check digit 9-73
 - ISBT 128
 - enable/disable 9-52
 - laser on time 9-13
 - last blocker marker 9-133
 - LED mode 9-12
 - linear code type security 9-24–9-25
 - linear UPC/EAN decode 9-47
 - MicroPDF417 9-90
 - MSI plessey 9-83
 - check digit algorithm 9-88
 - check digits 9-86
 - lengths 9-84
 - transmit check digit 9-87
 - numeric bar codes 9-134–9-136
 - PDF417 9-89
 - power mode 9-14
 - prefix/suffix values 9-101
 - programmable raster size/expansion 9-18
 - RSS-14 9-92
 - RSS-Limited 9-94
 - scan data transmission format 9-103
 - scanning mode 9-16
 - serial parameters
 - baud rate 9-105
 - check parity 9-110
 - data packet format 9-112
 - host serial response time-out 9-114
 - intercharacter delay 9-114
 - parity 9-107
 - stop bit select 9-113
 - set defaults 9-10
 - SSI options 9-105
 - time delay to low power 9-19
 - timeout between decodes 9-20
 - transmit addressee 9-129
 - transmit block count 9-126
 - transmit checksum 9-130
 - transmit code ID character 9-98
 - transmit file name 9-125
 - transmit filesize 9-131
 - transmit macro PDF control header 9-132
 - transmit macro PDF user-selected fields 9-125
 - transmit no read message 9-22, 9-23
 - transmit sender 9-128
 - transmit symbols in codeword format 9-119
 - transmit time stamp 9-127
 - transmit unknown codewords 9-121
 - trigger modes 9-15
 - UPC composite mode 9-49
 - UPC half block stitching 9-48
 - UPC/EAN 9-27
 - bookland EAN 9-32
 - convert UPC-E to UPC-A 9-42
 - convert UPC-E1 to UPC-A 9-43
 - decode supplementals 9-33
 - EAN zero extend 9-44
 - EAN-13 9-31
 - EAN-8 9-30
 - EAN-8 to EAN-13 type 9-45
 - security level 9-45
 - supplemental redundancy 9-35
 - supplementals 9-34
 - UPC-A 9-27
 - UPC-A check digit 9-36
 - UPC-A preamble 9-39
 - UPC-E 9-28
 - UPC-E check digit 9-37
 - UPC-E preamble 9-40
 - UPC-E1 9-29
 - UPC-E1 check digit 9-38
 - UPC-E1 preamble 9-41
- R**
- regulatory
 - laser classification 3-3, 4-3, 5-3
- S**
- scan pattern control 2-6



scan patterns	
cyclone omnidirectional	1-9
raster	1-7
scanning	
acceptance criteria	2-20
scanning modes	9-16
scanning specifications	3-4, 4-4, 5-4
decode zone	3-4, 4-4, 5-4
SCDS	1-3
service information	xii
single chip decoding system	1-3
specifications	
decode distances	2-11, 2-12, 3-6, 4-6, 5-5, 5-6
decode zone	3-5, 3-9, 4-5, 4-9, 5-5, 5-8
dimensions	3-3, 4-3, 5-3
scanning	3-4, 4-4, 5-4
dead zone	3-8, 4-8, 5-7
decode distances	2-11, 2-12, 3-6, 4-6, 5-5, 5-6
decode zone	3-4, 3-5, 3-9, 4-4, 4-5, 4-9, 5-4, 5-5, 5-8
pitch/skew	3-8, 4-8, 5-7
technical	3-1, 4-1, 5-1
specular dead zone	3-8, 4-8, 5-7
symbol support center	xiii

T

technical specifications	3-1, 4-1, 5-1
test procedure	2-20
text fixture	2-20
theory of operation	1-2
beeper and decode LED	1-6
decoder	1-5
power management	1-5
serial I/O	1-6
timing characteristics	8-2
timing waveforms	8-4

V

VLD driver	1-3
------------	-----

W

window	2-7
coatings	2-8
manufacturers	2-9
material	2-7
CR-39	2-8
properties	2-8
scratching	2-7
specifications	2-18

Tell Us What You Think...

We'd like to know what you think about this Manual. Please take a moment to fill out this questionnaire and fax this form to: (631) 738-3318, or mail to:

Symbol Technologies, Inc.
One Symbol Plaza M/S B-4
Holtsville, NY 11742-1300
Attention: Technical Publications Manager

IMPORTANT: If you need product support, please call the appropriate customer support number provided. Unfortunately, we cannot provide customer support at the fax number above.

User's Manual Title: _____
(please include revision level)

How familiar were you with this product before using this manual?

☐ Very familiar ☐ Slightly familiar ☐ Not at all familiar

Did this manual meet your needs? If not, please explain.

What topics need to be added to the index, if applicable?

What topics do you feel need to be better discussed? Please be specific.

What can we do to further improve our manuals?

SE 2223/3223 Integration Guide



70-36636-02
Revision A — January 2002